


KW Trams

KW 002c Leeds ex Liv Open Top


Parts

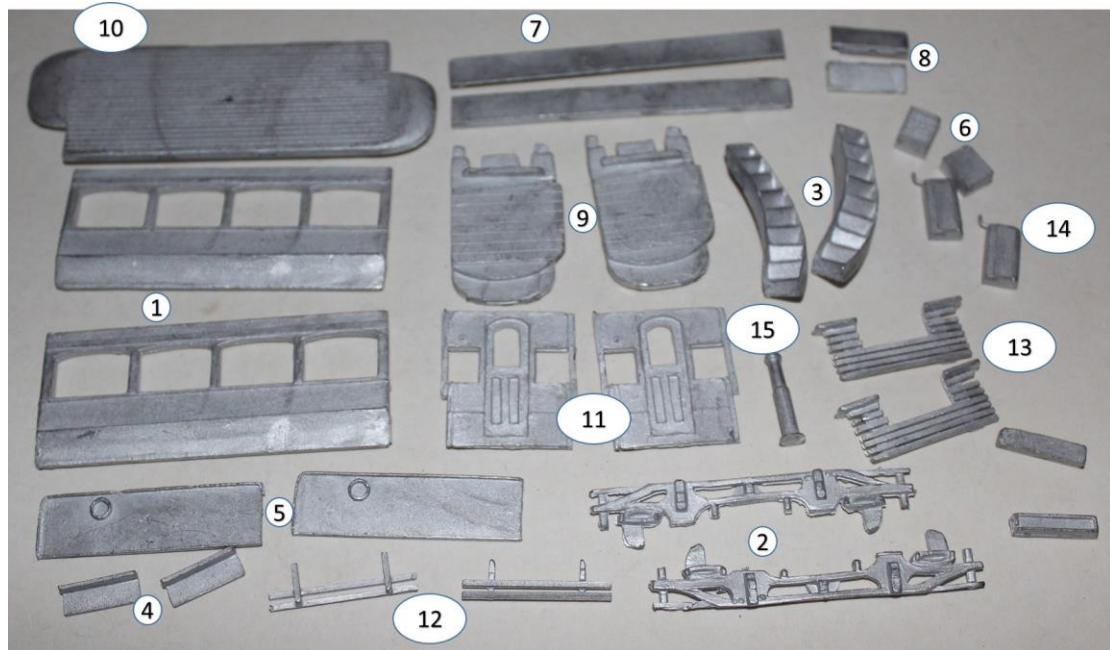


1.	Tram side 4 window	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Step	x2
5.	Dash panel with headlamp	x2
6.	Resistance box	x2
7.	Upper decency panel sides	x2
8.	Upper decency panel ends	x2
9.	Platform, extended	x2
10.	Upper floor	x1
11.	Lower deck bulkhead	x2
12.	Life guard	x2
13.	Life tray	x2
14.	Controller	x2
15.	Trolley mast	x1

Build Steps


1. Fix truck sides centrally to sides, then fix bulk heads to sides squarely and marry all subassemblies to produce a box effect

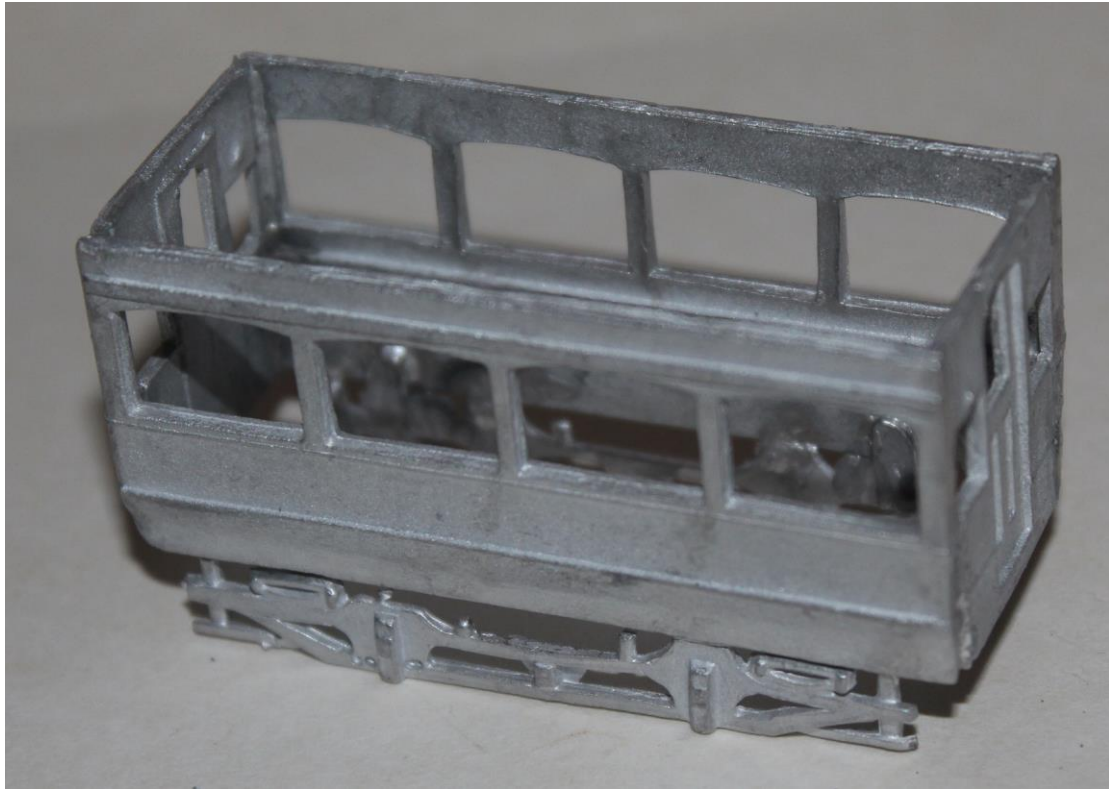

2. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
3. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform, leaving a gap for the gate.

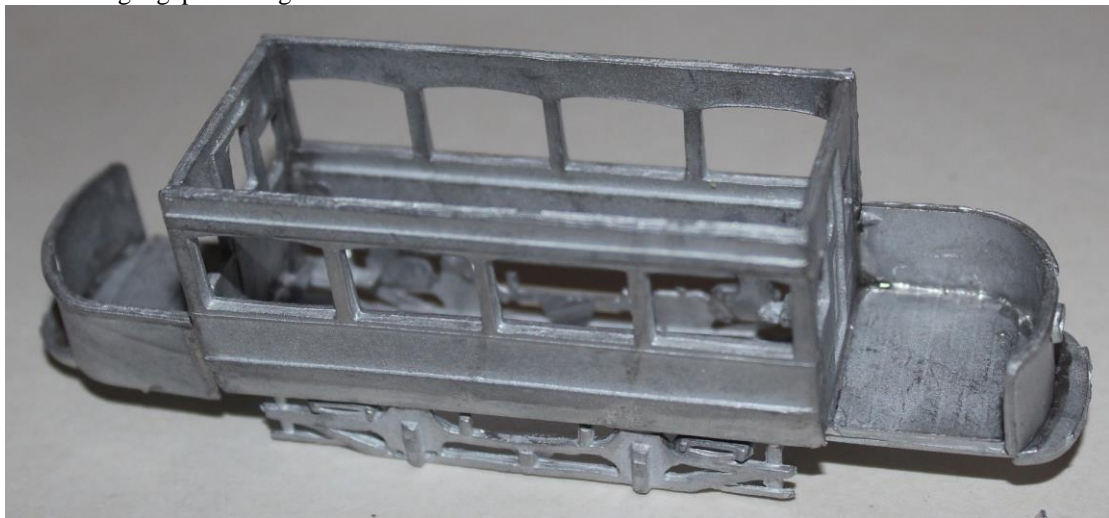

4. Fix the ceiling/upper deck floor piece
5. Attach upper deck sides and ends to the floor.

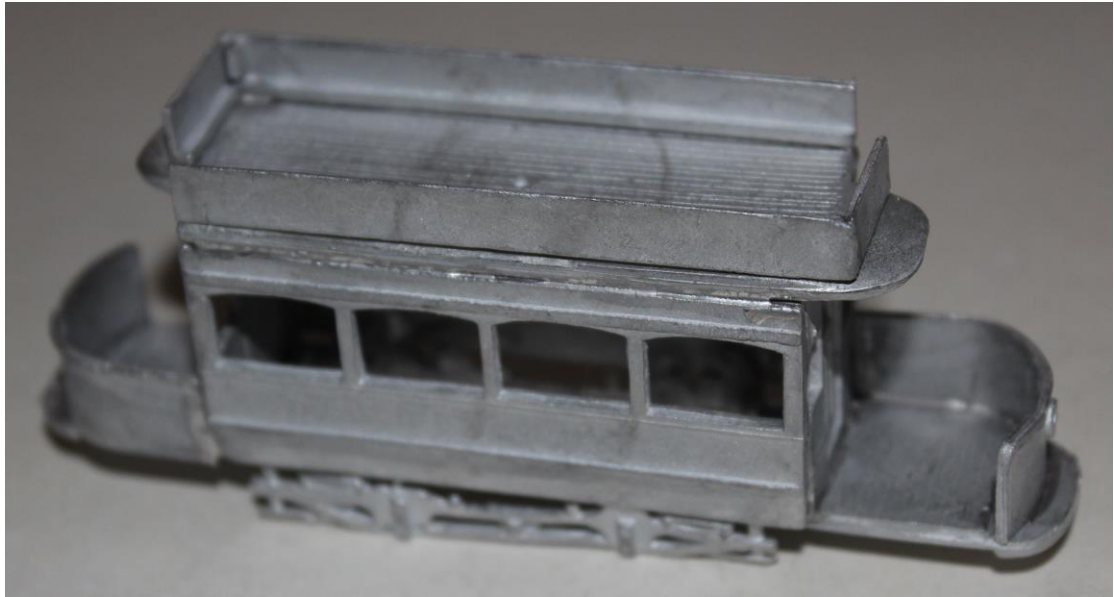

6. Fit the stairs
7. Turn model over and fix the under-gear ie life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.
8. Fit the trolley mast and make up a trolley pole from wire

