


KW Trams

KW 0021 Leeds Snowplough

Parts

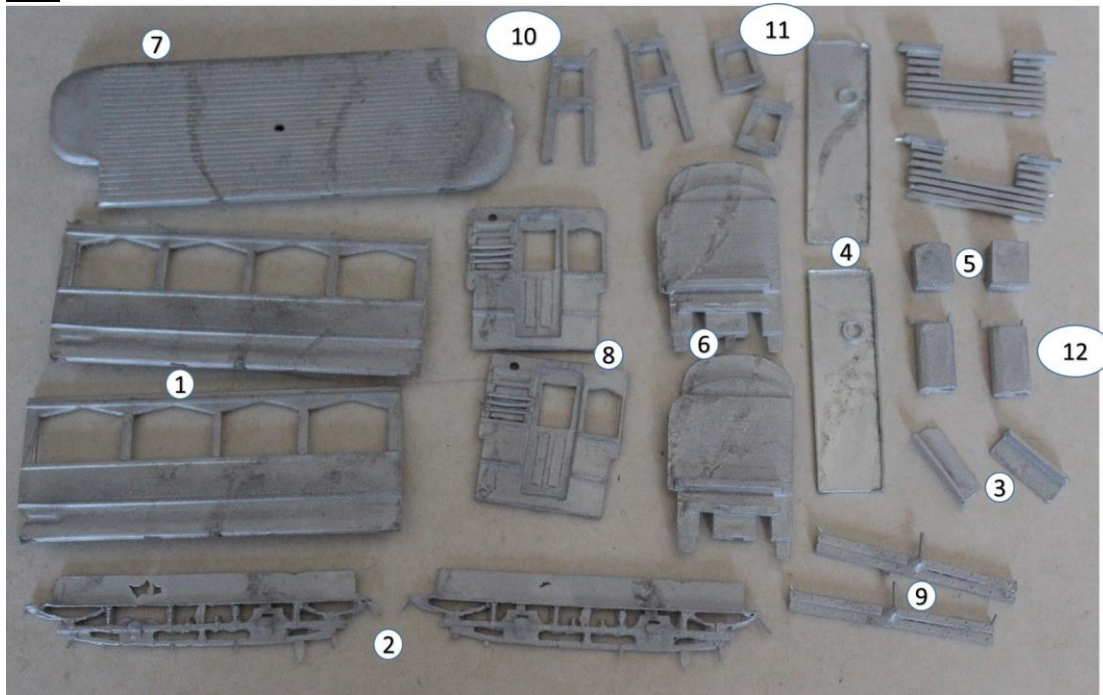


- | | |
|-----------------------------|----|
| 1. Tram side 4 window | x2 |
| 2. Truck side | x2 |
| 3. Step | x2 |
| 4. Dash panel with headlamp | x2 |
| 5. Resistance box | x2 |
| 6. Platform, short | x2 |
| 7. Upper floor | x1 |
| 8. Lower deck bulkhead | x2 |
| 9. Snow plough | x2 |
| 10. Tower ends | x2 |
| 11. Tower sides | x2 |
| 12. Controller | x2 |
| 13. Roof catwalk | x1 |

Build Steps

1. Fix bulk heads to sides squarely and marry all subassemblies to produce a box effect



2. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the inner lip is within the body and not on the platform.
3. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.

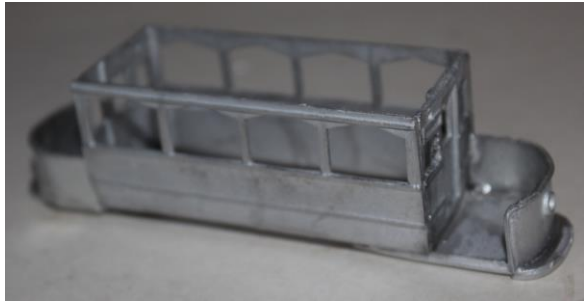

4. Fix the ceiling/upper deck floor piece



5. Turn model over and attach truck sides to body sides ensuring exact centrality

6. Fit the steps.

7. Fit the snowploughs.



8. Fix the roof catwalk to the centre of the roof, then fit the tower sides and ends.

