


KW Trams

KW 002t Poole open top cars


Parts

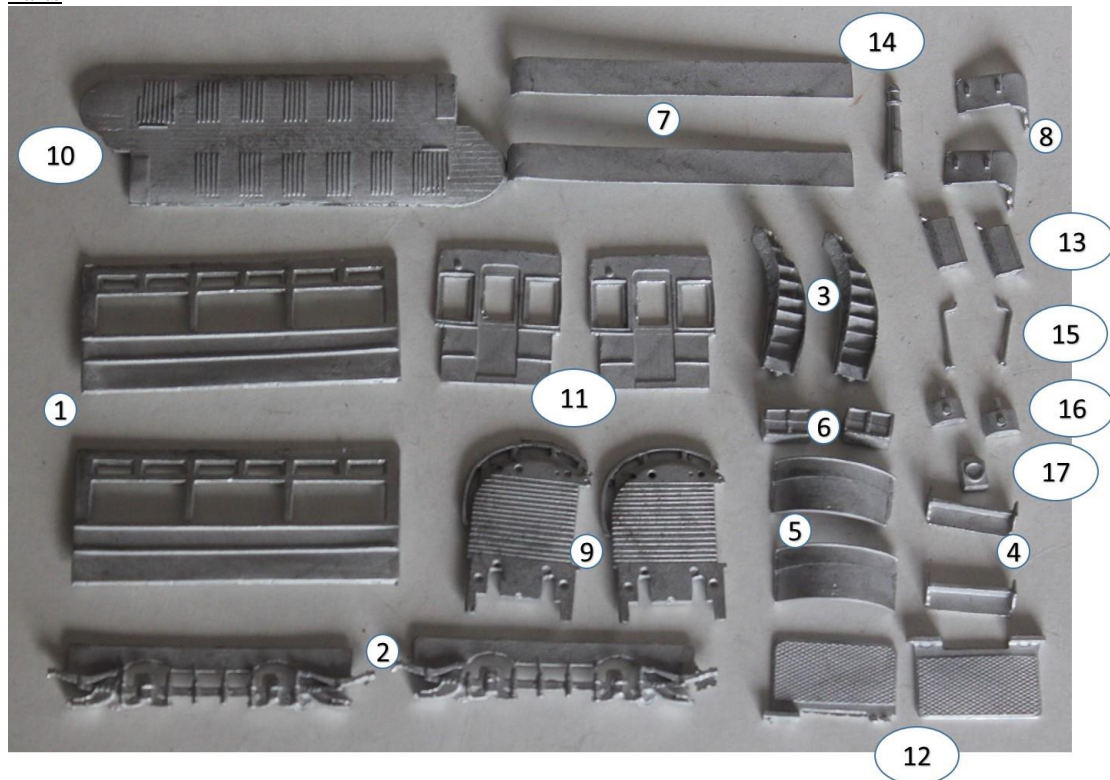


1. Tram side 3 window	x2
2. Truck side	x2
3. Stairs	x2
4. Step	x2
5. Dash	x2
6. Resistance box	x2
7. Upper decency panel sides	x2
8. Upper decency panel ends	x2
9. Platform	x2
10. Upper floor	x1
11. Lower deck bulkhead	x2
12. Life tray, mesh	x2
13. Controller	x2
14. Trolley mast	x1
15. Handbrake	x2
16. Bulkhead light	x2
17. Oil lamp	x1

Build Steps

1. Attach truck sides to body sides ensuring exact centrality.

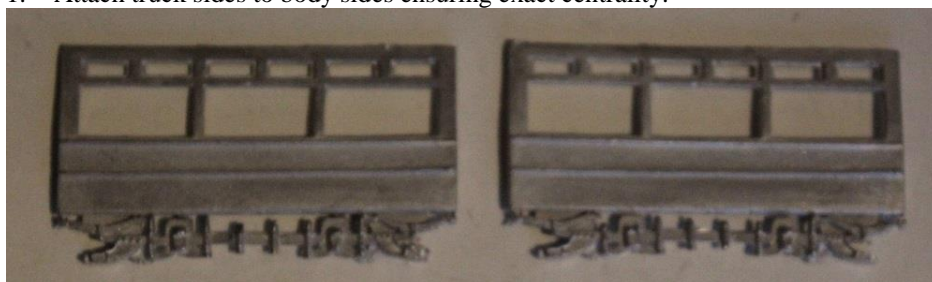


2. Fix the bulkhead lamps to the top of the offside windows.

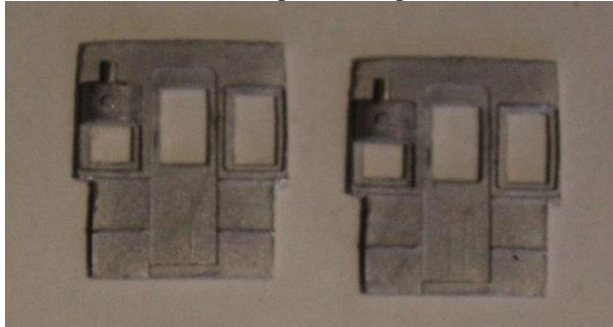


3. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.



4. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
5. Fit the resistance box in the corner of the platform.
6. Fit the dash panels to butt up to the resistance box and fit to platform.

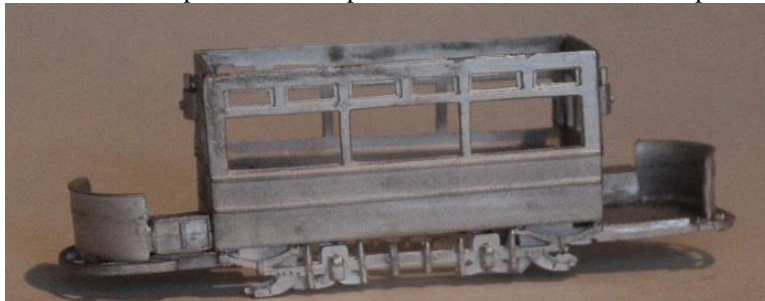


7. Fix the ceiling/upper deck floor

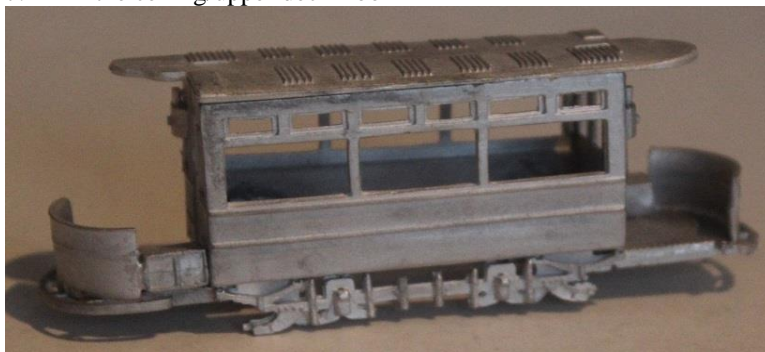

8. Attach upper deck sides and ends to the floor.



9. Turn model over and fit the steps and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

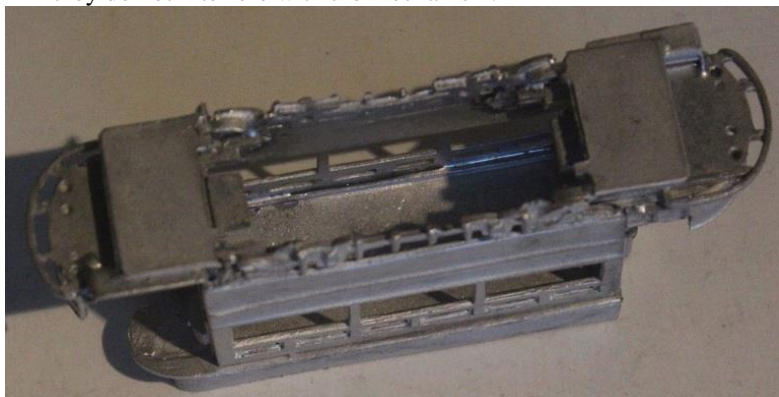

10. Fit the stairs
11. Fit the trolley mast.

