


KW Trams

KW 007f Airdrie balcony top car.


Parts

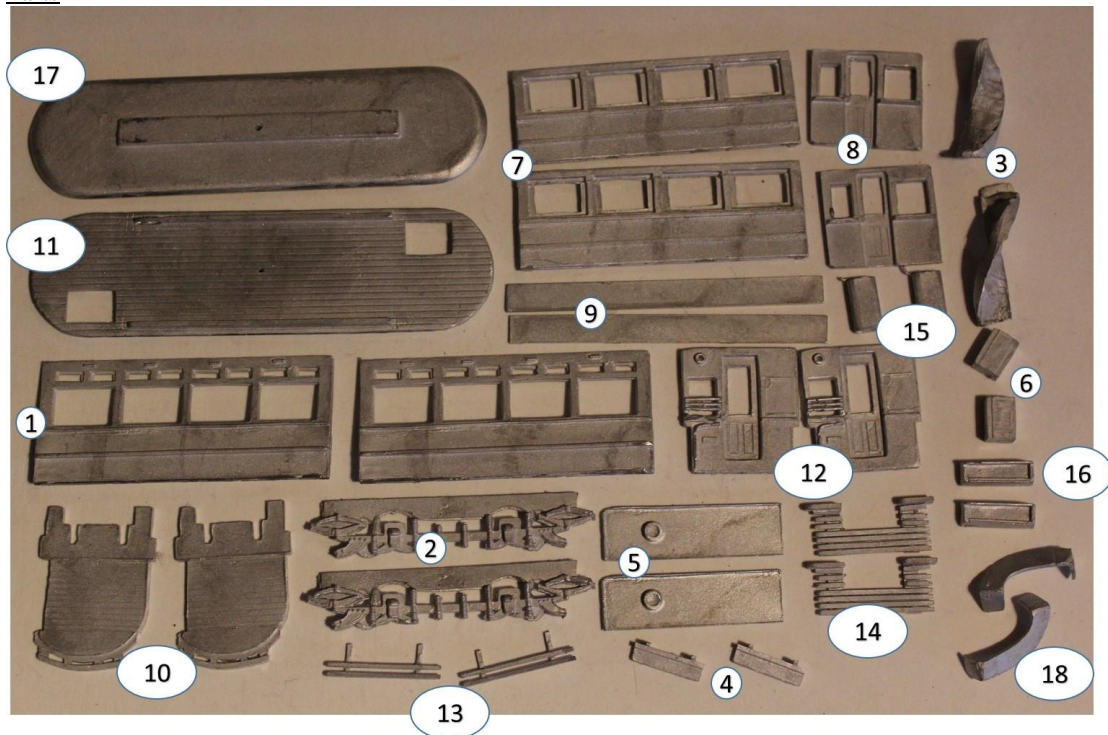


1.	Tram side 4 window	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Step	x2
5.	Dash panel	x2
6.	Resistance box	x2
7.	4 window upper sides	x2
8.	Upper bulkheads	x2
9.	Balcony ends	x2
10.	Platform	x2
11.	Upper floor	x1
12.	Lower deck bulkhead	x2
13.	Life guard	x2
14.	Life tray	x2
15.	Controller	x2
16.	Destination box	x2
17.	Roof	x1
18.	Balcony seats	x2

Build Steps


1. Attach truck sides to body sides ensuring exact centrality.
2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

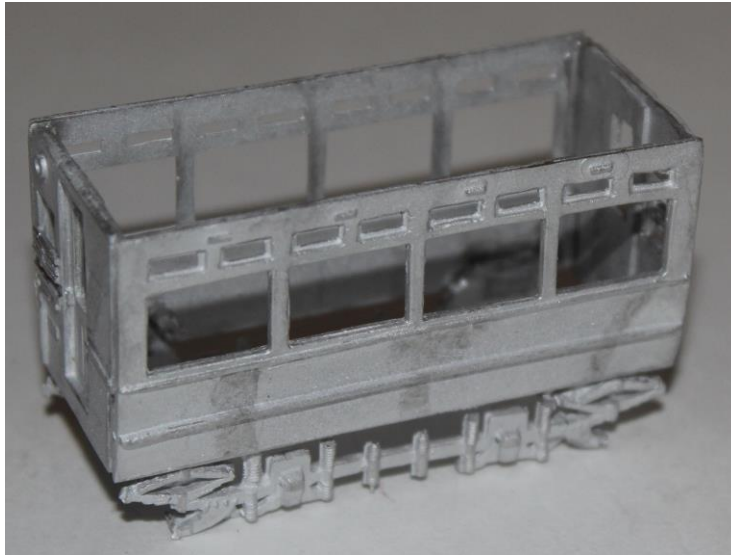

3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
4. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.

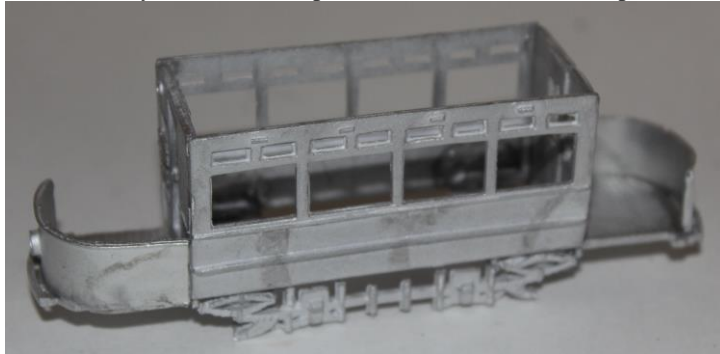

5. Fix the ceiling/upper deck floor piece

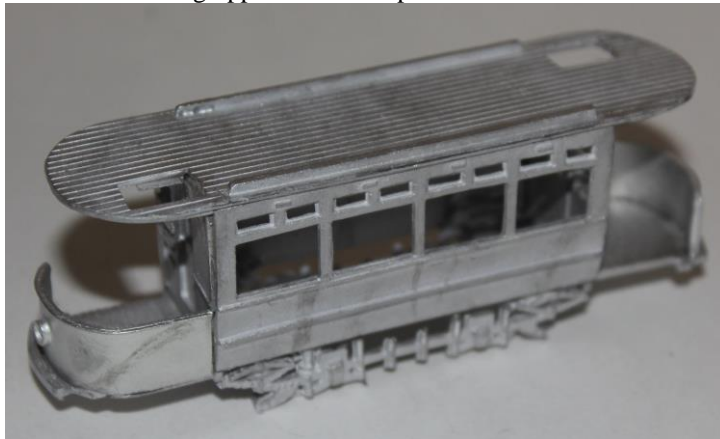


6. Fix pairs of upper bulkheads and upper sides, then place on the kit before joining together to ensure that they fit.



7. Carefully bend the balcony ends and trim to fit.



8. Turn model over and fit the steps, then fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

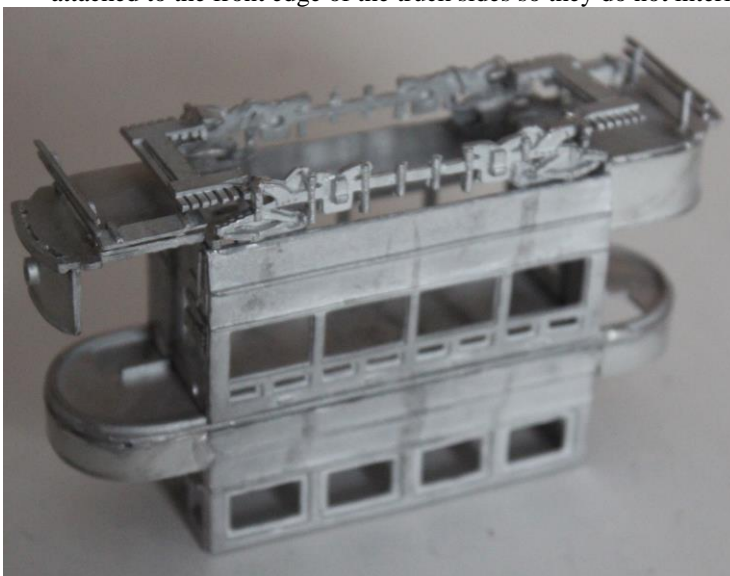

9. Fit the stairs

