


## KW Trams

### **KW 008 Brush Works car.**

#### Parts

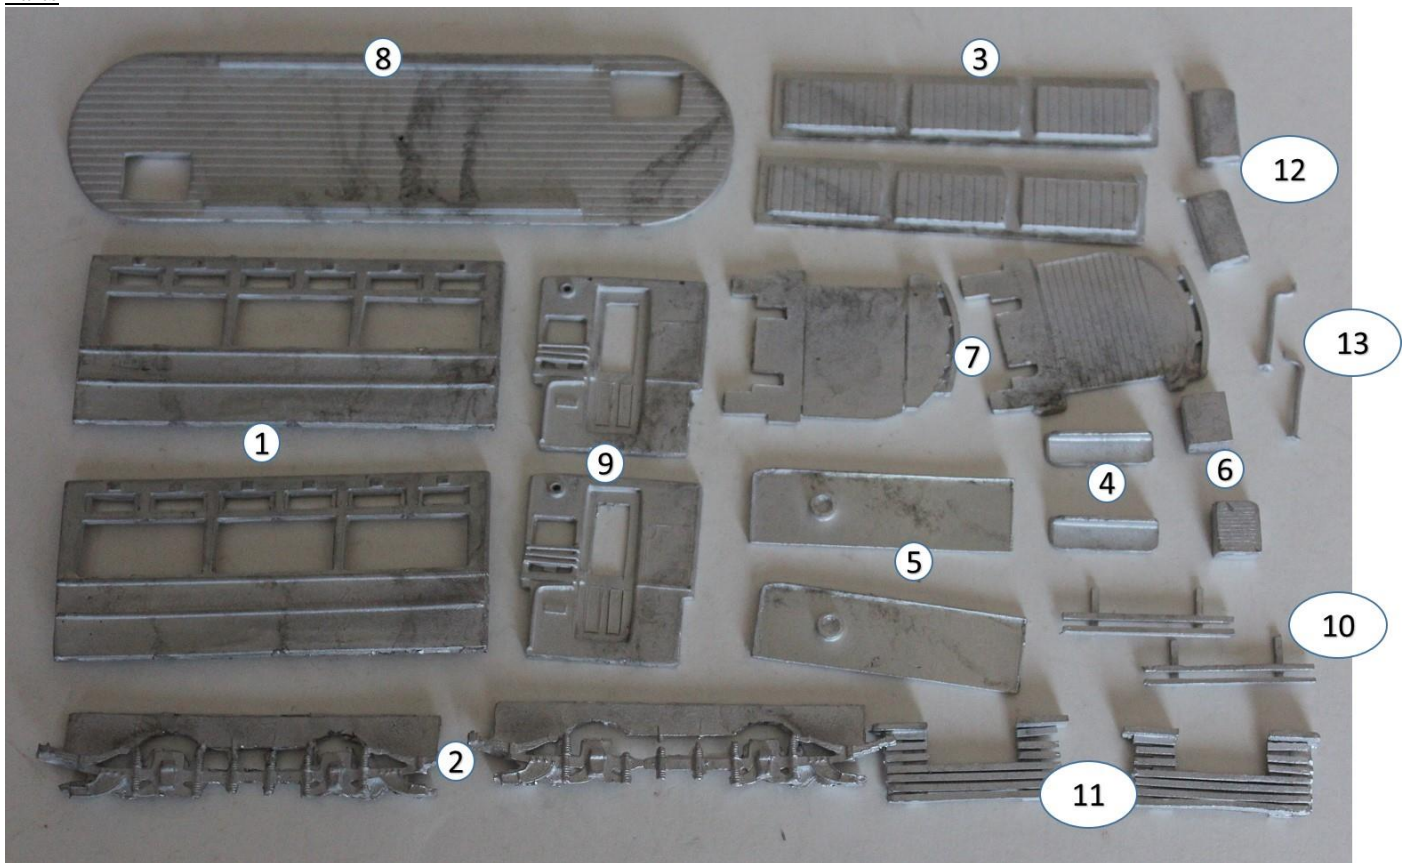

- |                        |    |
|------------------------|----|
| 1. Tram side 3 window  | x2 |
| 2. Truck side          | x2 |
| 3. Window boards       | x2 |
| 4. Step                | x2 |
| 5. Dash panel          | x2 |
| 6. Resistance box      | x2 |
| 7. Platform            | x2 |
| 8. Upper floor         | x1 |
| 9. Lower deck bulkhead | x2 |
| 10. Life guard         | x2 |
| 11. Life tray          | x2 |
| 12. Controller         | x2 |
| 13. Handbrake          | x2 |
| 14. Trolley mast       | x1 |

#### Build Steps

1. Attach truck sides to body sides ensuring exact centrality.
2. Attach boards to windows.




3. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.



4. With model inverted, attach platforms to bottom edges of bulkheads.
5. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.



6. Turn model over and fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

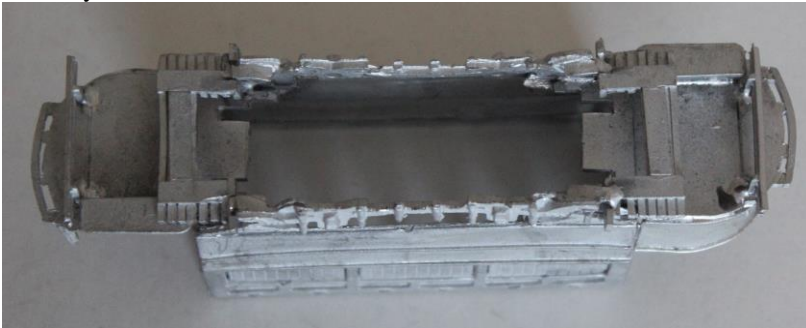

7. Fix the ceiling/upper deck floor piece
8. Fit the trolley mast and make up a trolley pole from wire

