


KW Trams

KW 00M1 Liverpool Bellamy roof car


Parts

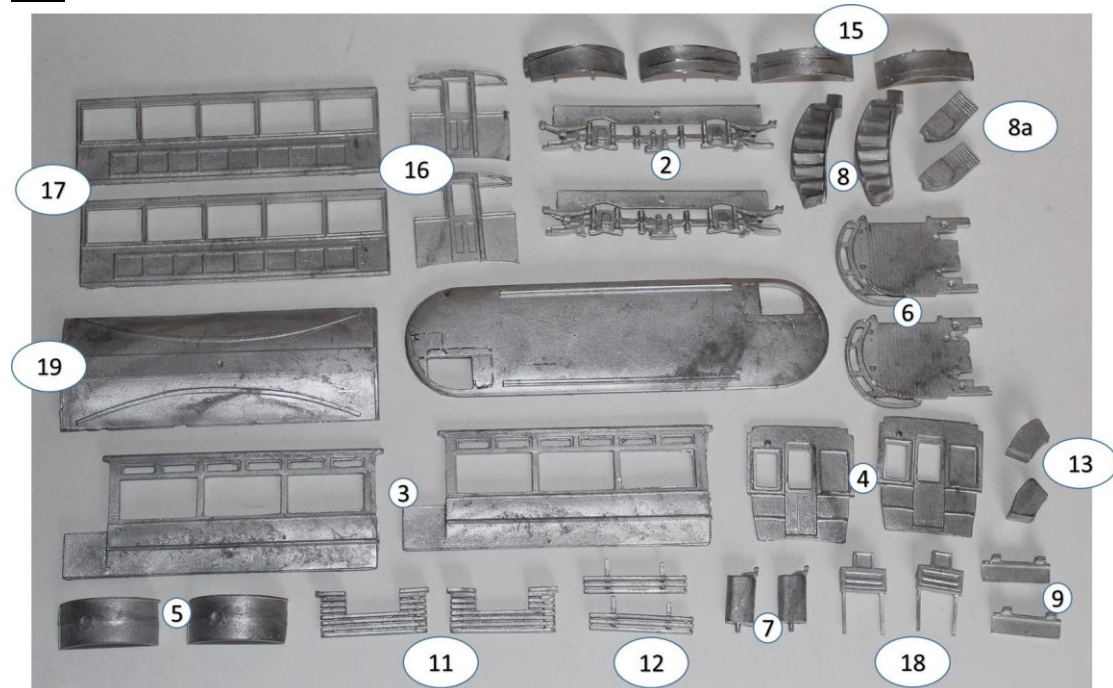

1. Motor (not included)
2. Truck sides x2
3. Lower side x2
4. Lower bulkhead x2
5. Dash panel x2
6. Platform x2
7. Controller x2
8. Stairs & stair base x2
9. Step x2
- 10.
11. Life tray x2
12. Life guard x2
13. Balcony seat x2
14. Balcony mesh (not included)
15. Balcony end x4
16. Upper bulkhead x2
17. Upper side x2
18. Destination box x2
19. Roof x1
20. Trolley pole (not included)

Build Steps


1. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

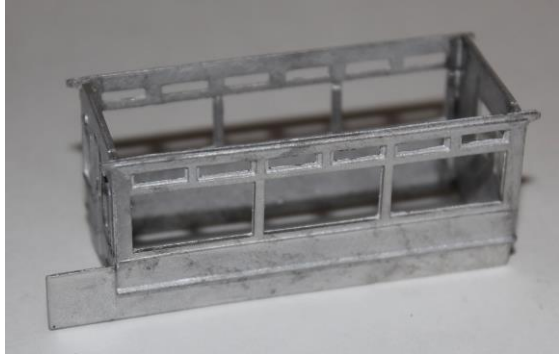

2. Fit the ceiling/upper deck floor to the body.




3. Fix truck sides to saloon sides.

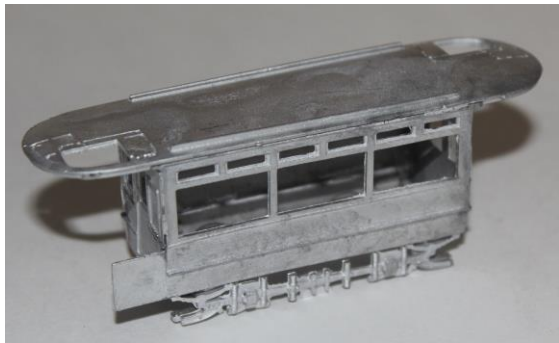


4. With model inverted, attach platforms to bottom edges of bulkheads; with the bulkhead fitting into the slot in the platform and between the truck sides.


5. Fit the dash panels to the platform.

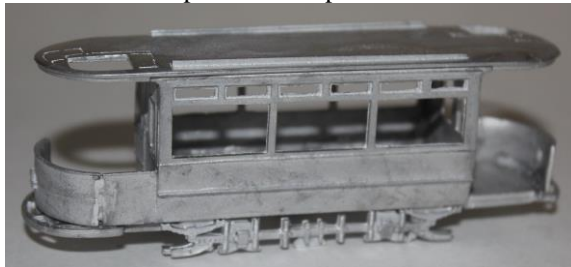


6. Fit the stairs (or leave until later if wishing to paint first).

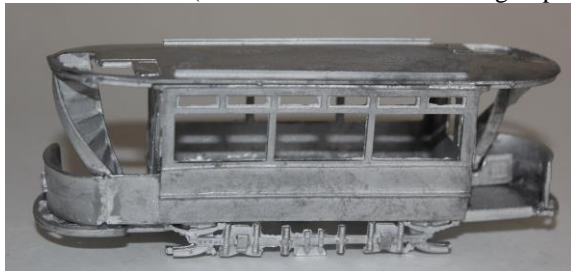

7. Fix the upper sides to upper bulkheads and marry subassemblies to produce a box effect.

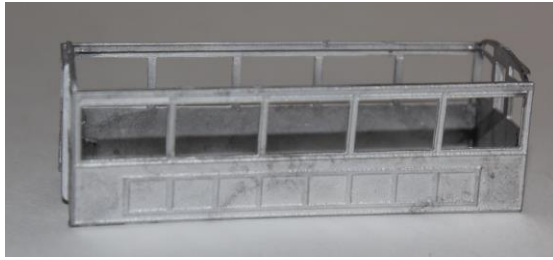


8. Fit centrally to ceiling / floor.

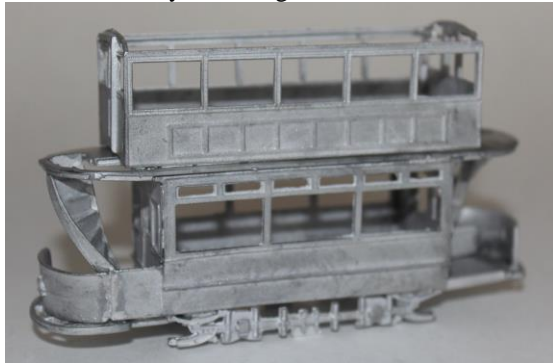

9. Fit the balcony ends.



10. Turn model over and fit the steps, then fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

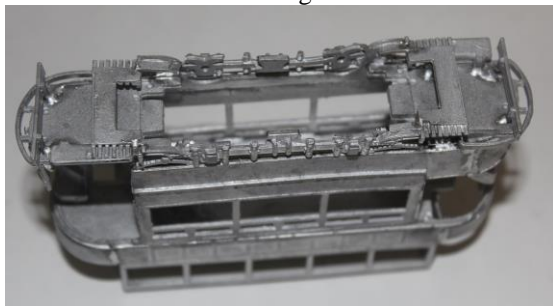

11. Don't fit the roof to the body until the interior has been completed

