


## KW Trams

### KW 00M2 Liverpool Priestley car

#### Parts

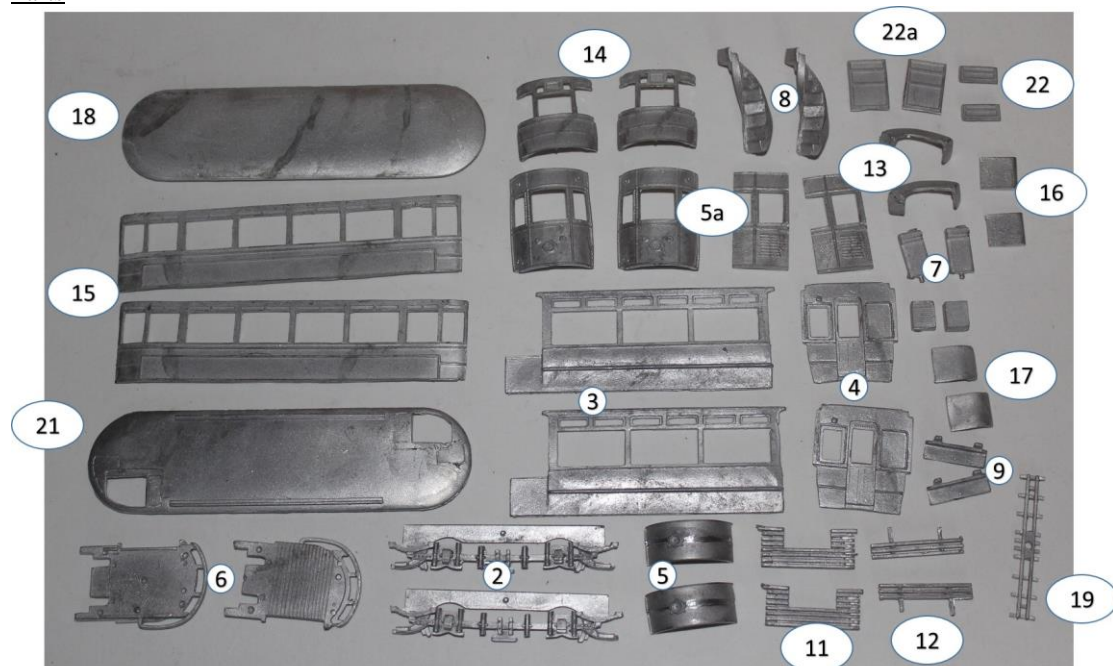


- |                                 |            |
|---------------------------------|------------|
| 1. Motor (not included)         |            |
| 2. Truck sides                  | x2         |
| 3. Lower side                   | x2         |
| 4. Lower bulkhead               | x2         |
| 5. Dash panel / vestibule       | x2 of each |
| 6. Platform                     | x2         |
| 7. Controller                   | x2         |
| 8. Stair                        | x2         |
| 9. Step                         | x2         |
| 10.                             |            |
| 11. Life tray                   | x2         |
| 12. Life guard                  | x2         |
| 13. Balcony seat                | x2         |
| 14. Upper end                   | x2         |
| 15. Upper side                  | x2         |
| 16. Partition                   | x2         |
| 17. Curved partition            | x2         |
| 18. Roof                        | x1         |
| 19. Trolley plank               | x1         |
| 20. Trolley pole (not included) |            |
| 21. Ceiling / floor             | x1         |

#### Build Steps


1. Fix truck sides to saloon sides.



2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

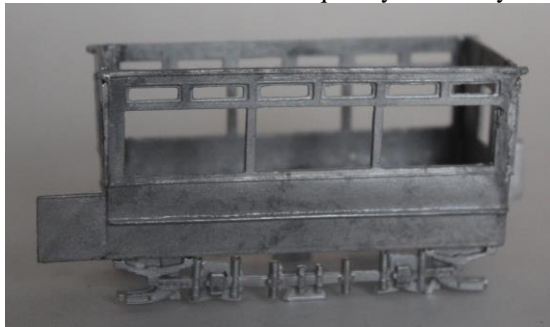


3. With model inverted, attach platforms to bottom edges of bulkheads; with the bulkhead fitting into the slot in the platform and between the truck sides.
4. Fit the dash panels or 2 part vestibule to the platform.

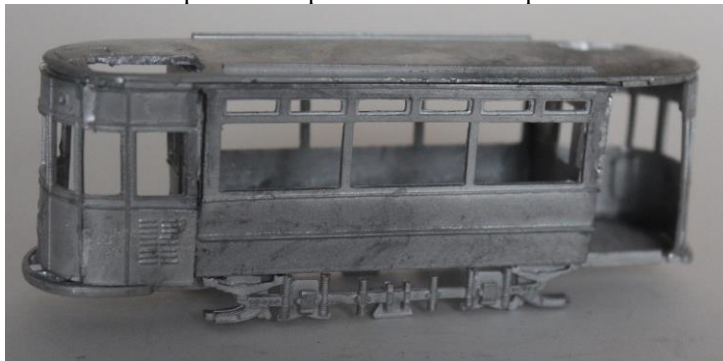


5. Fit the ceiling/upper deck floor to the body.
6. Fit the stairs (or leave until later if wishing to paint first).
7. Fix the upper sides to upper ends and fit to ceiling / floor.



8. Fit the upper deck partitions around the stairs.

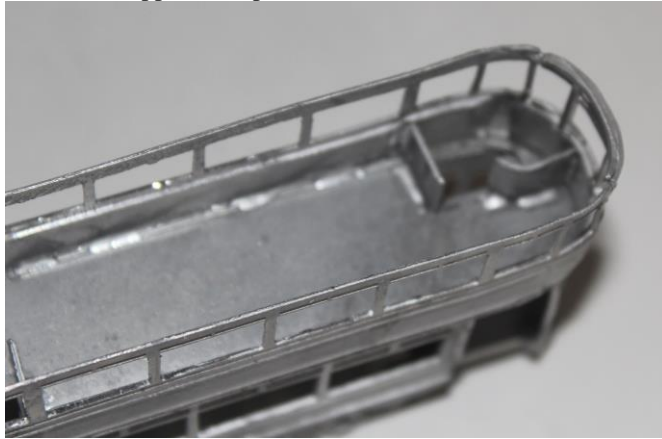

9. Turn model over and fit the steps, then fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

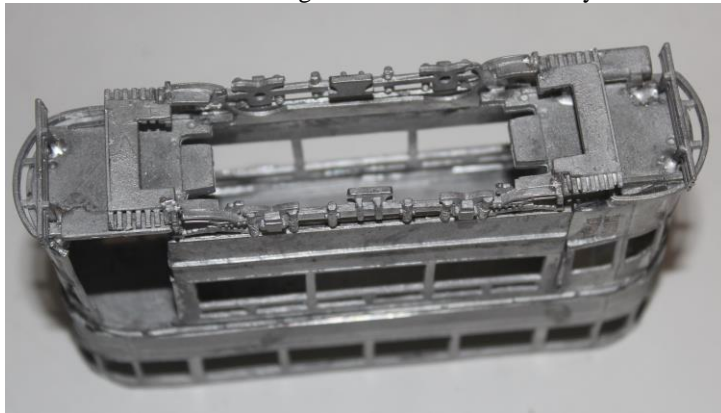

10. Fit the trolley plank to the centre of the roof.



11. Don't fit the roof to the body until the interior has been completed.

