


## KW Trams

### **KW 010a Newcastle A balcony**

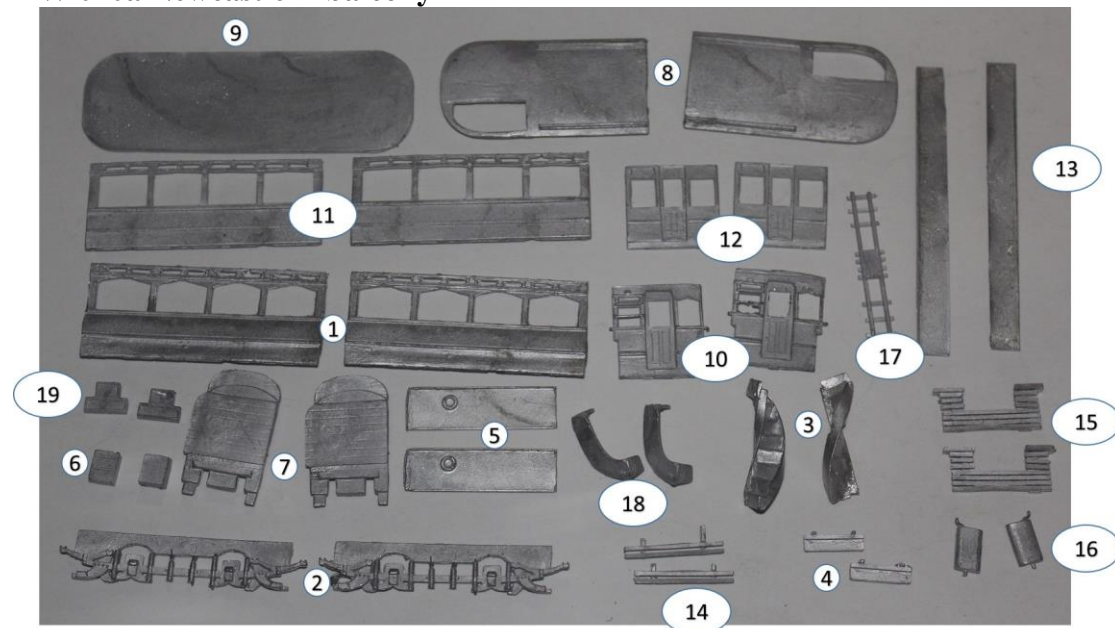


#### Parts


1.	Tram side lower	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Step	x2
5.	Dash panel with headlamp	x2
6.	Resistance box	x2
7.	Platform	x2
8.	Ceiling / Upper floor 1/2	x2
9.	Roof	x1
10.	Lower deck bulkhead	x2
11.	Upper deck side	x2
12.	Upper bulkhead	x2
13.	Balcony ends	x2
14.	Life guard	x2
15.	Life tray	x2
16.	Controller	x2
17.	Trolley plank	x1
18.	Balcony seat	x2
19.	Destination box	x2

#### Build Steps


1. Fit the truck sides to the body sides ensuring they are mounted centrally.

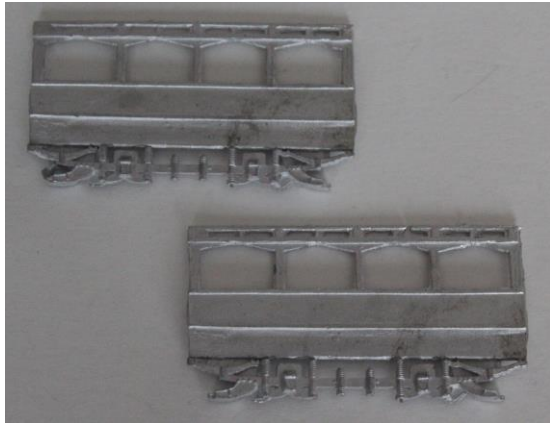

2. Fix bulk heads to sides squarely and marry the two subassemblies to produce a box.

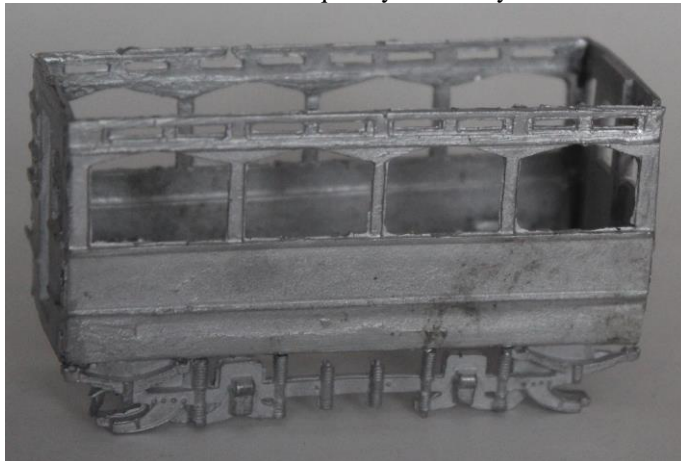


3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
4. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.

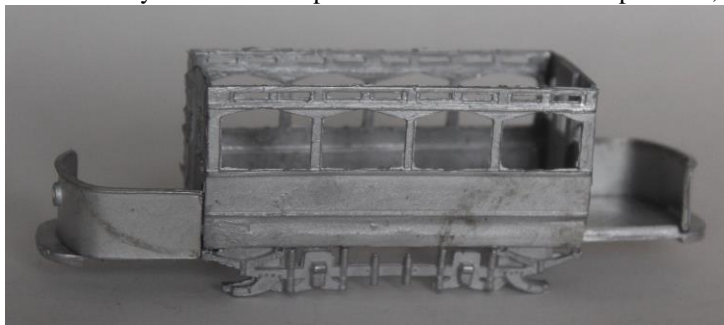

5. Trim the two halves of the ceiling/floor to the correct length then fix together and fit to the lower deck.




6. Fix upper bulk heads to upper sides squarely and marry the two subassemblies on the upper deck floor to make sure it fits.

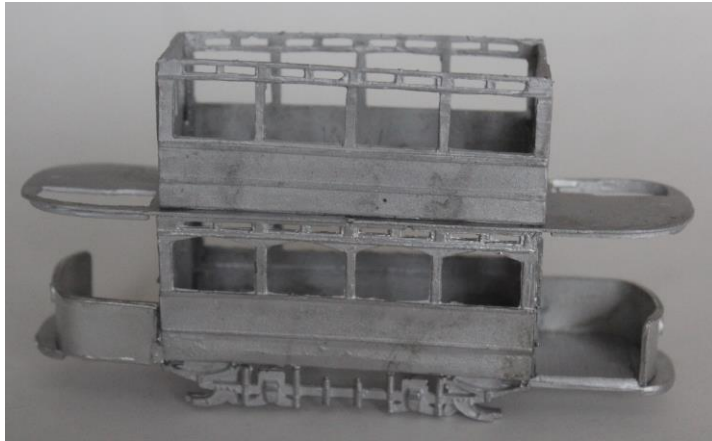

7. Carefully bend the balcony ends to shape and fit flush to edge of floor. You will need to trim the panel to the correct length.



8. Turn model over and fit the steps, life guards under the front platform and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

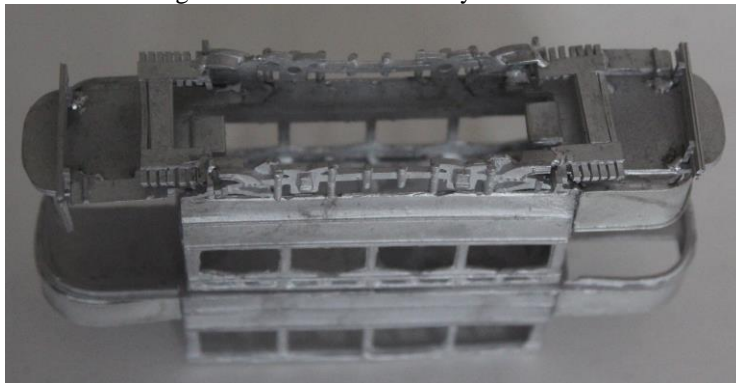

9. Fit the trolley plank centrally to the roof. Do not fit to rest of model until you have painted and glazed the interior.

