


KW Trams

KW 112 Bexley

Parts

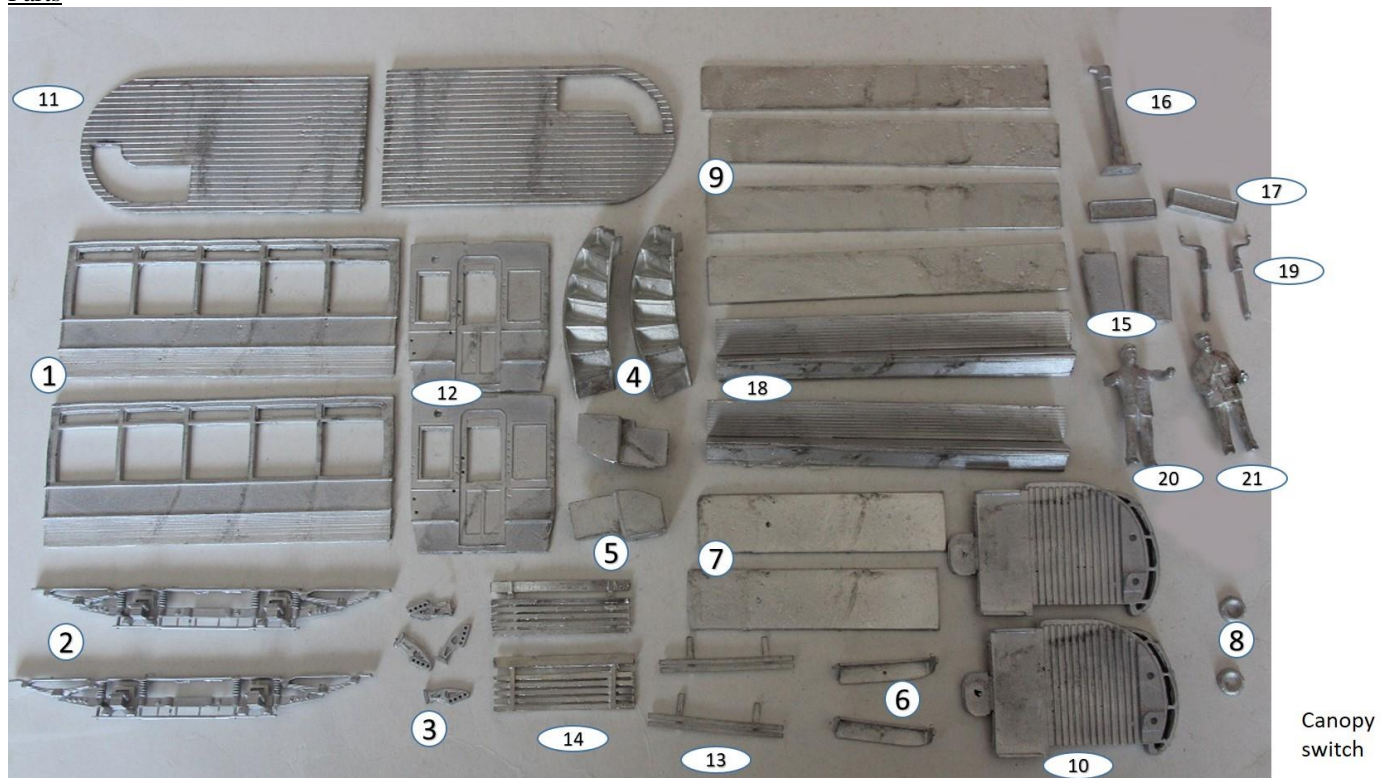


- | | | |
|-----|----------------------------------|----|
| 1. | Tram side | x2 |
| 2. | Truck side | x2 |
| 3. | Truck extensions | x4 |
| 4. | Stairs | x2 |
| 5. | Stair bases | x2 |
| 6. | Step | x2 |
| 7. | Dash | x2 |
| 8. | Headlamp | x2 |
| 9. | Upper decency panel sides / ends | x4 |
| 10. | Platform | x2 |
| 11. | Upper floor | x2 |
| 12. | Lower deck bulkhead | x2 |
| 13. | Life guard | x2 |
| 14. | Life tray | x2 |
| 15. | Controller | x2 |
| 16. | Trolley mast | x1 |
| 17. | Destination boxes | x2 |
| 18. | Lower deck seats | x2 |
| 19. | Handbrakes | x2 |
| 20. | Driver | x1 |
| 21. | Conductor | x1 |
| 22. | Canopy switch | x1 |

Build Steps


1. Attach the truck extensions to the truck sides so that the lifetrays can be mounted later.




2. Attach the truck sides to the middle of the body sides.

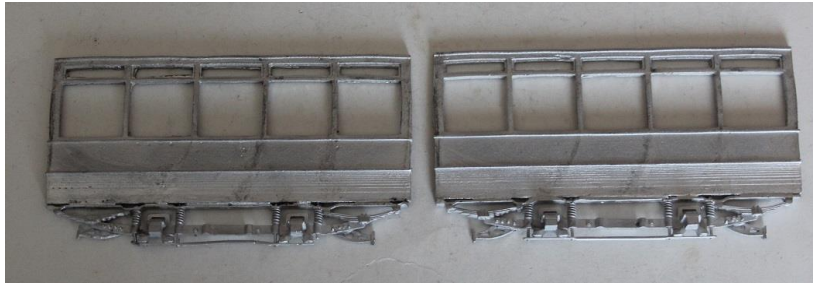


3. Fix bulk heads to sides squarely and marry all subassemblies to produce a box.

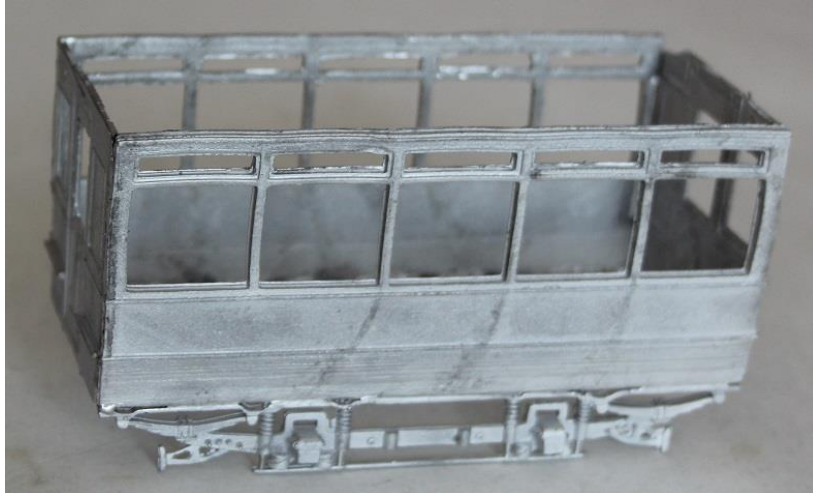


4. If required, fit the longitudinal seats in the lower saloon.
5. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
6. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform. Fit the headlamps centrally to the dash.

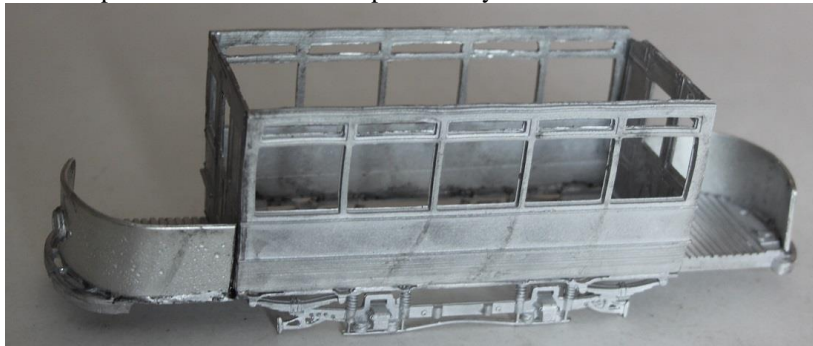


7. Fix the ceiling/upper deck floor pieces together then fit. You may need to remove some of the beading from the underside so that the floor fits well.

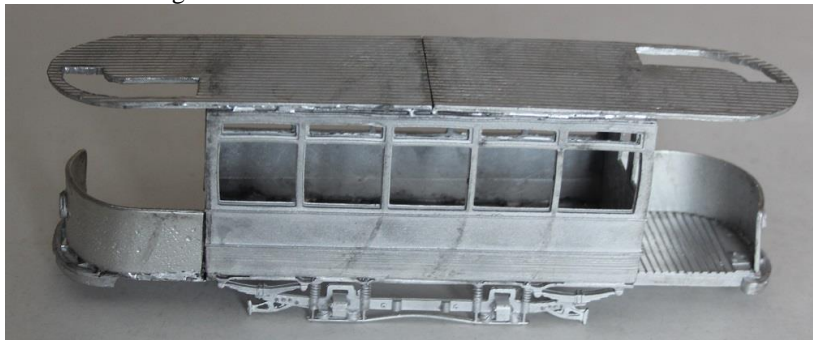

8. Attach upper deck sides and carefully bend ends to fit shape of the floor.

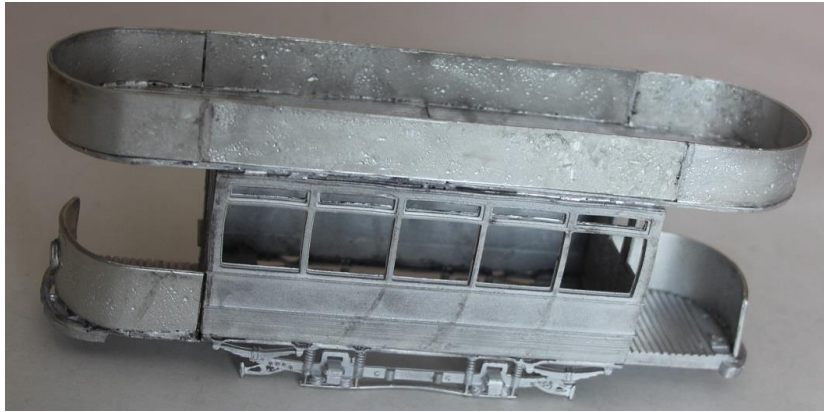

9. Turn model over and attach the under-gear – steps, life guards under the front of the platform and the life trays attached to the front edge of the truck.

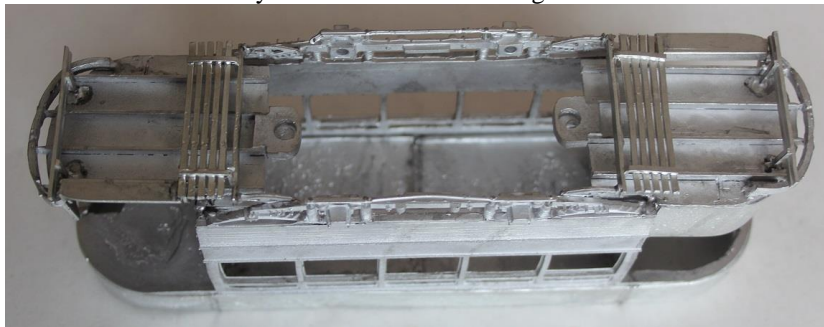

10. Fit the trolley mast and make up a trolley pole from wire



11. Fit the stair bases and stairs unless you wish to paint them first.

