
## **KW Trams**

## KW 114 Swansea


<u>Parts</u>

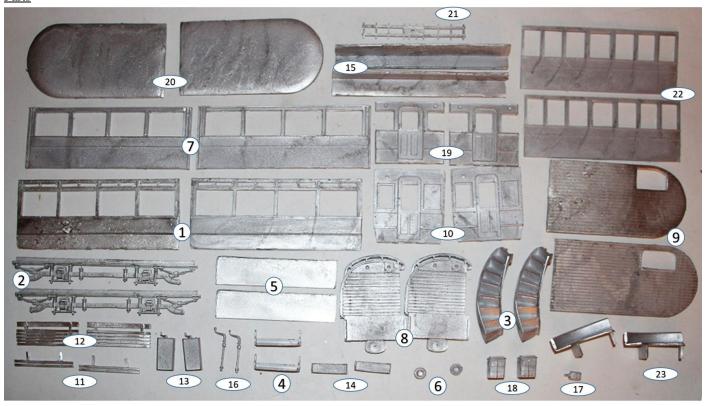


1.	Tram lower side	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Step	x2
5.	Dash	x2
6.	Headlamp	x2
	Upper sides	x2
	Platform	x2
9.	Upper floor	x2
	Lower deck bulkhead	x2
11.	Life guard	x2
	Life tray	x2
	Controller	x2
14.	Destination boxes	x2
15.	Lower deck seats	x2
16.	Handbrakes	x2
17.	Canopy switch	x1
	Resistance box	x2
	Upper bulkhead	x2
	Roof (half)	x2
	Trolley plank	x1
	Upper vestibule	x2
	<del></del>	x2
23.	Balcony seat	XΖ

Build Steps

1. Attach the truck sides to the middle of the body sides.

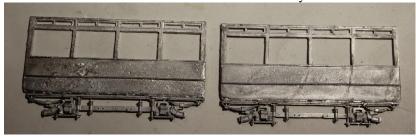

2. Use wire (not supplied) to make bulkhead door handles and window guard rails.

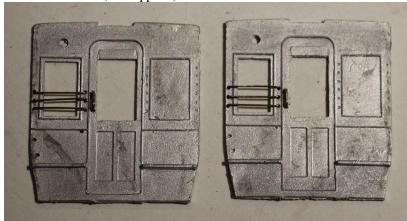

3. Fix bulk heads to sides squarely and marry all subassemblies to produce a box.



- 4. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
- 5. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform. Fit the headlamps centrally to the dash.



6. If required, fit the longitudinal seats in the lower saloon.



7. Fix the ceiling/upper deck floor pieces together then fit.




8. Attach upper deck sides and upper bulkheads to produce a box.



9. Fit to centre of floor.




10. Carefully bend vestibule ends to fit the shape of the floor, then cut out a slot to take the destination box.

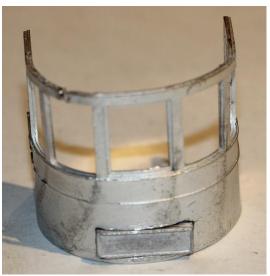


11. Fit to the car.



12. Turn model over and attach the under-gear – steps, life guards under the front of the platform and the life trays attached to the front edge of the truck.

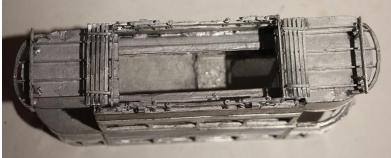

13. Fix the two halves of the roof together and fit the trolley plank centrally. Don't fit the roof to the model until you have completed the interior.

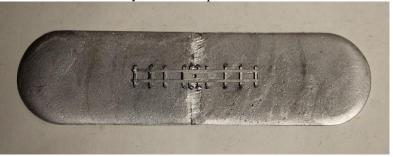



14. Fit the stairs unless you wish to paint them first.

