


KW Trams

KW 012a LCC Stores Van no ads


Parts

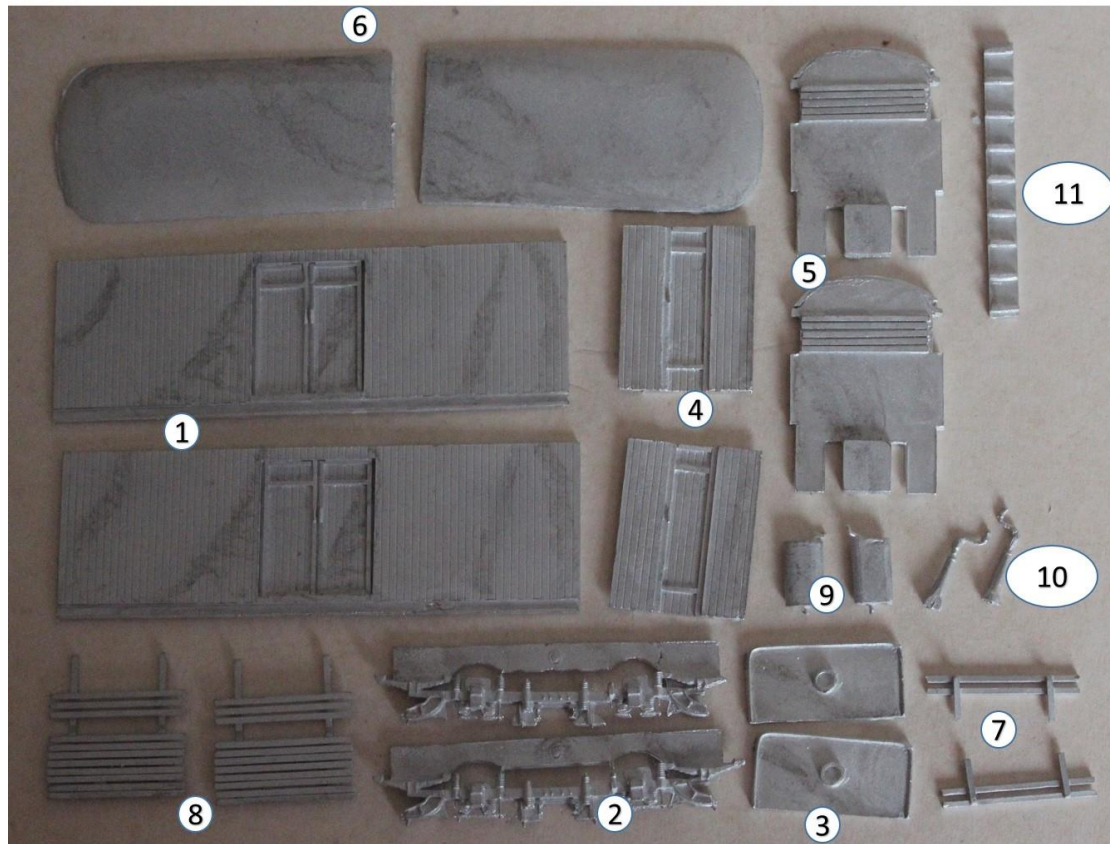

1.	Tram side	x2
2.	Truck sides	x2
3.	Dash panel	x2
4.	Body end	x2
5.	Platform	x2
6.	Roof	x2
7.	Life guard	x2
8.	Life tray	x2
9.	Controller	x2
10.	Hand brake	x2
11.	Trolley plank	x1

Build Steps

1. Fix body ends to sides squarely and marry the two subassemblies to produce a box.

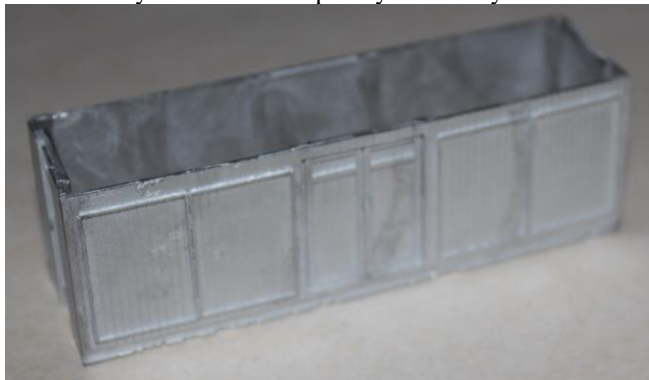


2. Fix truck sides ensuring they are central.



3. Trim the rear outer edges of the platforms to allow them to fit, then fix in place so that the body is flush against the rearmost ridge on the platform.



4. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.

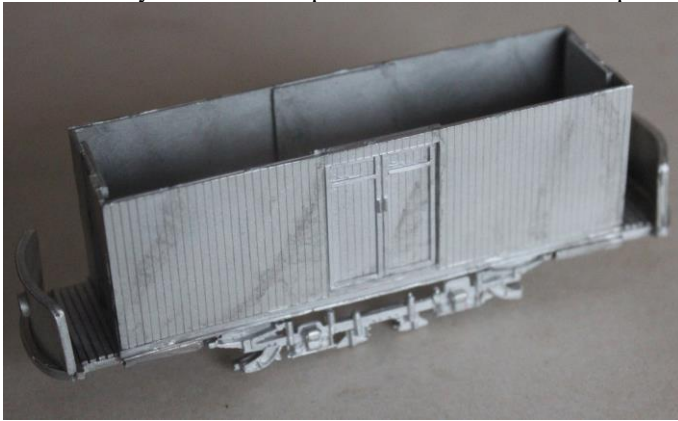


5. On a flat surface, fit the two halves of the roof together, then fit to body.



6. Fit the trolley plank to the roof so that the third ridge is in the middle of the tram and the trolley plank is its width away from the side.



7. Turn model over and fit the life guards under the front platform. Bend the life trays along the fold lines – they will probably break, so fix them together at 90 degrees, then fit to back end of platform.

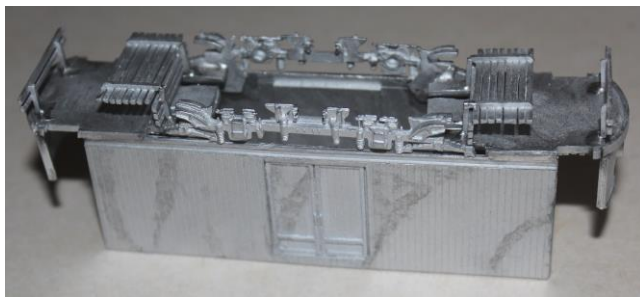

8. Fit the roof and the trolley plank.

