


KW Trams

KW 018 SHMD combination car


Parts

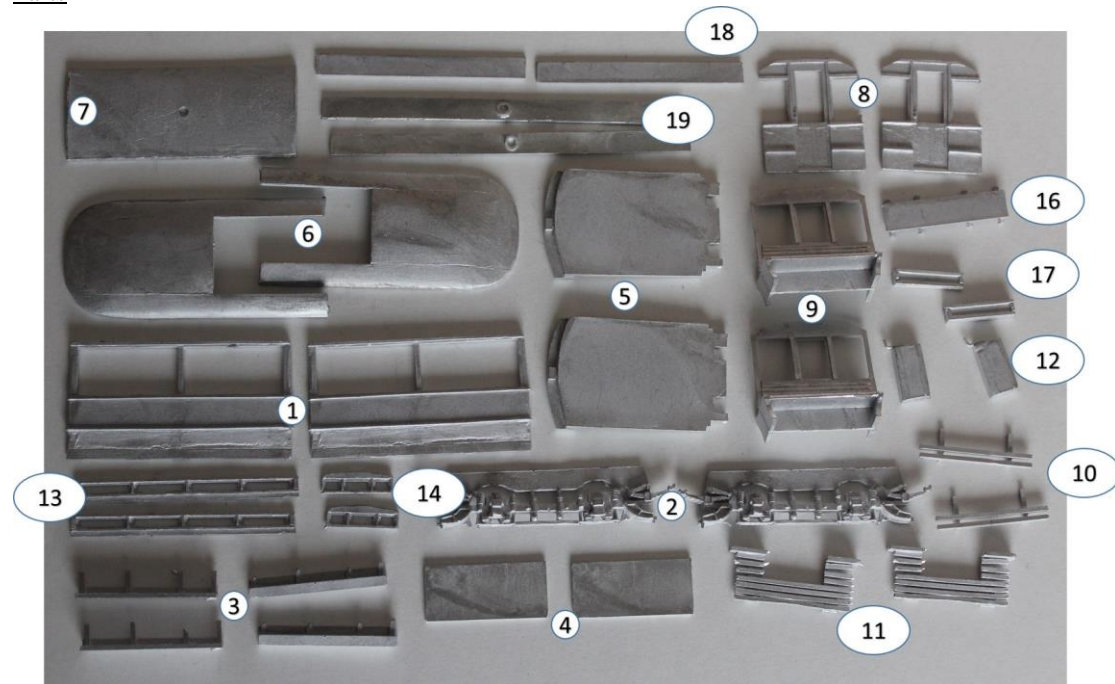

1.	Tram side	x2
2.	Truck side	x2
3.	Step	x4
4.	Dash panel	x2
5.	Platform / floor	x2
6.	Roof half	x2
7.	Upper roof	x1
8.	Bulkhead	x2
9.	Seat bulkhead	x2
10.	Life guard	x2
11.	Life tray	x2
12.	Controller	x2
13.	Clerestory side	x2
14.	Clerestory end	x2
15.	Roof headlights	x2
16.	Trolley plank	x1
17.	Destination boxes	x2
18.	Roof advert board sides	x2
19.	Roof advert boards ends	x2

Build Steps


1. Fit the truck sides centrally to the body sides.

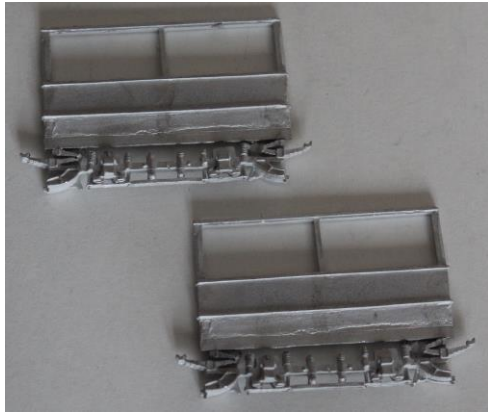


2. Fix the bulk heads to the body sides squarely and marry subassemblies to produce a box effect.




3. With model inverted, fit the platform under the edge of the bulkhead with the notches lined up with the sides.

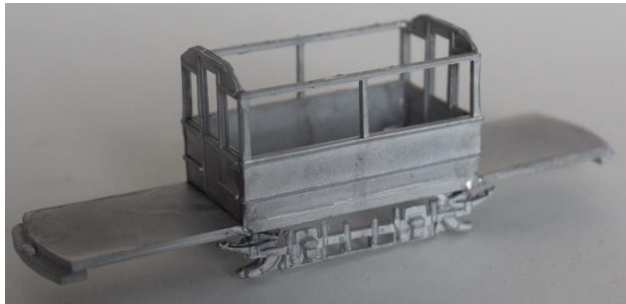


4. Carefully bend the dash panels to fit the curve of the platform and fit to platform.

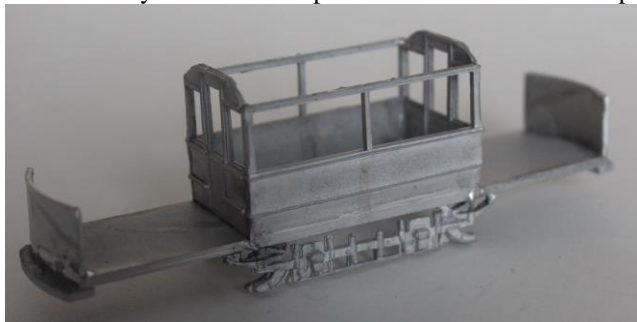


5. Fit the seat bulkhead to the middle of the platform so that it is flush with the platform sides and the inset window frame is towards the outer end of the tram.

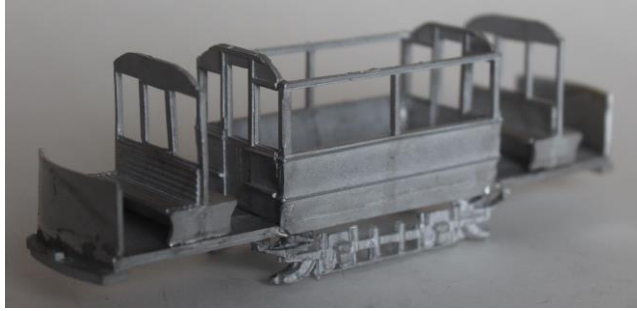


6. Fit the two halves of the roof together and fit to the body.

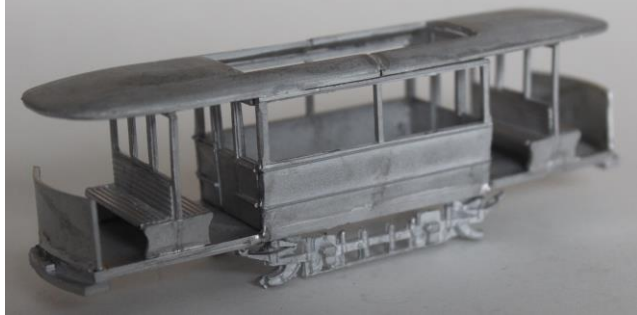

7. Fit the clerestory sides and ends to the roof.

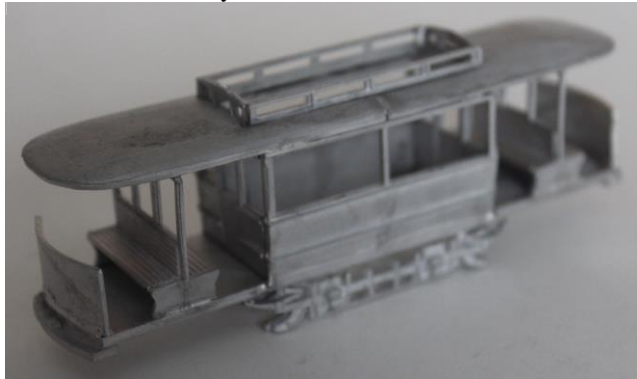

8. Turn model over and fix the life guards under the front panels and the life trays attached to the ends of the truck sides. Fit the steps to the platform sides, with the closed step on the near side of the tram.

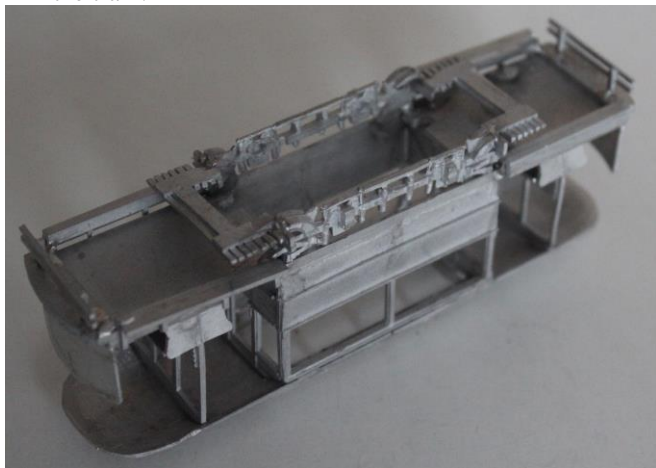

9. Fit the upper roof centrally and fit the trolley plank.

