


## KW Trams

### **KW 019 Metropolitan Electric Tramways Class B car**


#### Parts

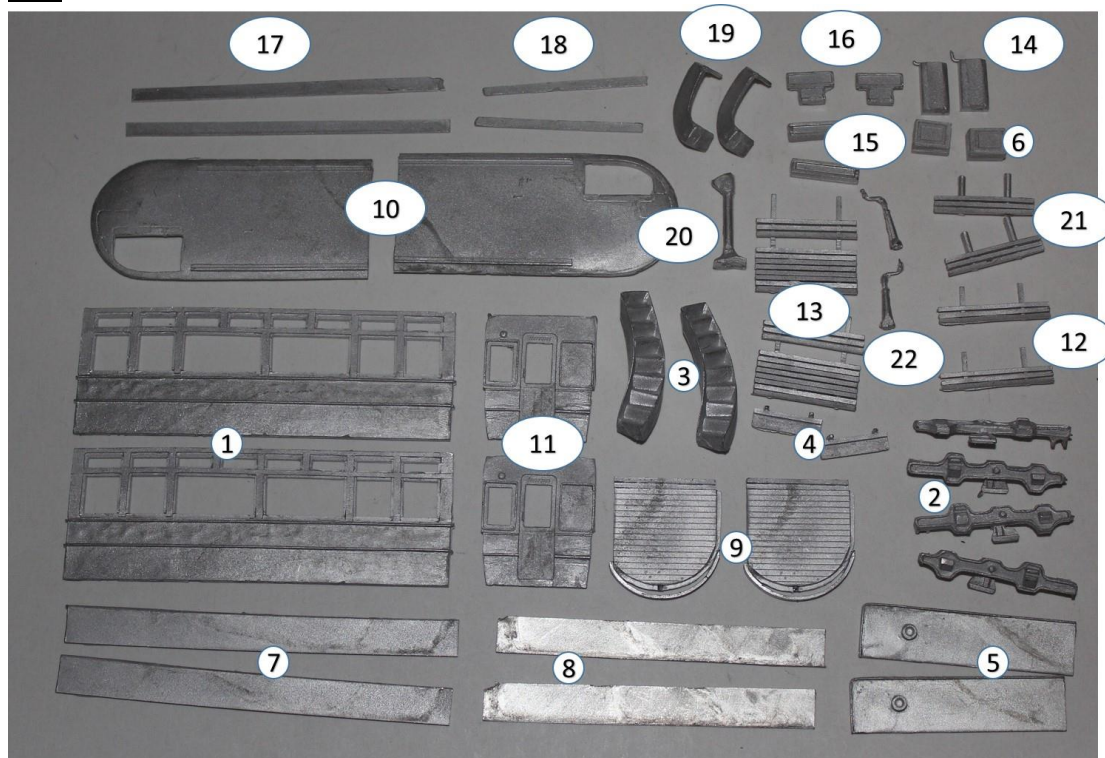

1. Tram side	x2
2. Bogie sides	x4
3. Stairs	x2
4. Step	x2
5. Dash panel	x2
6. Resistance box	x2
7. Upper sides	x2
8. Upper ends	x2
9. Platform	x2
10. Upper floor	x1
11. Lower deck bulkhead	x2
12. Life guard	x2
13. Life tray	x2
14. Controller	x2
15. Destination box single line	x2
16. Destination box double line	x2
17. Destination board long	x2
18. Destination board short	x2
19. Balcony seats	x2
20. Trolley mast	x1
21. Side life guards	x2
22. Handbrakes	x2

#### Build Steps

1. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

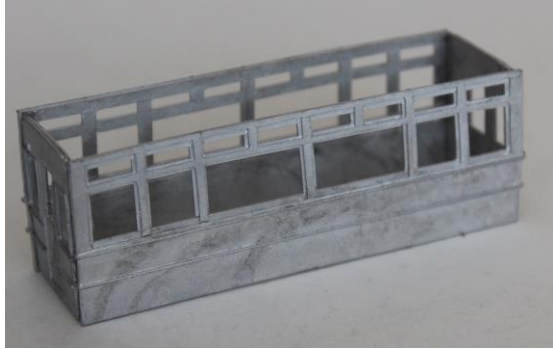

2. With model inverted, attach platforms to bottom edges of bulkheads; with the bulkhead fitting into the slot in the platform.
3. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.



4. Join the two ceiling/upper deck floor pieces and fit to the body.



5. Fit the stairs (or leave until later if wishing to paint first).



6. Fix the upper sides centrally against the ledge.
7. Carefully bend the upper ends and trim to fit.



8. Turn model over and fit the steps, then fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism. Fit the side lifeguards if required.



9. Fit the trolley mast centrally.

