


KW Trams

KW 020 London County Council Class A Open Top car

Parts

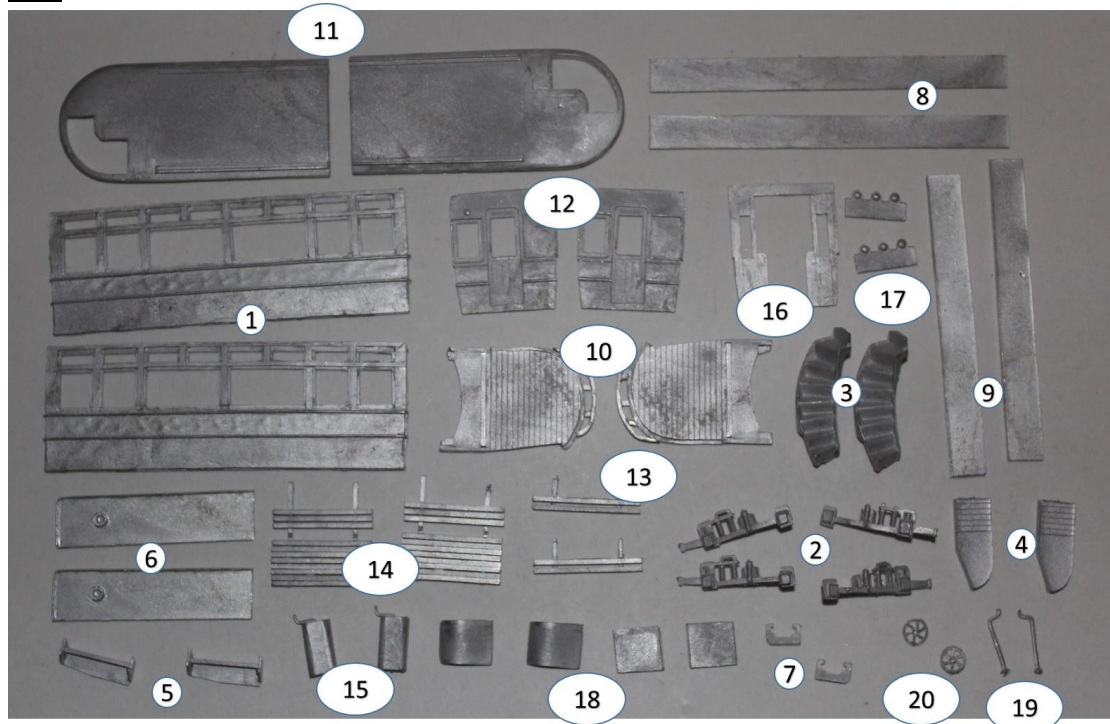

1. Tram side	x2
2. Bogie side	x4
3. Stairs	x2
4. Stair bases	x2
5. Step	x2
6. Dash panel	x2
7. Plough carrier	x2
8. Upper decency panel sides	x2
9. Upper decency panel ends	x2
10. Platform	x2
11. Upper floor half	x2
12. Lower deck bulkhead	x2
13. Life guard	x2
14. Life tray	x2
15. Controller	x2
16. Middle bulkhead	x1
17. Destination box	x2
18. Stair partitions	x4
19. Handbrakes	x2
20. Handbrake wheels	x2

Build Steps

1. Attach the bulkheads to the platforms so that they butt up against the ridge.



2. Fix sides squarely to the bulkhead / platform assembly and join all together.



3. Fit the middle bulkhead in place.



4. Carefully bend the dash panels to fit the curve of the platform, cut to length, and fit to platform



5. Solder the two halves of the ceiling/upper deck floor together and fit.



6. Fit the stair bases and stairs (unless wishing to paint them first).



7. Attach upper deck sides and carefully bend the ends and trim to fit. Note, the ends are made from American pewter and are therefore easier to bend.



8. Fit the stair partitions.



9. Turn model over and fix the steps, life guards under the front panels and the life trays.

