


## KW Trams

### **KW 020a London County Council Class D Balcony Top car**


#### Parts

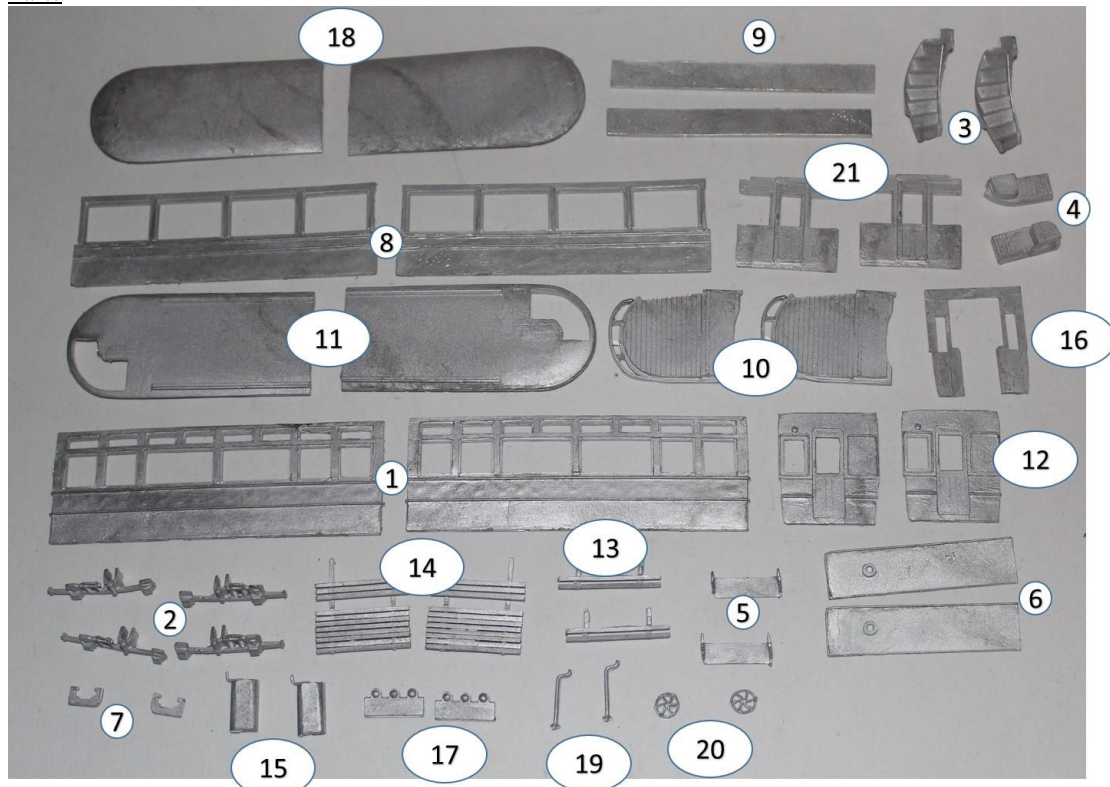


1. Tram side	x2
2. Bogie side	x4
3. Stairs	x2
4. Stair bases	x2
5. Step	x2
6. Dash panel	x2
7. Plough carrier	x2
8. Upper sides	x2
9. Upper decency panel ends	x2
10. Platform	x2
11. Upper floor half	x2
12. Lower deck bulkhead	x2
13. Life guard	x2
14. Life tray	x2
15. Controller	x2
16. Middle bulkhead	x1
17. Destination box	x2
18. Roof half	x2
19. Handbrakes	x2
20. Handbrake wheels	x2
21. Upper bulkhead	x2

#### Build Steps


1. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

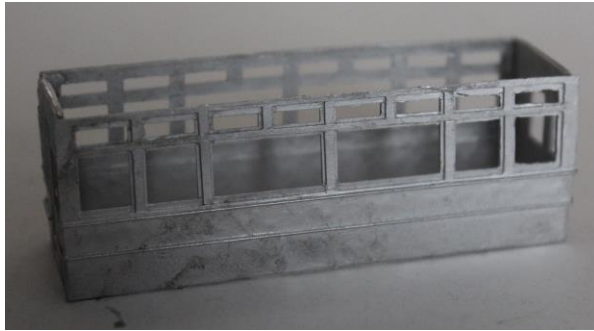


2. Fit the middle bulkhead in place.

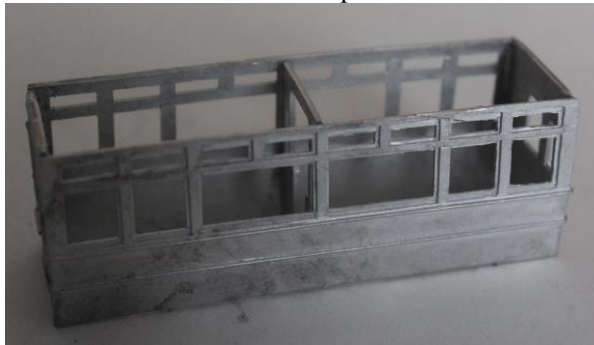


3. With model inverted, attach platforms to bottom edges of bulkheads; with the bulkhead fitting into the slot in the platform.

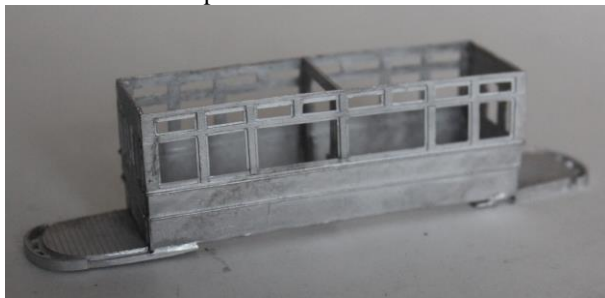


4. Carefully bend the dash panels to fit the curve of the platform, cut to length, and fit to platform.

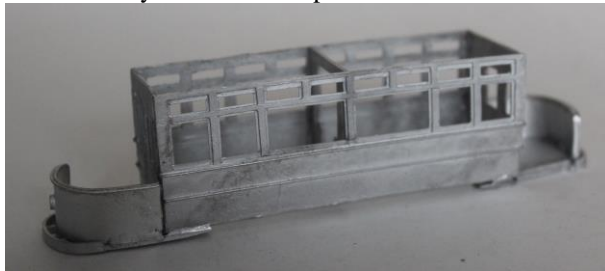


5. Solder the two halves of the ceiling/upper deck floor together and fit.

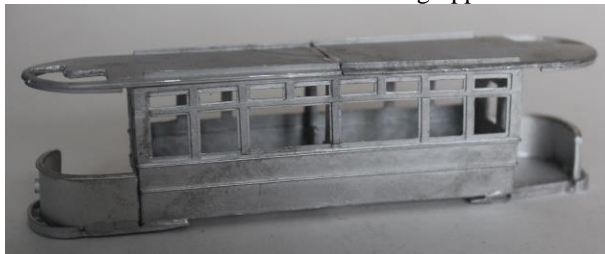


6. Fit the stair bases and stairs (unless wishing to paint them first).

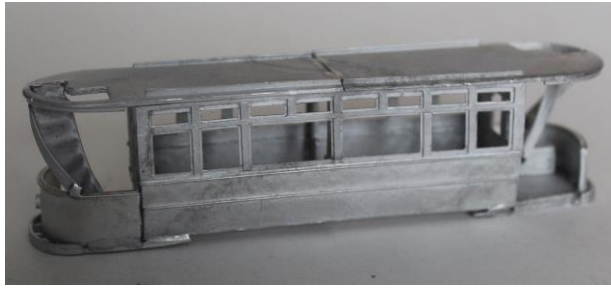


7. Fit the upper deck sides and bulkheads.

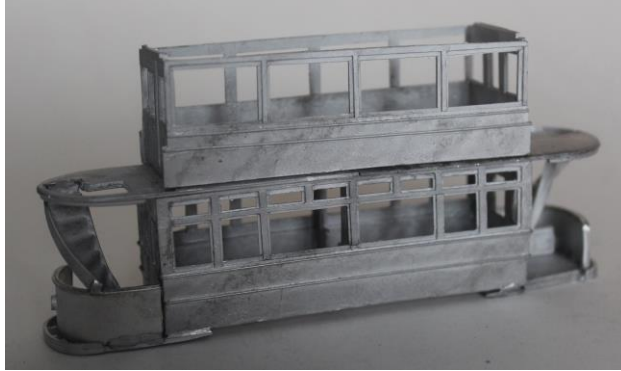

8. Carefully bend the balcony ends and trim to fit. Note, the ends are made from American pewter and are therefore easier to bend.

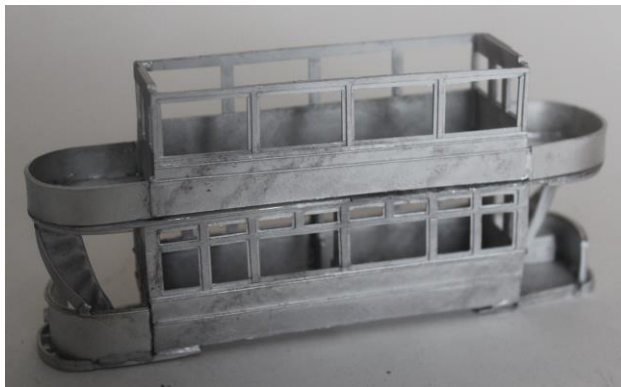

9. Turn model over and fix the steps, life guards under the front panels and the life trays.

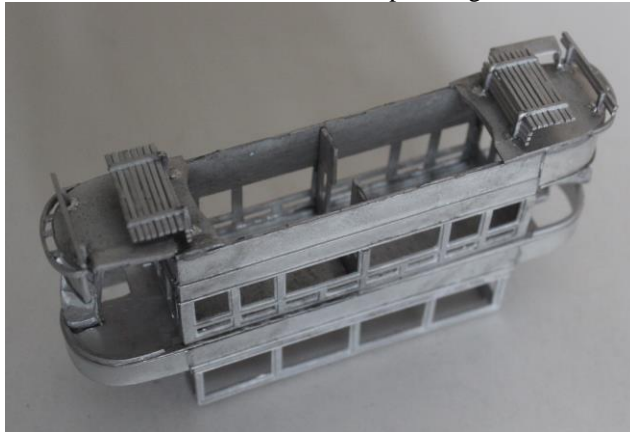

10. Solder the two halves of the roof together but do not fit to body until the interior is completed.

