


KW Trams

KW 021 Liverpool Lambeth Road car


Parts

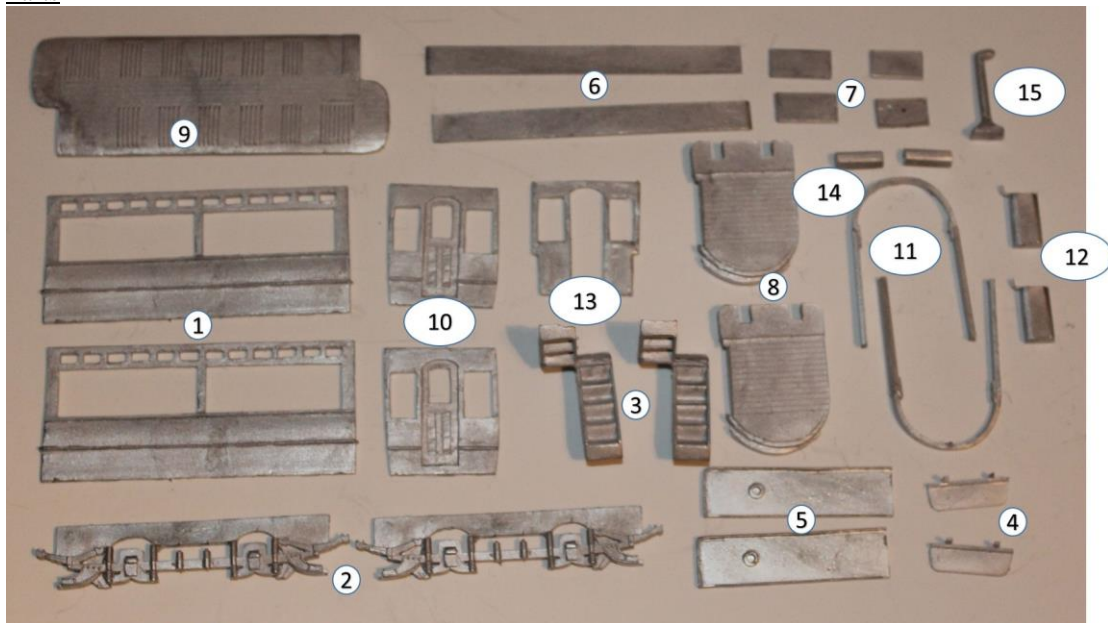


- | | |
|-------------------------|----|
| 1. Tram side | x2 |
| 2. Truck side | x2 |
| 3. Stairs | x2 |
| 4. Step | x2 |
| 5. Dash panel | x2 |
| 6. Upper sides | x2 |
| 7. Upper ends | x4 |
| 8. Platform | x2 |
| 9. Upper floor | x1 |
| 10. Lower deck bulkhead | x2 |
| 11. Life guard | x2 |
| 12. Controller | x2 |
| 13. Middle bulkhead | x1 |
| 14. Destination box | x2 |
| 15. Trolley mast | x1 |

Build Steps


1. Fix end bulk heads and middle bulkhead to sides squarely.

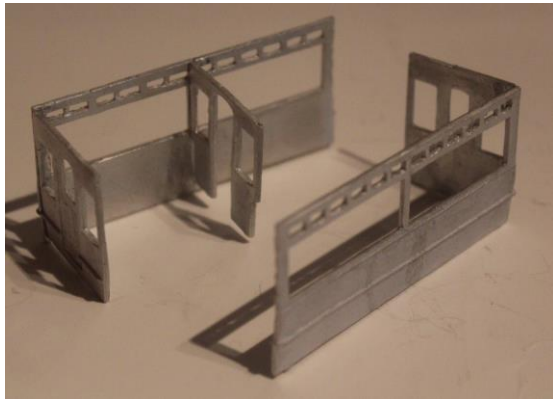

2. Marry subassemblies to produce a box effect.

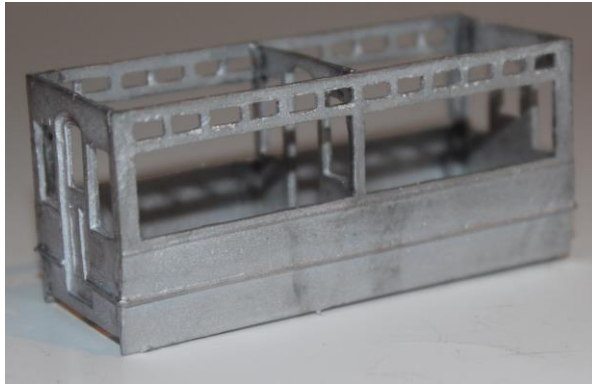


3. With model inverted, attach platforms to bottom edges of bulkheads; with the bulkhead fitting into the slot in the platform.
4. Carefully bend the dash panels to fit the curve of the platform, cut to length, leaving a gap for the under stair gate, and fit to platform.

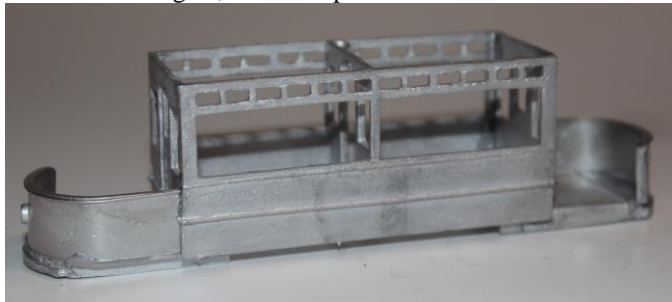


5. Solder the ceiling/upper deck floor in place.




6. Solder the long sides to the upper deck edges, then fit the 2 panels at each end.

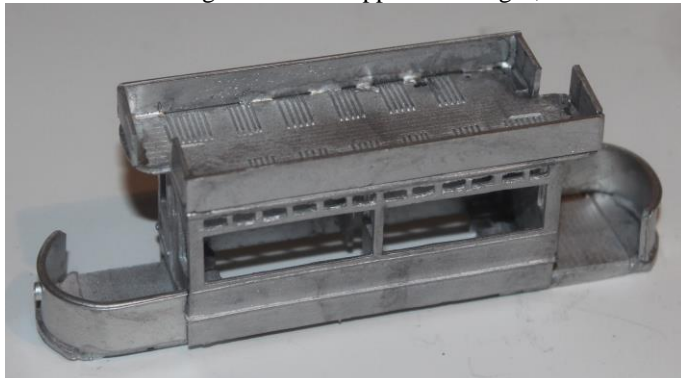

7. Turn model over and fix the steps and the life guards which attach to the front edge of the truck sides. Fix a piece of wire between the life guard and the dash.

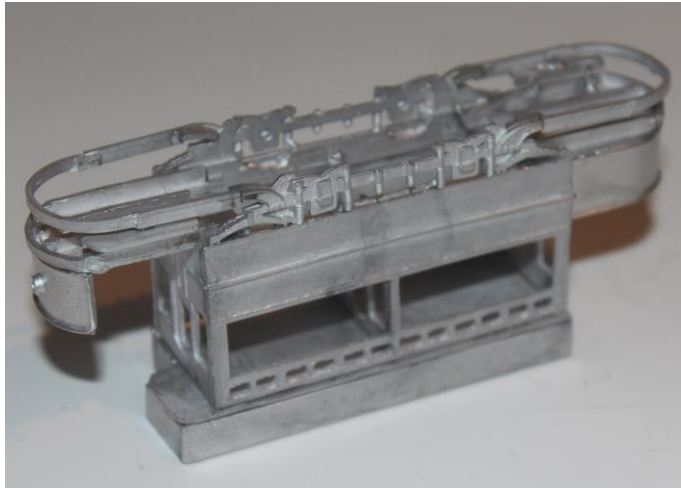

8. Fit the trolley mast in place.

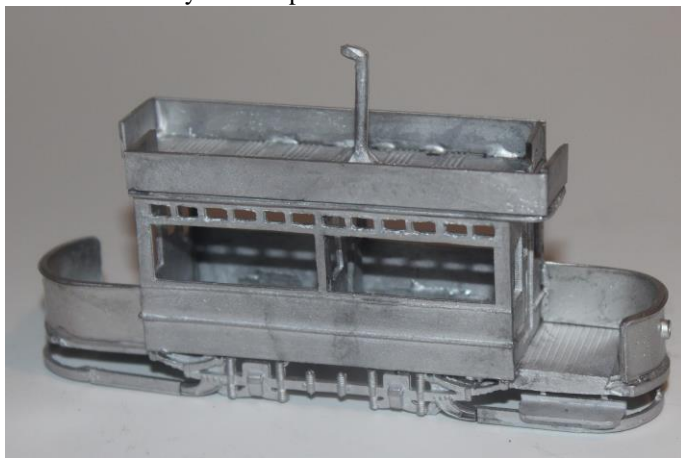

9. Fit the stairs (unless wishing to paint them first).

