


KW Trams

KW 028 Blackpool Toastrack Cars 161-166


Parts

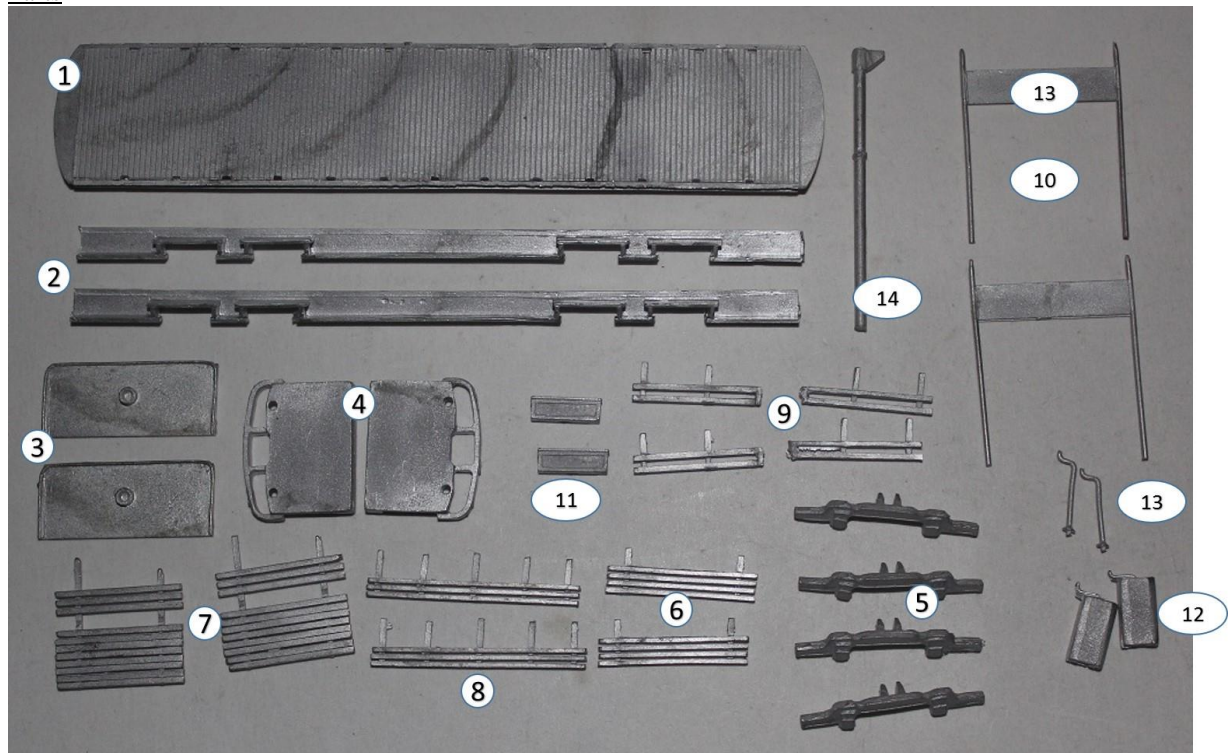


1.	Tram floor	x1
2.	Steps	x2
3.	Dash panel	x2
4.	Platform end / bumper	x2
5.	Bogie side	x4
6.	Life guard	x2
7.	Life tray	x2
8.	Middle side lifeguard	x2
9.	End side lifeguards	x4
10.	Destination board	x2
11.	Destination box	x2
12.	Controller	x2
13.	Handbrake	x2
14.	Trolley mast	x1

Build Steps


1. Fix steps under the sides of the floor. They should be mounted centrally. They should be fixed at an angle so that the steps are horizontal.
2. Fix platform ends / bumpers under the ends of the floor. You will probably need to shave a couple of millimetres off each side to allow them to fit properly.

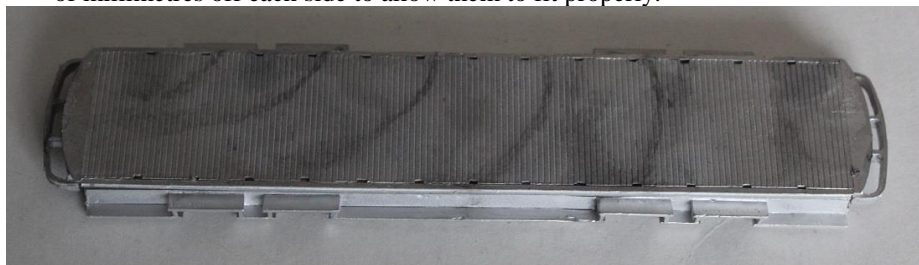


3. Carefully bend the dash panels to fit the curve of the floor and fit flush to the ends of the floor.

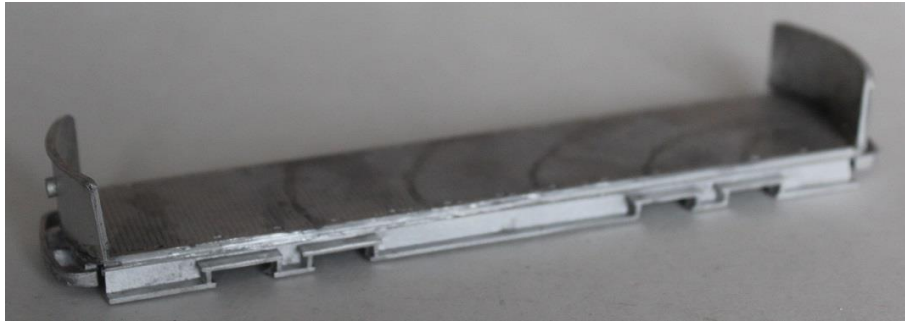

4. Bend the lifetrays to 90 degrees and trim the legs, then fit flush the back edge of the bumper block – check that it doesn't foul the bogies and prevent them turning.
5. Fit the middle lifeguard centrally to the back of the middle steps so that there is a small gap between the bottom of the step and the top rail of the lifeguard.
6. Fit the side lifeguards under each of the end steps so that the end is flush with the inner end of the step, again leaving a small gap between the bottom of the step and the top rail of the lifeguard.
7. Fit the end lifeguard between the outer ends of the side lifeguards. You will need to trim the ends to make it fit.

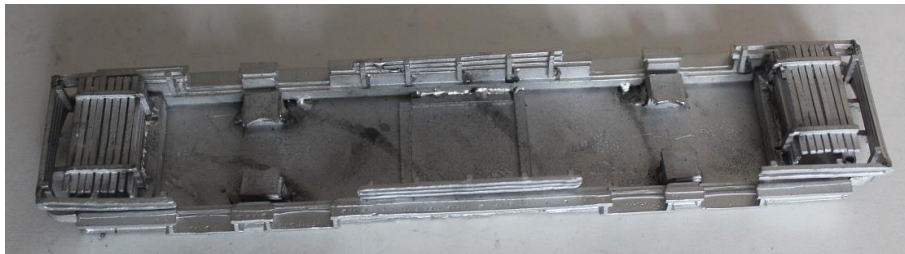

8. Fit the destinations with the posts each side of the dash. If required replace the posts with wire for additional strength.

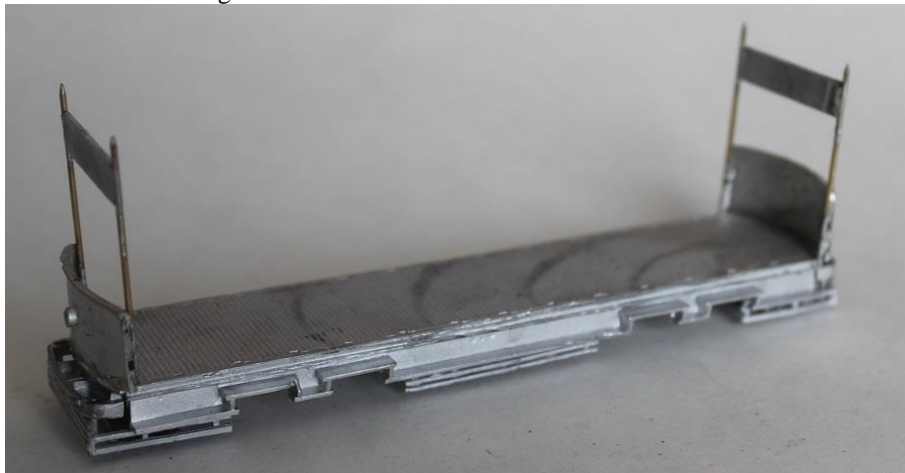

9. Fit the trolley mast centrally. Fit the destination boxes each side of the mast resting on top of the band round the mast.

