


## KW Trams

### **KW 0032 Wallasey 1-31 car.**

#### Parts

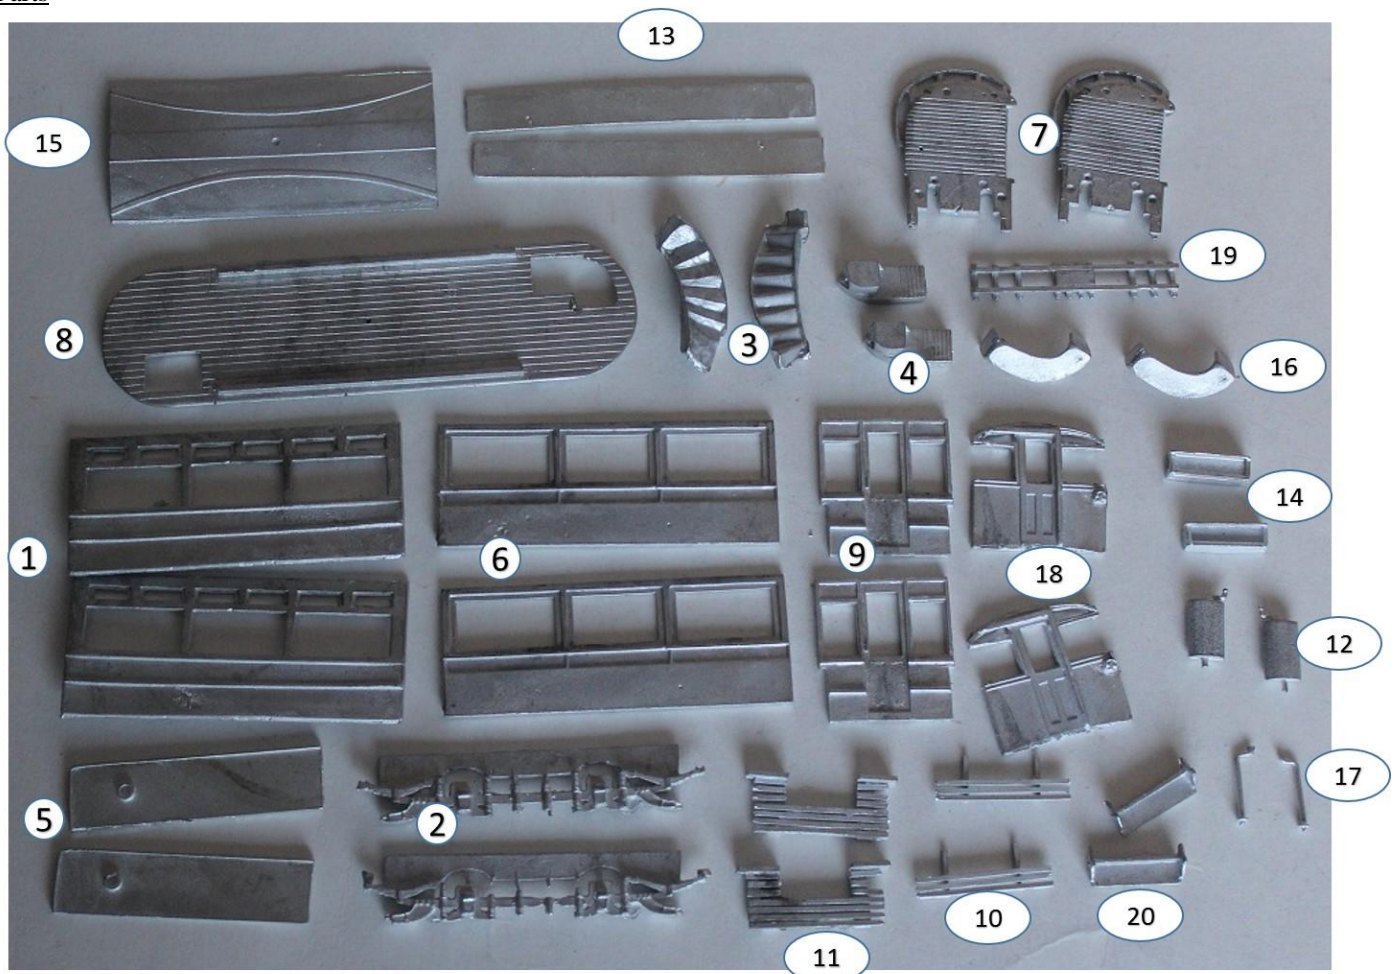


1. Tram side 3 window	x2
2. Truck side	x2
3. Stairs	x2
4. Stair bases	x2
5. Dash panel	x2
6. Upper sides	x2
7. Platform	x2
8. Upper floor	x1
9. Lower deck bulkhead	x2
10. Life guard	x2
11. Life tray	x2
12. Controller	x2
13. Balcony ends	x2
14. Destination box	x2
15. Roof	x1
16. Balcony seat	x2
17. Handbrake	x2
18. Upper deck bulkhead	x2
19. Trolley plank	x1
20. Step	x2

#### Build Steps


1. Attach truck sides to body sides ensuring exact centrality.



2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect. You will need to trim the lower edges of the bulkheads or thin the sides to make them fit together.

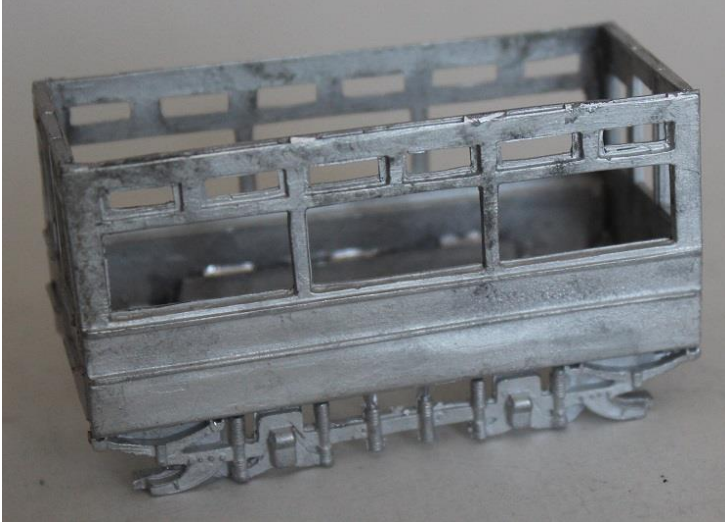

3. With model inverted, attach platforms to bottom edges of bulkheads. You may need to trim the back ends of the platform or the edges of the truck sides to make it fit.
4. Carefully bend the dash panels to fit the platform, trim to length if required.

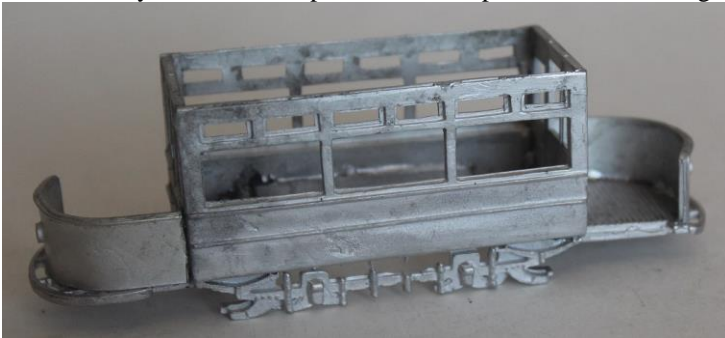

5. Fix the ceiling/upper deck floor.




6. Fit the upper deck sides to the middle of the upper deck floor. Fit the upper bulkheads.




7. Carefully bend the balcony end panels to the shape of the floor, trim to the correct length & fit.



8. Turn model over and fit the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

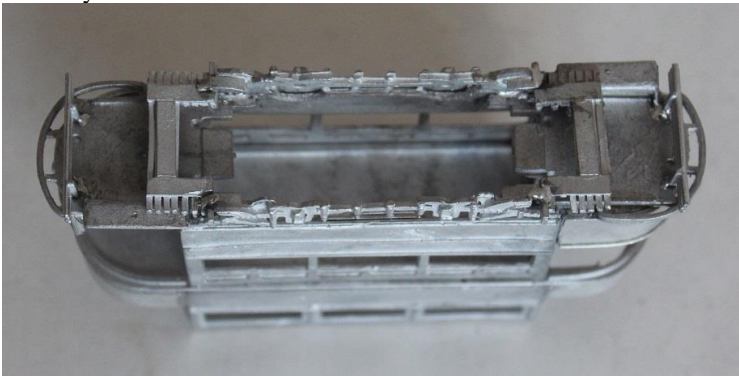

9. Fit the stairs (unless you wish to paint them first).

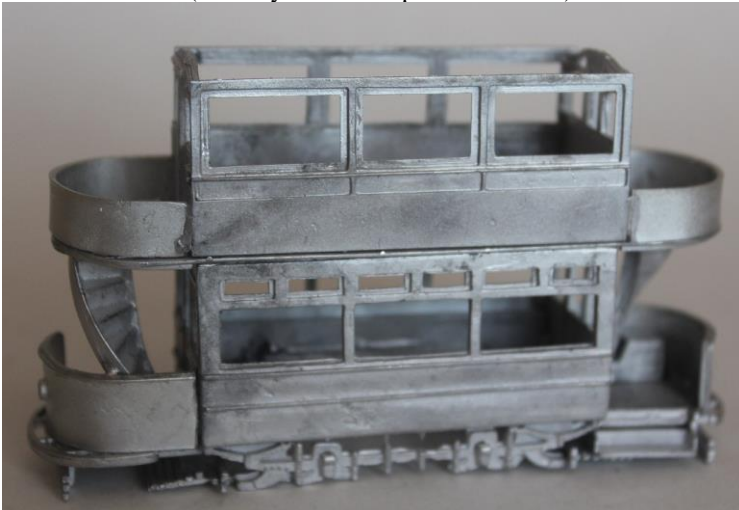

10. Fit the trolley plank to the centre of the roof, but don't fit it to the tram until you have completed the upper deck interior.

