


KW Trams

KW 0033 Wallasey 69-78 car.


Parts

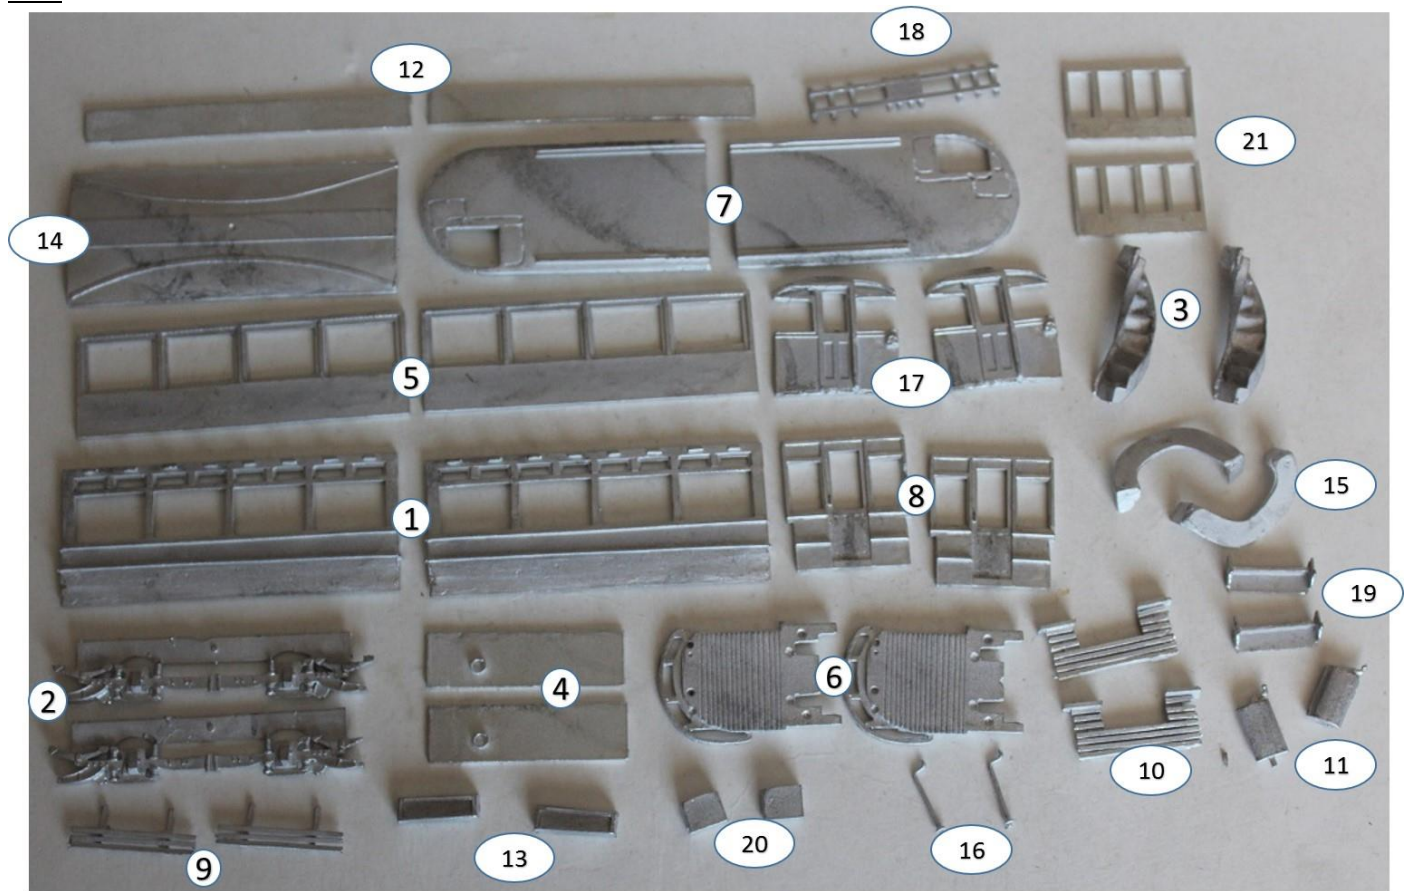


1. Tram side 4 window	x2
2. Truck side	x2
3. Stairs	x2
4. Dash panel	x2
5. Upper sides	x2
6. Platform	x2
7. Upper floor 1/2	x2
8. Lower deck bulkhead	x2
9. Life guard	x2
10. Life tray	x2
11. Controller	x2
12. Balcony ends	x2
13. Destination box	x2
14. Roof	x1
15. Balcony seat	x2
16. Handbrake	x2
17. Upper deck bulkhead	x2
18. Trolley plank	x1
19. Step	x2
20. Resistance box	x2
21. Driver vestibule	x2
22. Destination letter box	x2

Build Steps

1. Attach truck sides to body sides ensuring exact centrality.

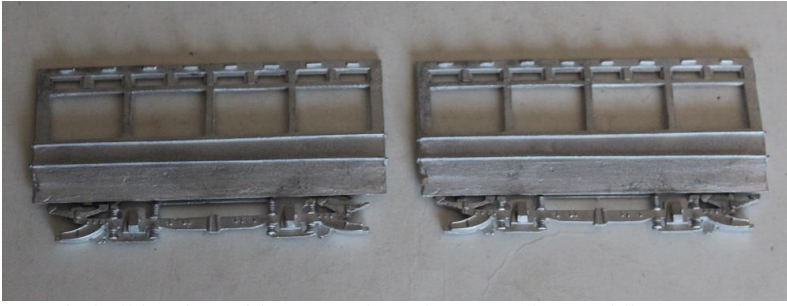


2. Fix bulkheads to sides squarely and marry subassemblies to produce a box effect. You will need to trim the lower edges of the bulkheads or thin the sides to make them fit together.

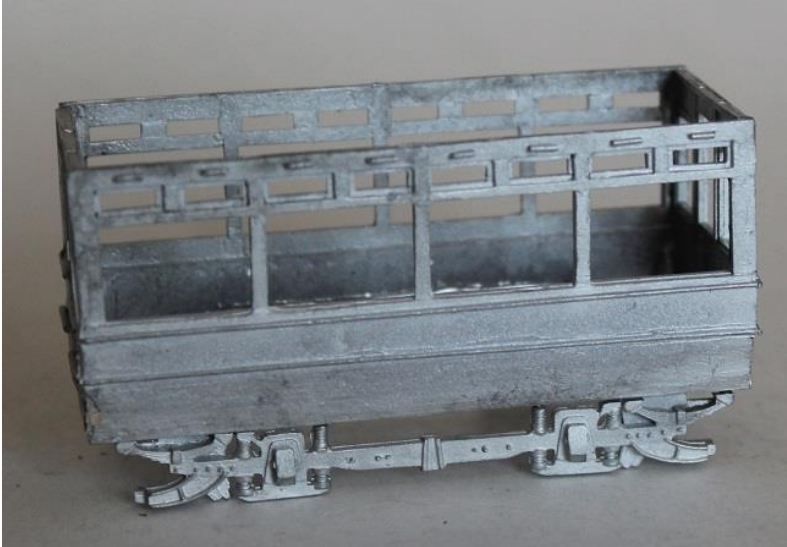


3. With model inverted, attach platforms to bottom edges of bulkheads. You may need to trim the back ends of the platform to make it fit.
4. Carefully bend the dash panels to shape and fit to the platform. Cut to length as required. The section between the 2 should be flat (to match the flat section on the front of the platform, and the other 2 sections curved).




5. Carefully bend the driver vestibule and fit.

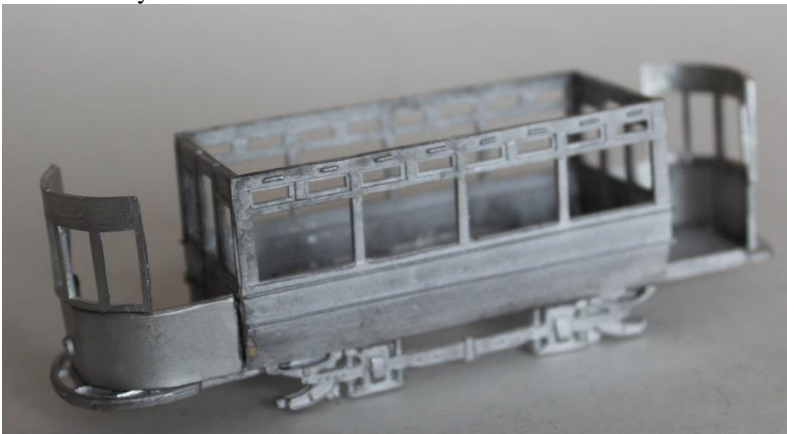

6. Fix the two halves of the ceiling/upper deck floor together and fit.

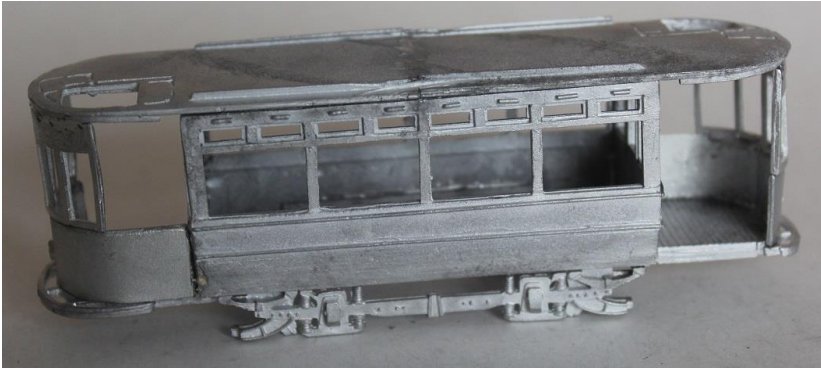

7. Fit the upper deck sides to the middle of the upper deck floor. Fit the upper bulkheads.

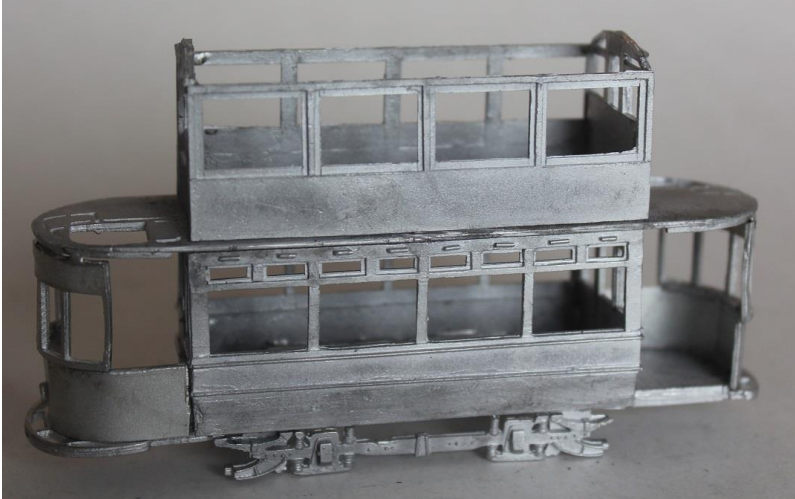

8. Carefully bend the balcony end panels to the shape of the floor, trim to the correct length & fit.



9. Turn model over and fit the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.



10. Fit the stairs (unless you wish to paint them first).

11. Fit the trolley plank to the centre of the roof, but don't fit it to the tram until you have completed the upper deck interior.

