


KW Trams

KW 0035 Warrington 22-27 car.


Parts

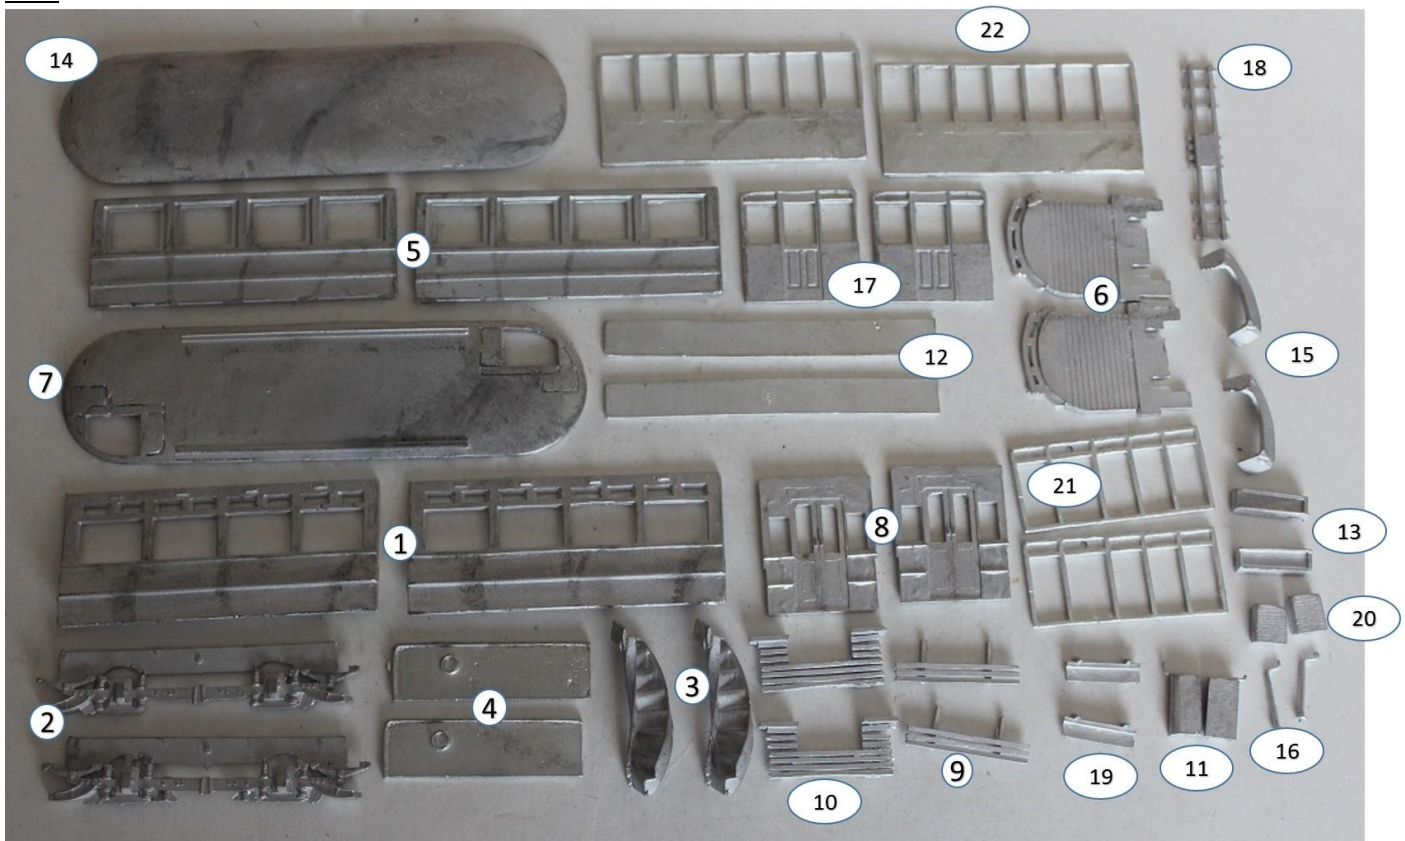


1. Tram side 4 window	x2
2. Truck side	x2
3. Stairs	x2
4. Dash panel	x2
5. Upper sides	x2
6. Platform	x2
7. Upper floor	x1
8. Lower deck bulkhead	x2
9. Life guard	x2
10. Life tray	x2
11. Controller	x2
12. Balcony ends	x2
13. Destination box	x2
14. Roof	x1
15. Balcony seat	x2
16. Handbrake	x2
17. Upper deck bulkhead	x2
18. Trolley plank	x1
19. Step	x2
20. Resistance box	x2
21. Driver vestibule	x2
22. Upper vestibule	x2

Build Steps

1. Attach truck sides to body sides ensuring exact centrality.

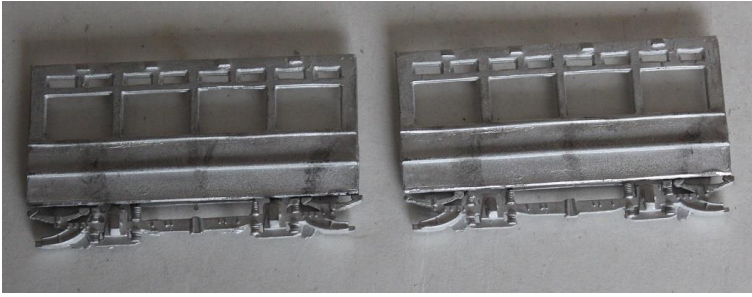

2. If required, trim the bulkhead lower edges so that they fit properly against the lower sides.
3. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect. You will need to trim the lower edges of the bulkheads or thin the sides to make them fit together.

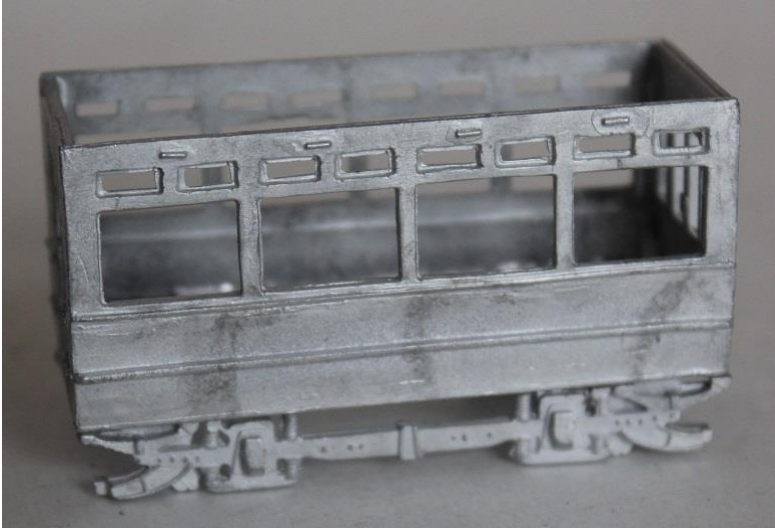

4. With model inverted, attach platforms to bottom edges of bulkheads. You may need to trim the back ends of the platform to make it fit.
5. Carefully bend the dash panels to shape and fit to the platform. Cut to length as required.
6. If required, carefully bend the driver vestibule and fit.



7. Remove the beading from the underside and top of the ceiling/upper deck floor and fit in place.
8. Fix the ceiling/upper deck floor.




9. Build up the upper deck sides and bulkheads to make a box. Fit centrally on the upper deck floor.



10. Choose whether to build the open balcony or enclosed car. If building the open balcony, carefully bend the balcony end panels to the shape of the floor, trim to the correct length & fit. If building the enclosed top, carefully bend the upper vestibule to the shape of the floor and fit.



11. Turn model over and fit the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

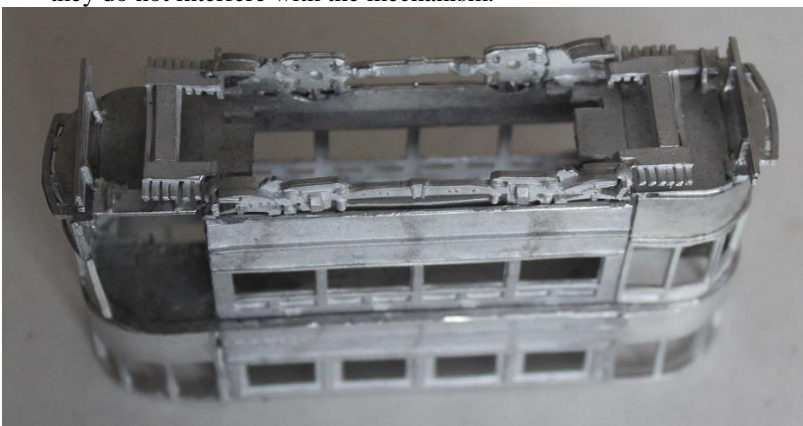

12. Fit the stairs (unless you wish to paint them first).
13. If building the enclosed top deck version, remove the beading from the underside of the roof. Fit the trolley plank to the centre of the roof, but don't fit it to the tram until you have completed the upper deck interior.

