


## KW Trams

### **KW 038 Glasgow Standard Phase 1 open top cars**

#### Parts

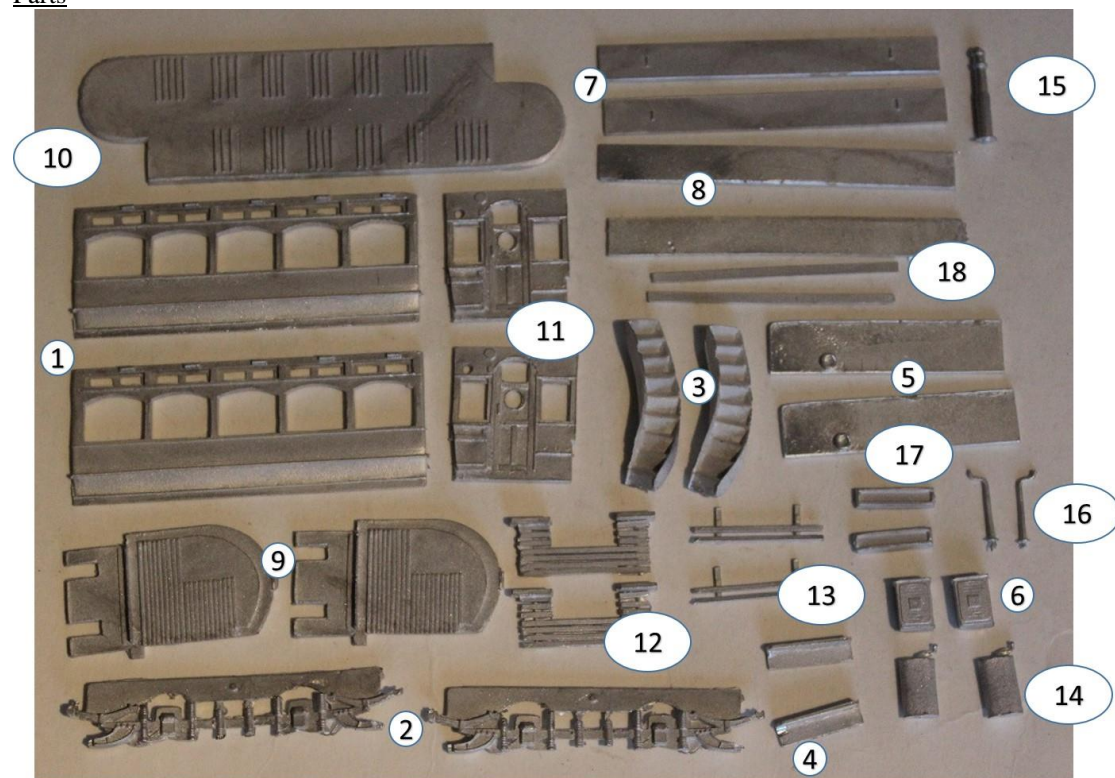


1.	Tram side	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Step	x2
5.	Dash	x2
6.	Resistance box	x2
7.	Upper decency panel sides	x2
8.	Upper decency panel ends	x2
9.	Platform	x2
10.	Upper floor	x1
11.	Lower deck bulkhead	x2
12.	Life tray	x2
13.	Life guard	x2
14.	Controller	x2
15.	Trolley mast	x1
16.	Handbrake	x2
17.	Destination box	x2
18.	Destination slip box	x2

#### Build Steps


1. Attach truck sides to body sides ensuring exact centrality.




2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

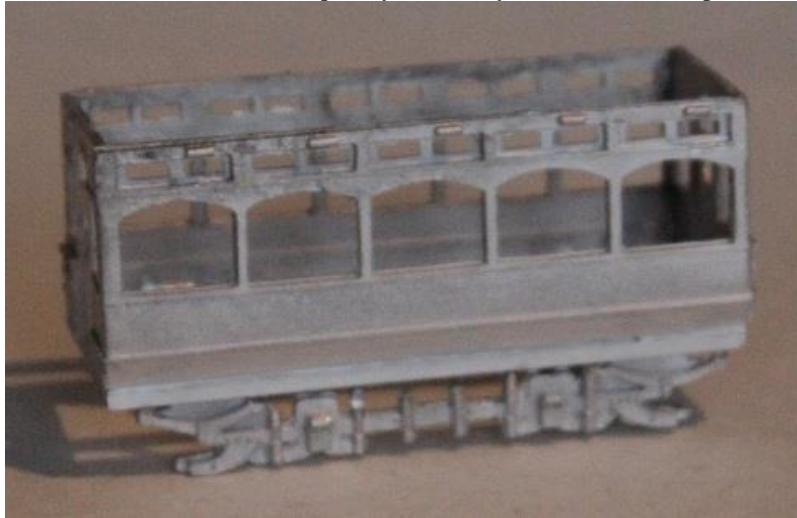


3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
4. Gently bend the dash panels to fit the shape of the platform front, cut to length and fit to platform.

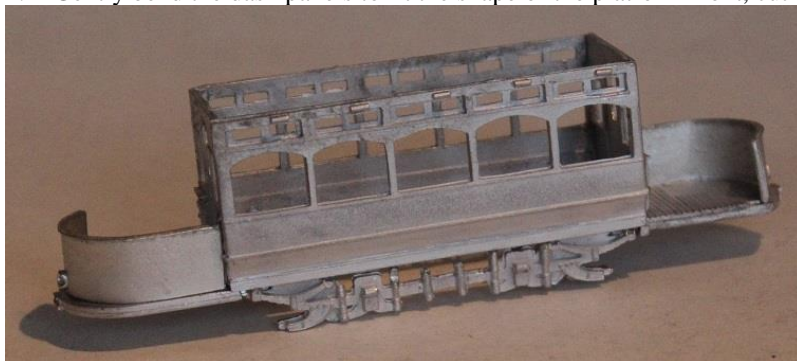


5. Fix the ceiling/upper deck floor piece

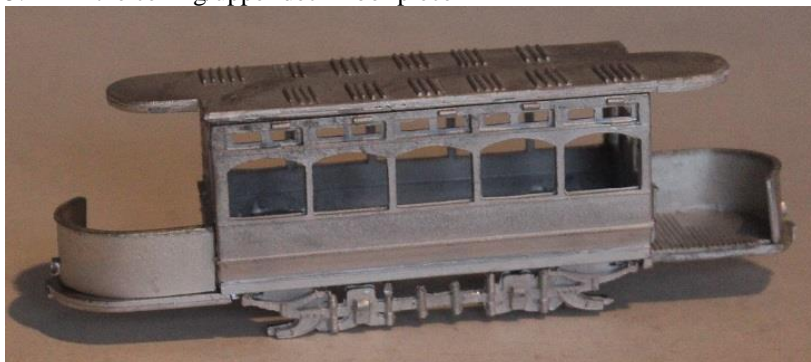

6. Attach upper deck sides to the floor. Carefully bend the upper deck end to shape, cut to length and fit.

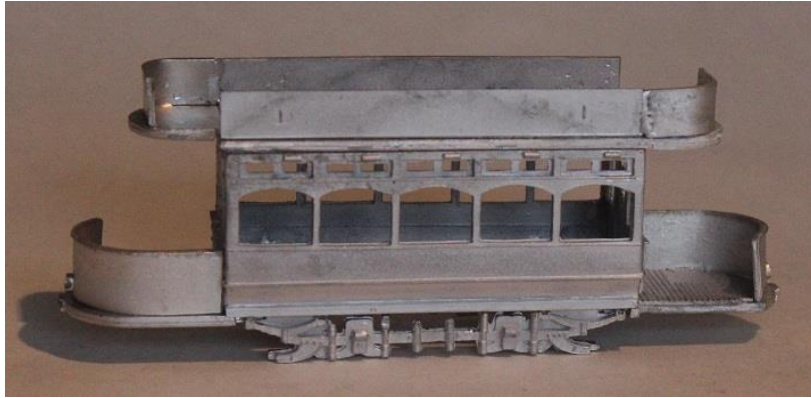

7. Turn model over and fit the steps and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism. Fit the lifeguards.

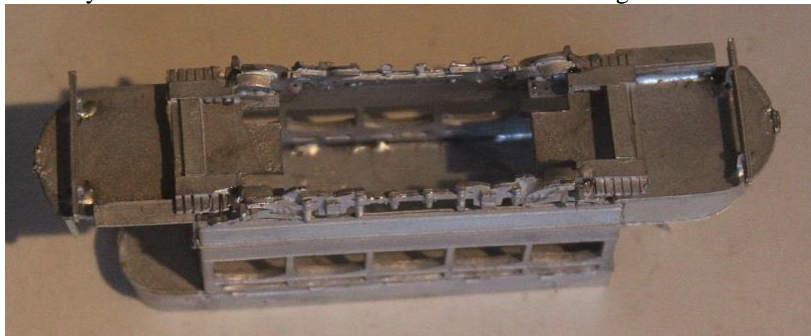

8. Fit the stairs
9. Fit the trolley mast.

