


KW Trams

KW 039a Glasgow Standard Phase II cars


Parts

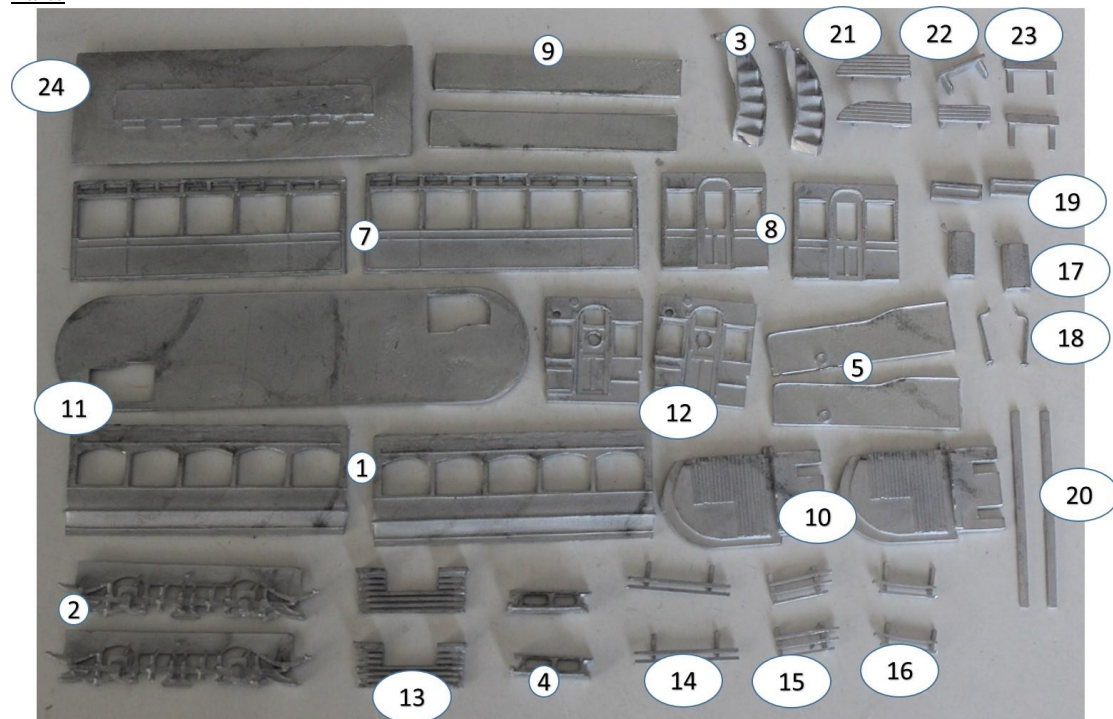

1. Tram side	x2
2. Truck side	x2
3. Stairs	x2
4. Step	x2
5. Dash	x2
6. Resistance box	x1
7. Upper sides	x2
8. Upper bulkheads	x2
9. Upper balcony ends	x2
10. Platform	x2
11. Upper floor	x1
12. Lower deck bulkhead	x2
13. Life tray	x2
14. Front life guard	x2
15. Side lifeguard	x2
16. Step lifeguard	x2
17. Controller	x2
18. Handbrake	x2
19. Destination box	x2
20. Destination slip board	x2
21. Curved balcony seats	x2
22. Straight balcony seats	x2
23. Balcony seat backs	x2
24. Roof	x1
25. Platform cupboard	x1

Build Steps


1. Attach truck sides to body sides ensuring exact centrality.

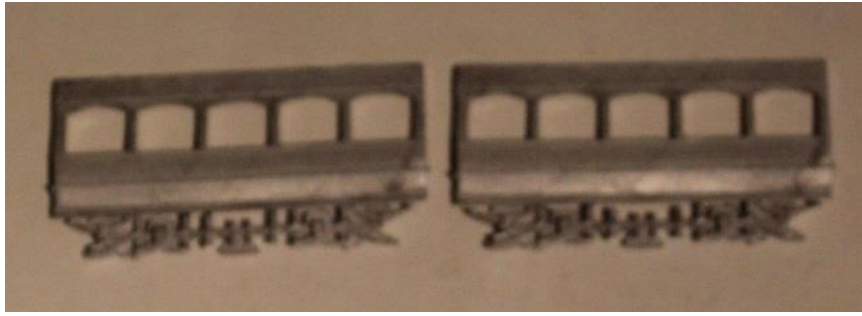


2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.




3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
4. Gently bend the dash panels to fit the shape of the platform front, cut to length and fit to platform.

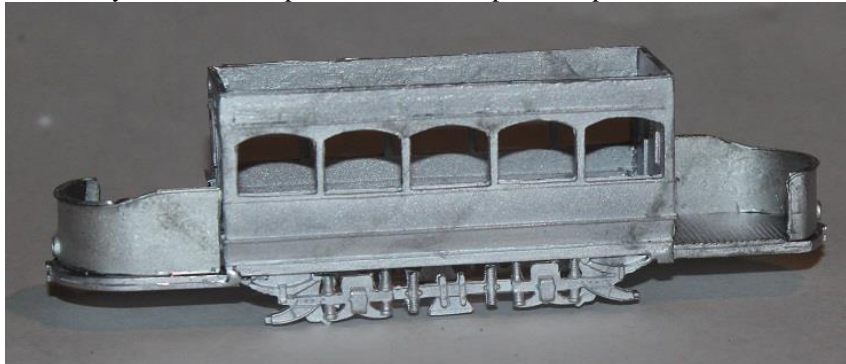

5. Fix the ceiling/upper deck floor piece

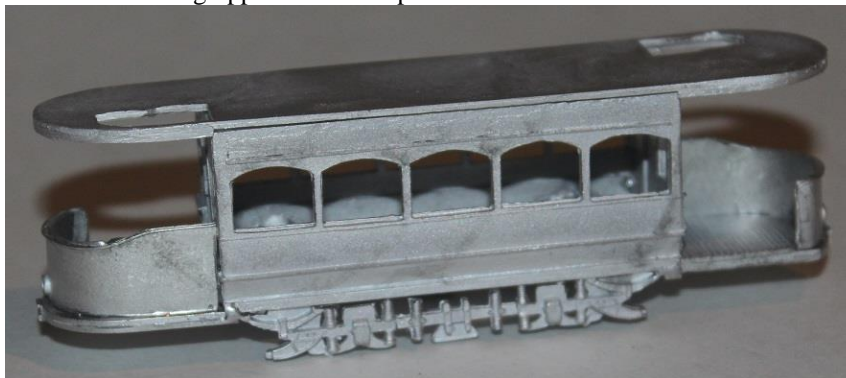

6. Fix upper bulkheads to upper sides and marry subassemblies to produce a box effect.

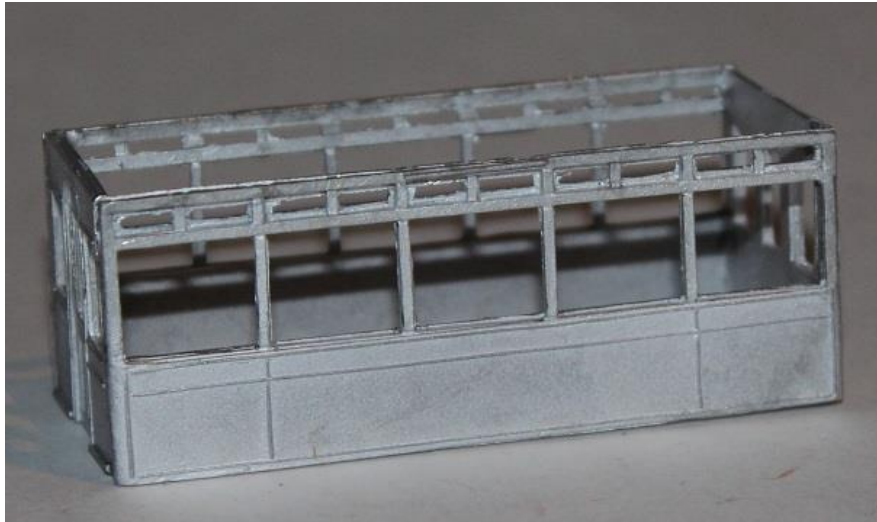


7. Fit upper deck to centre of floor.




8. Carefully bend the balcony ends to shape, cut to length and fit.



9. Turn model over and fit the steps and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism. Fit the lifeguards.

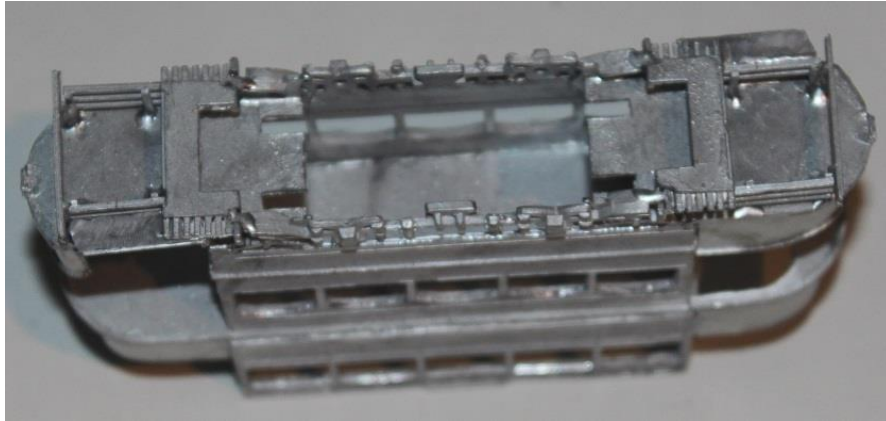

10. Fit the stairs unless you wish to paint them first.

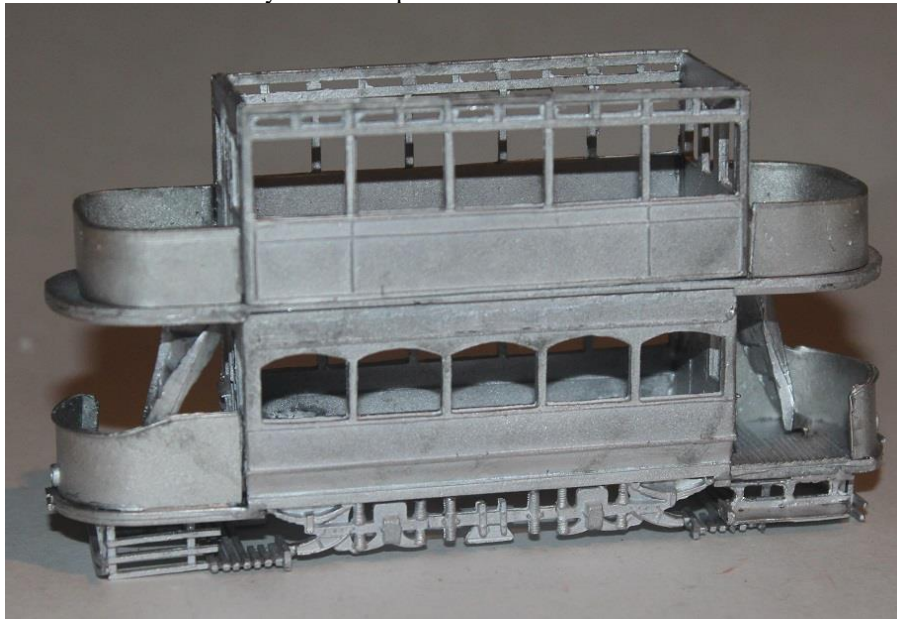

11. Solder balcony seat backs to seats.



