


KW Trams

KW 043 Chester Short Canopy cars


Parts

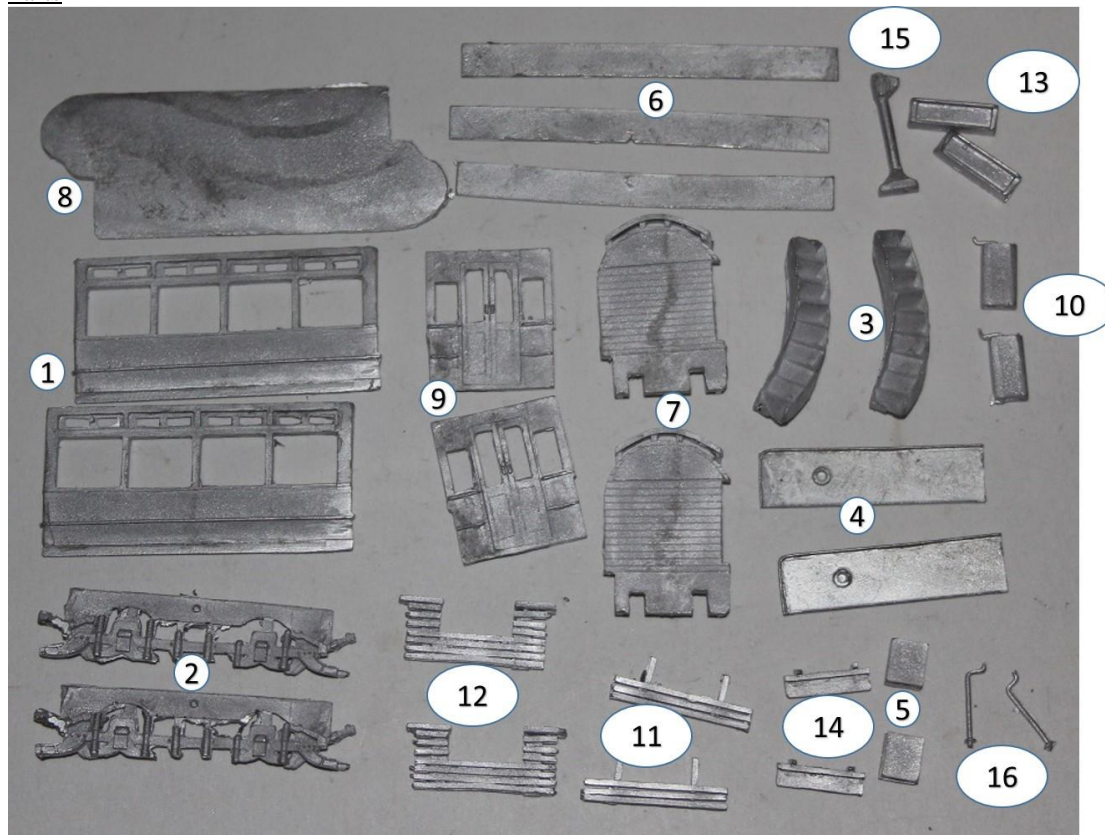


1.	4-window tram side	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Dash panels	x2
5.	Resistance boxes	x2
6.	Upper deck sides and ends	x3
7.	Platforms	x2
8.	Upper floor/ceiling	x1
9.	Bulkheads	x2
10.	Controllers	x2
11.	Life guards	x2
12.	Life trays	x2
13.	Destination boards	x2
14.	Steps	x2
15.	Trolley mast	x1
16.	Handbrakes	x2

Build Steps

1. Attach truck sides to body sides ensuring exact centrality
2. Fix bulk heads to sides squarely and marry all subassemblies to produce a box effect

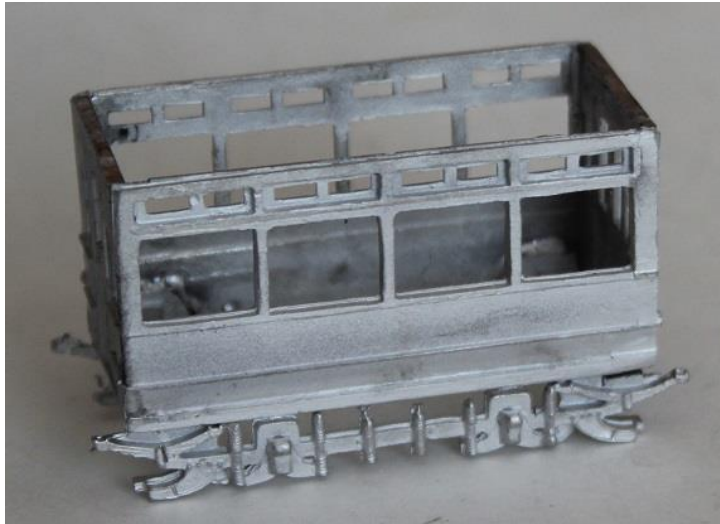


3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform. If necessary trim the edges of the platform to make it fit inside the car body.
4. Gently bend the dash panels to fit the curve of the platform, trim to length and fit to platform.

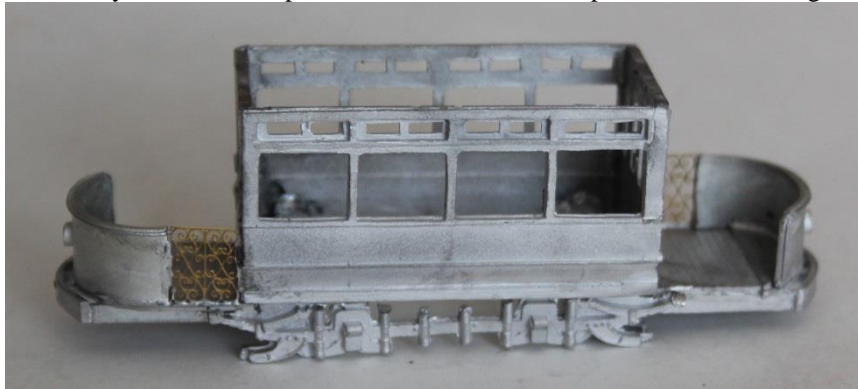

5. Fix the ceiling/upper deck floor piece
6. Attach upper deck sides to the floor. Use the 3rd strip to form a curve for the upper deck ends.



7. Turn model over and fix the steps, the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

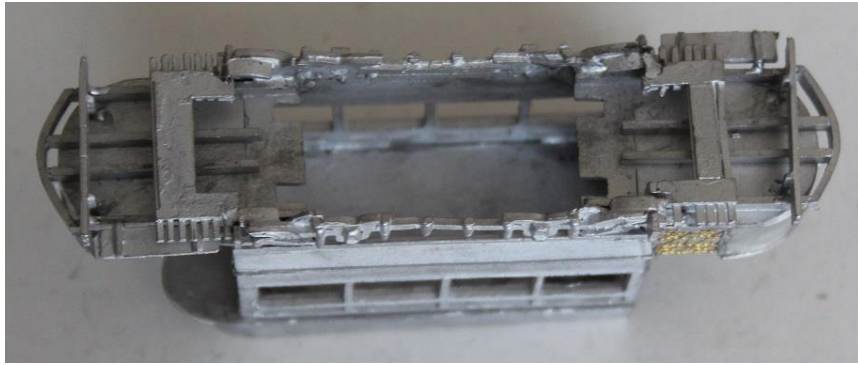

8. Fit the trolley mast.



9. Fit the stairs unless you wish to paint them first.

