


KW Trams

KW 049a Liverpool American open top car


Parts

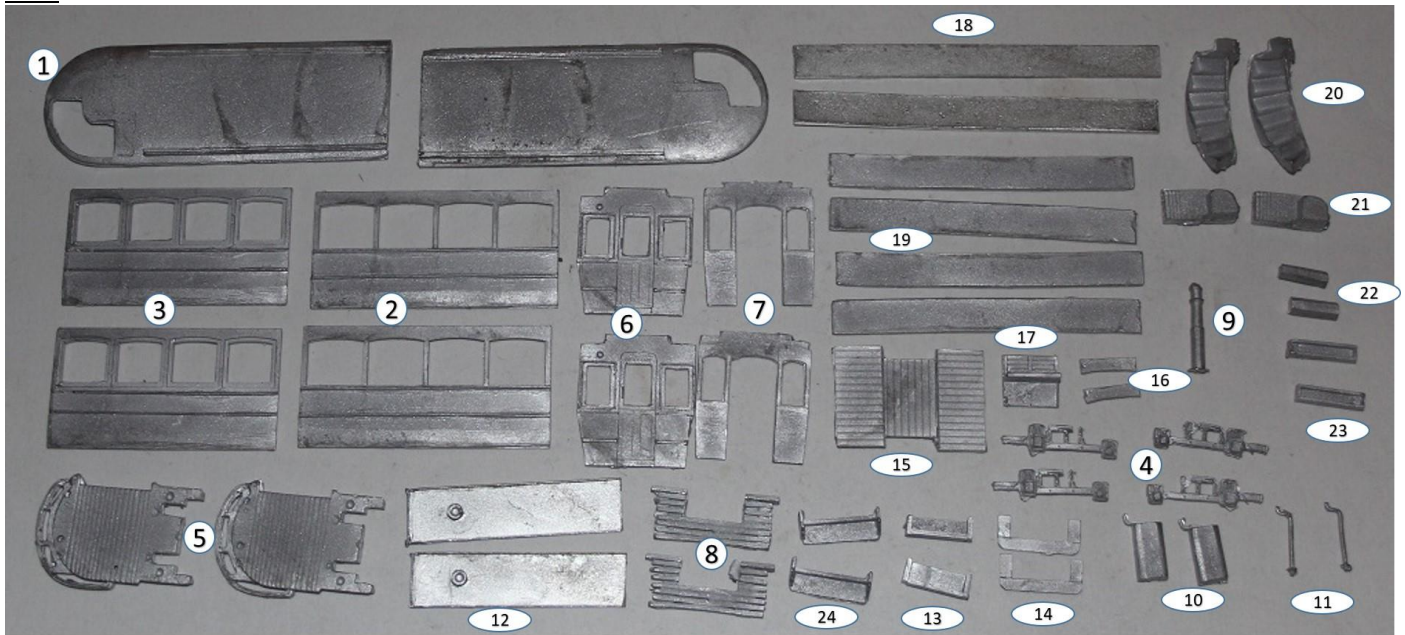

1. Roof	x2
2. Longer side	x2
3. Shorter side	x2
4. Bogie side	x4
5. Platform	x2
6. Bulkhead	x2
7. Inner bulkhead	x2
8. Lifetray	x2
9. Trolley mast	x1
10. Controller	x2
11. Handbrake	x2
12. Dash	x2
13. Middle step	x2
14. Step front	x2
15. Middle platform	x1
16. Middle entrance top	x2
17. Middle seat	x1
18. Balcony ends	x2
19. Upper sides	x4
20. Reversed stairs	x2
21. Reversed stair bases	x2
22. Hex destinations	x2
23. Destination boxes	x2
24. End steps	x2

Build Steps

1. Build the shorter saloon using the 2 sides, one end bulkhead and the middle bulkhead fixing the bulk heads to sides squarely and marry subassemblies to produce a box effect.
2. Build the longer saloon using the two sides and the remaining end and middle bulkheads.

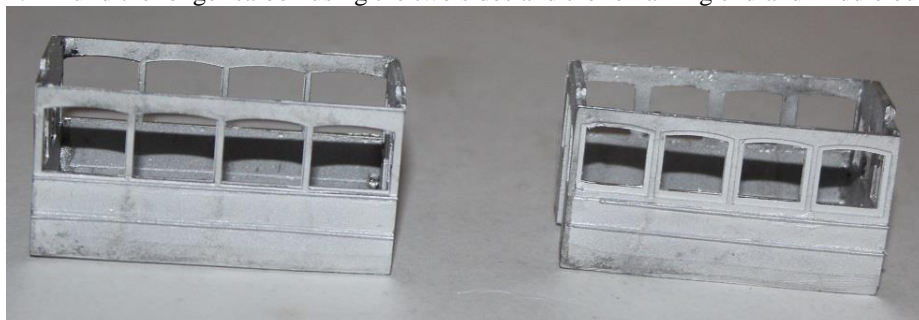

3. Join the 2 saloons using the middle floor and the middle entrance tops.



4. Attach the platforms to bottom edges of bulkheads.
5. Gently bend the dash panels to fit the shape of the platform front, cut to length and fit to platform.



6. Fit the upper floor.




7. Gently bend the balcony end panels to fit the shape of the upper floor end. Fit the upper deck sides, trim to fit as required.



8. With model inverted, fit the middle steps under the middle floor, then fit the step fronts – trim the tops so that they fit flush to the sides and with the top edge flush with the step.
9. Fit the seat in the entrance on one side.



10. Fit the trolley mast to the centre of the upper floor.

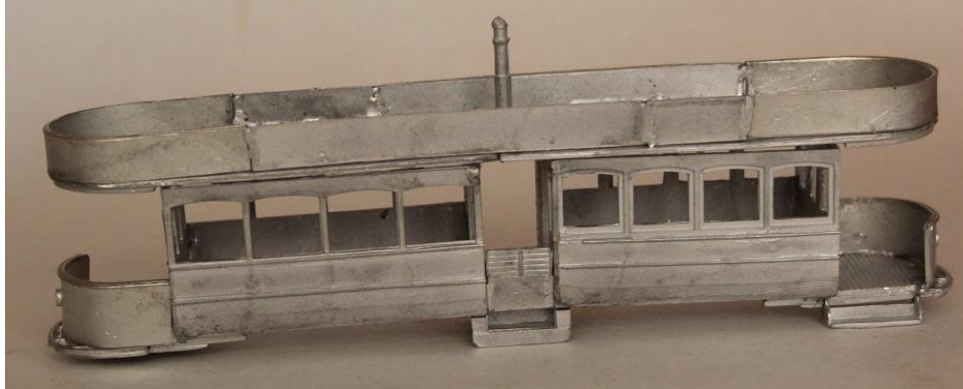

11. Fit the stairs unless you wish to paint them first.

