


KW Trams

KW 051 Brighton 53

Parts

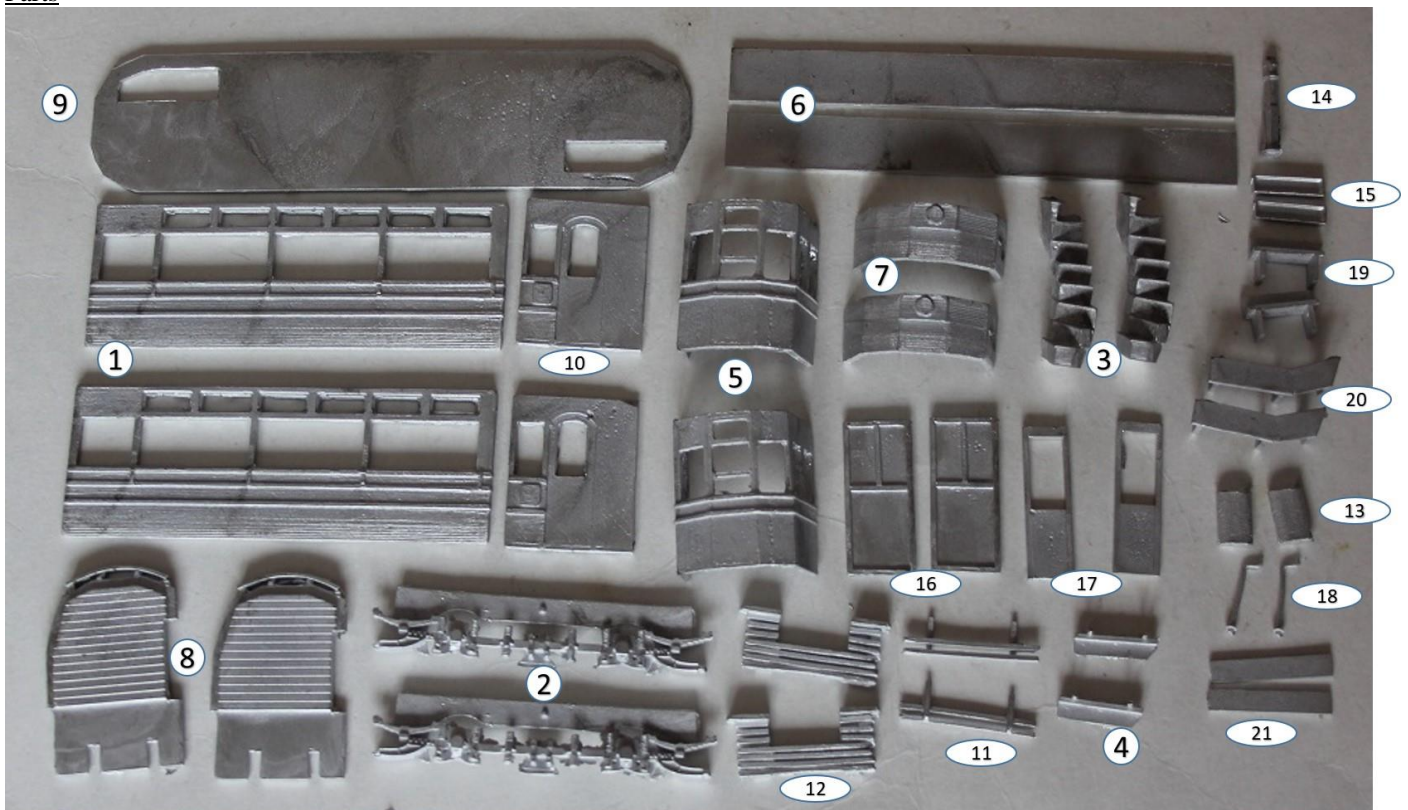


1.	Tram side	x2
2.	Truck side	x2
3.	Stairs	x2
4.	Step	x2
5.	Driver vestibule	x2
6.	Upper decency panel sides	x2
7.	Upper decency panel ends	x2
8.	Platform	x2
9.	Upper floor	x1
10.	Lower deck bulkhead	x2
11.	Life guard	x2
12.	Life tray	x2
13.	Controller	x2
14.	Trolley mast	x1
15.	Destination boxes	x2
16.	Stair panels	x2
17.	Stair doors	x2
18.	Handbrakes	x2
19.	Balcony seats straight	x2
20.	Balcony seats angled	x2
21.	Side destination boards	x2

Build Steps


1. Attach the truck sides to the middle of the saloon section of the body sides.




2. Fix bulk heads to sides squarely and marry all subassemblies to produce a box effect with the additional side window protruding beyond the bulkhead.

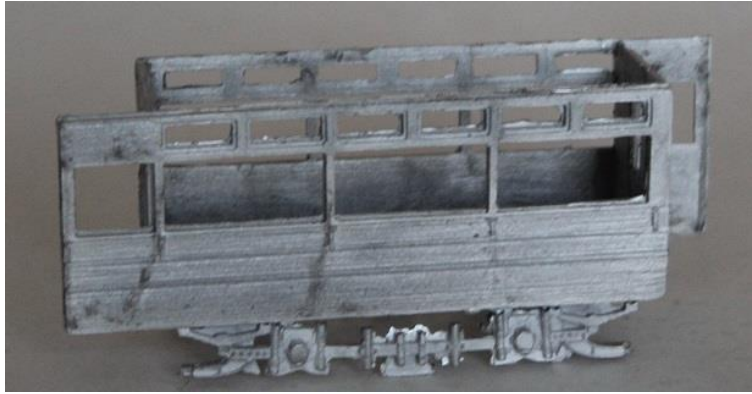

3. Fit the driver vestibule to the platform.

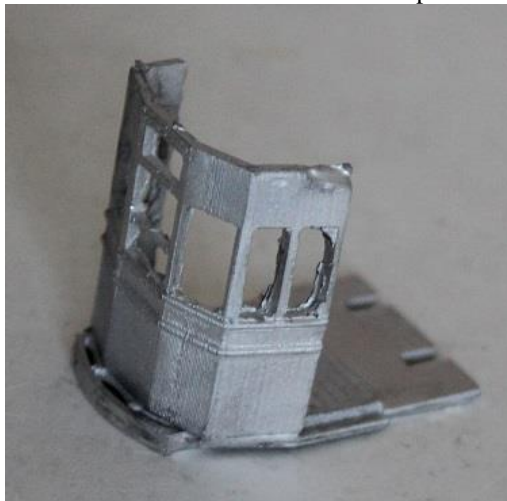


4. File the back edge of the driver vestibule and the edge of the additional window so that the platform fits neatly against the bulkhead.

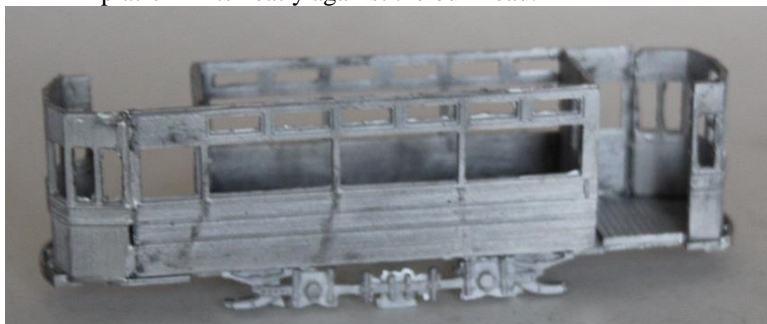


5. Fix the ceiling/upper deck floor piece



6. Attach upper deck sides and ends to the floor.

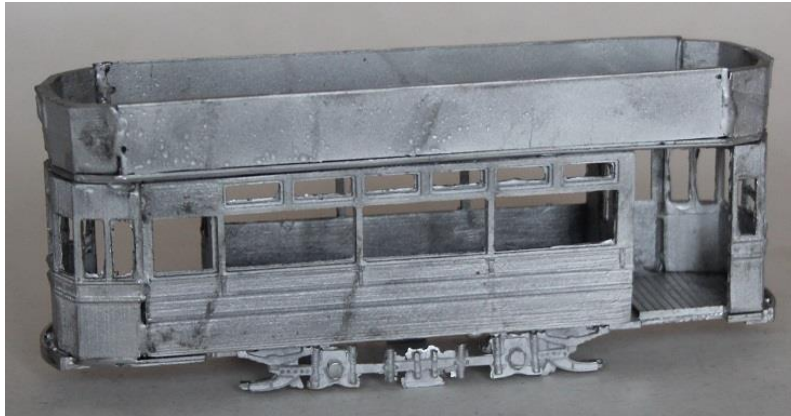

7. Turn model over and attach the under-gear – steps, life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

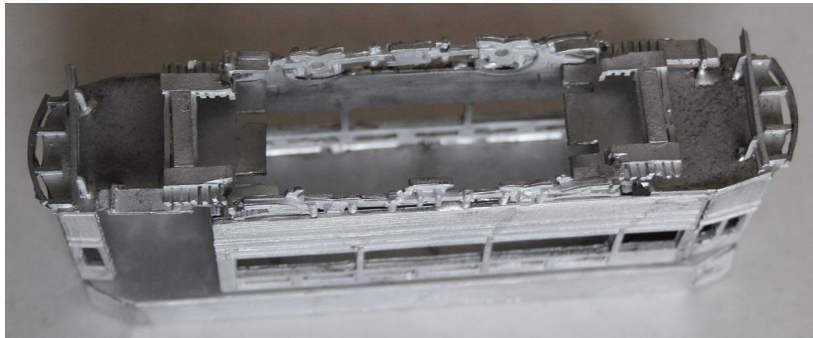

8. Fit the trolley mast and make up a trolley pole from wire

