


## KW Trams

### **KW 060 7sk Seven Window with Straight Tops & Knifeboard Seats**


#### Parts

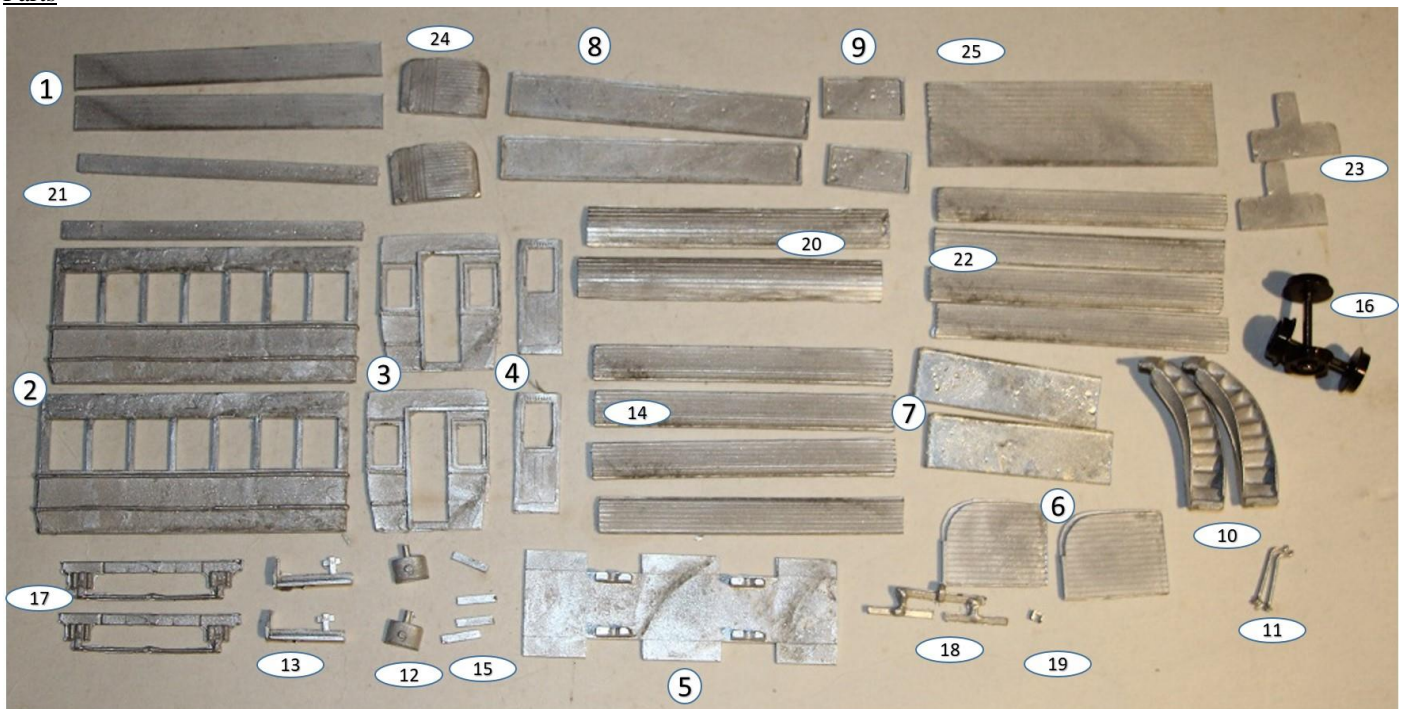


1.	Upper floor sides	x2
2.	Lower side	x2
3.	Bulkhead	x2
4.	Bulkhead door	x2
5.	Floor	x1
6.	Platform	x2
7.	Dash	x2
8.	Long decency panels	x2
9.	Short decency panels	x2
10.	Stairs	x2
11.	Handbrake	x2
12.	Bulkhead lamp	x2
13.	Step	x2
14.	Lower deck seats	x4
15.	Axle retainers	x4
16.	Axles & wheels	x2
17.	Truck sides	x2
18.	Swingle assembly	x1
19.	Coupling	x1
20.	Turtle roof	x2
21.	Upper seat supports	x2
22.	Upper seat bases and backs	x4
23.	Upper seat ends	x2
24.	Upper floor ends	x2
25.	Upper seat base	x1

#### Build Steps


1. Fit the bulkhead doors and lights to the bulkheads.
2. Attach the truck sides centrally to the body sides.

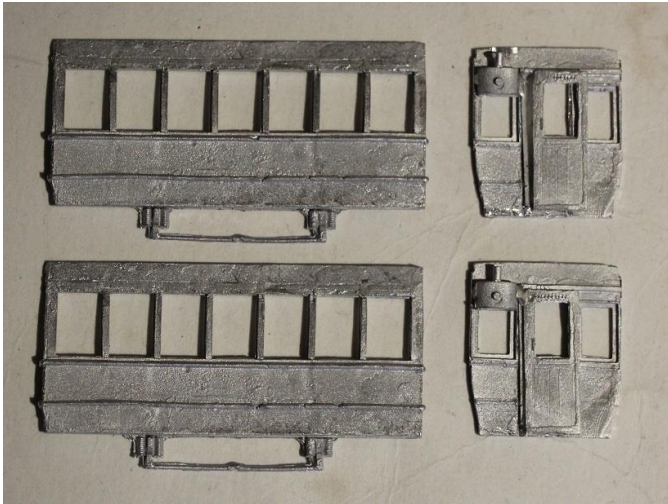

3. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

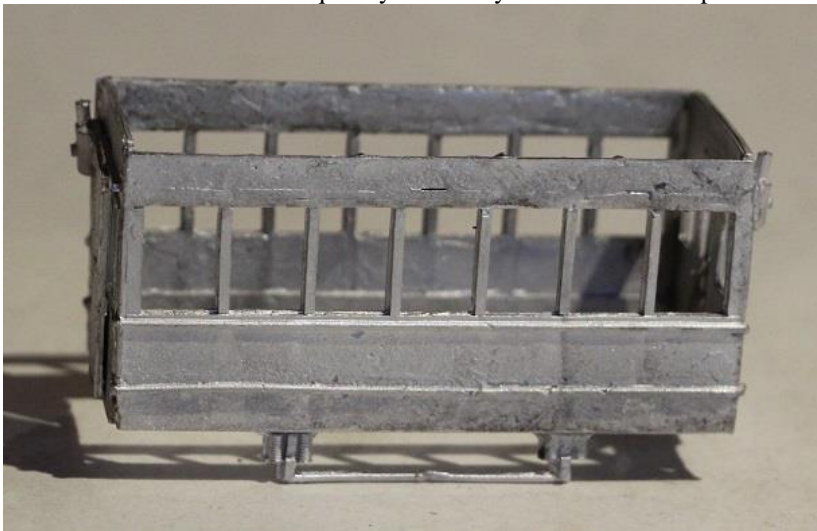

4. With model inverted, attach platforms to bottom edges of bulkheads; with the platform mounted to the left of the car and the outer edge in line with the outer edge of the bulkhead.  
 5. Gently bend the dash panels to fit the shape of the platform front, cut to length and fit to platform in the cut out in the front edge of the platform. Fit any under-stair gates, bars etc. (not supplied) as required.

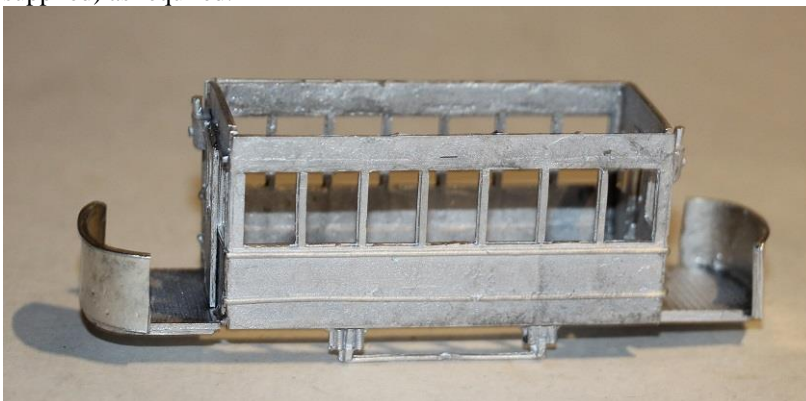

6. Trim the upper floor sides to match the length of the lower body then fit flush to the top edges of the upper sides. Trim the upper seat supports so that they are the same length as the gap between the bulkheads. Then fit them on top of the floor, flush with the inner edge.  
 7. Trim the turtle back roof curves to length and fit.  
 8. Fit the upper seat ends and the upper seat base. Fit the upper deck seats to the upper seat base flush to the outer edge. Fix the upper deck seat backs back to back, then fit to the middle of the seats.



9. Fit the upper floor ends flush to the offside edge of the upper floor.




10. Fix the lower deck seat backs and seat bottoms in place unless you want to paint them and the interior first.



11. Fit the stairs unless you wish to paint them first.



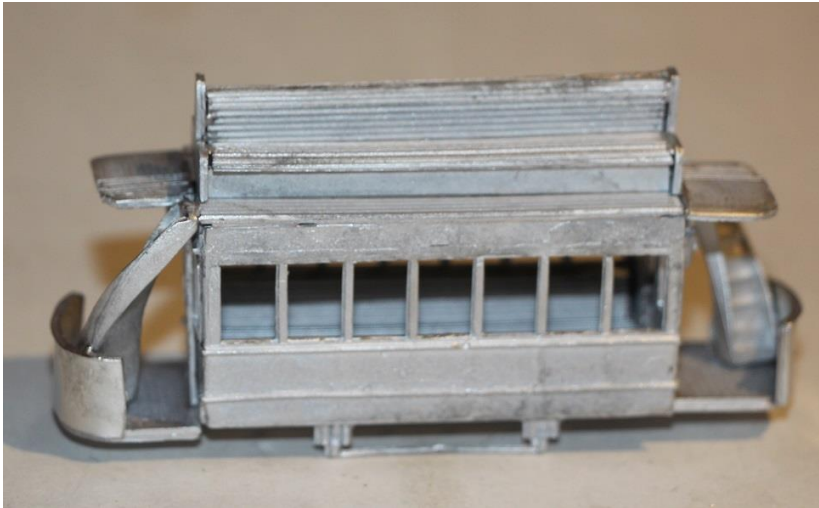

12. Fit the steps to the edges of the platforms. Fit the rear coupler to the lower edge of the rear platform.



13. Make up handrails etc from wire (not included).

