


# KW Trams

## **KW 061 Portsmouth 84 Electrified Horse Car**

### Parts

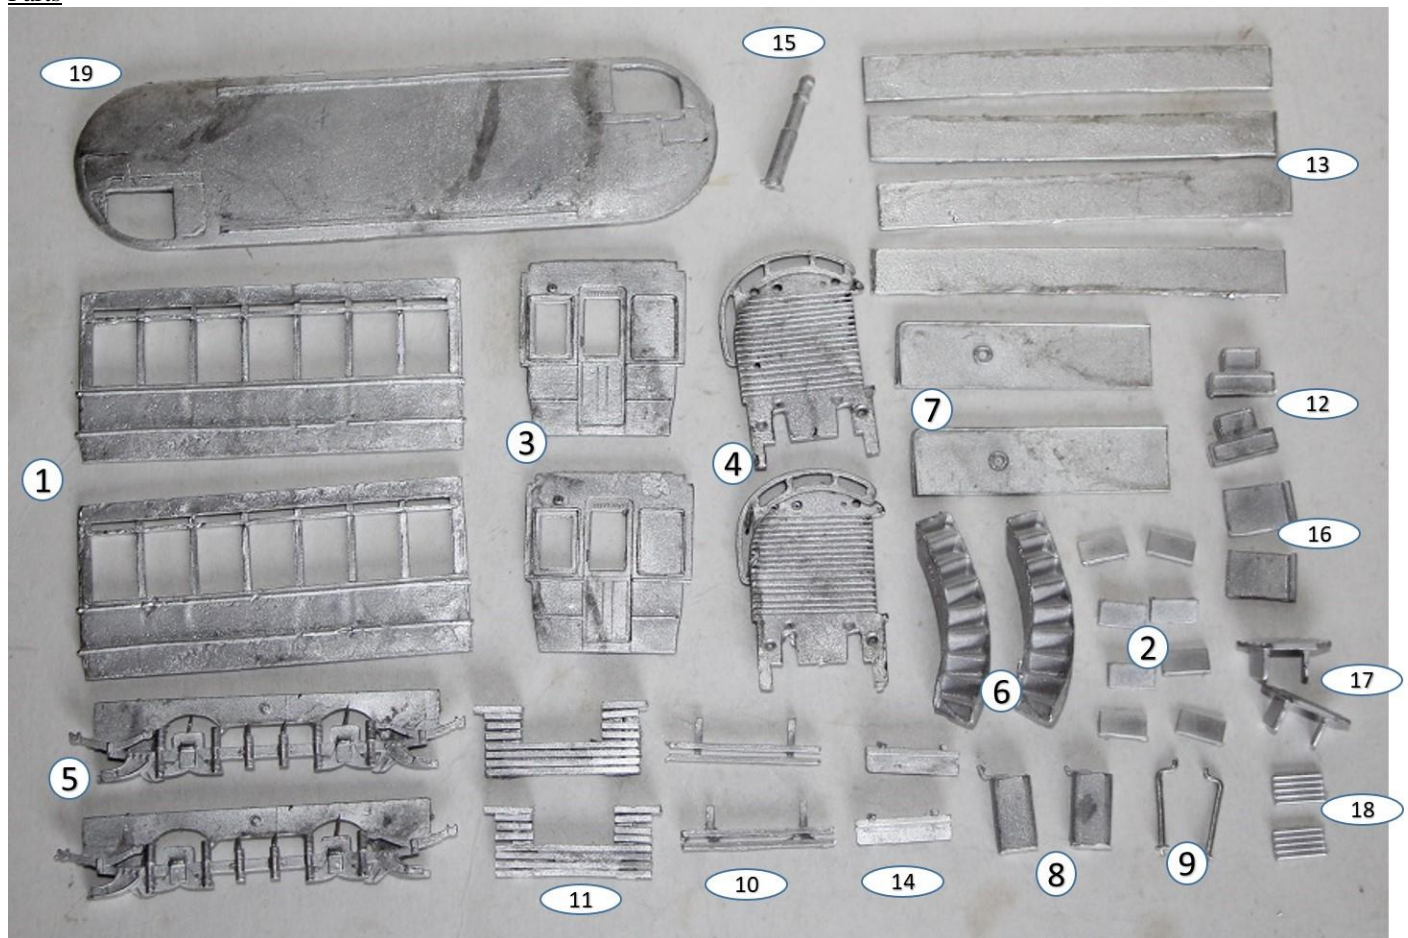


1.	Tram side	x2
2.	Side vents	x8
3.	Bulkhead	x2
4.	Platform	x2
5.	Truck side	x2
6.	Stairs	x2
7.	Dash panels	x2
8.	Controller	x2
9.	Handbrake	x2
10.	Life Guard	x2
11.	Life tray	x2
12.	Destination box	x2
13.	Upper deck decency panel	x4
14.	Steps	x2
15.	Trolley mast	x1
16.	Stair partition	x2
17.	Balcony seats	x2
18.	Balcony seat backs	x2
19.	Upper floor	x1

### Build Steps

1. Fit vents above 1st, 3rd, 5th and 7th windows on tram sides.
2. Attach the truck sides centrally to the saloon sides.




3. Produce the lower saloon box of 2 lower sides and 2 bulk heads by assembly on a flat surface in the upside down position

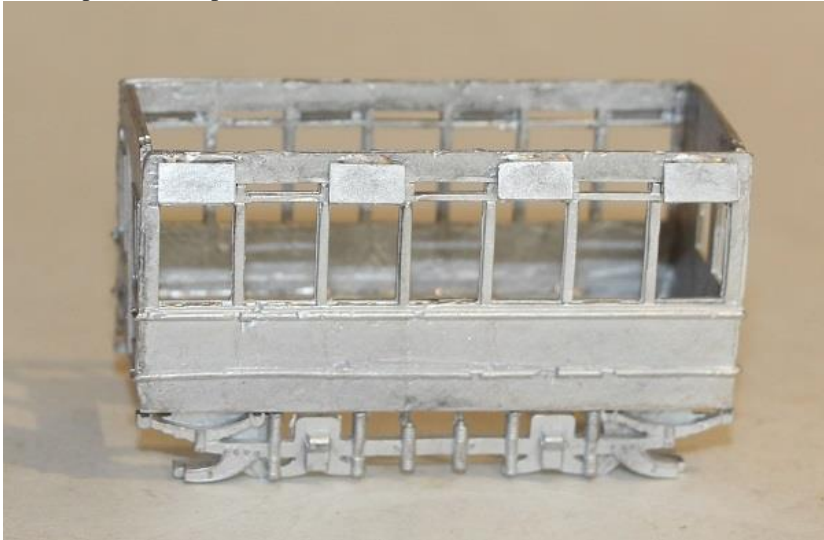


4. Attach the platforms centrally under the bulkheads with the raised sections flush with the back of the bulkhead.

5. Bend the dash panels to match the shape of the platform, trim to fit and fix in place.

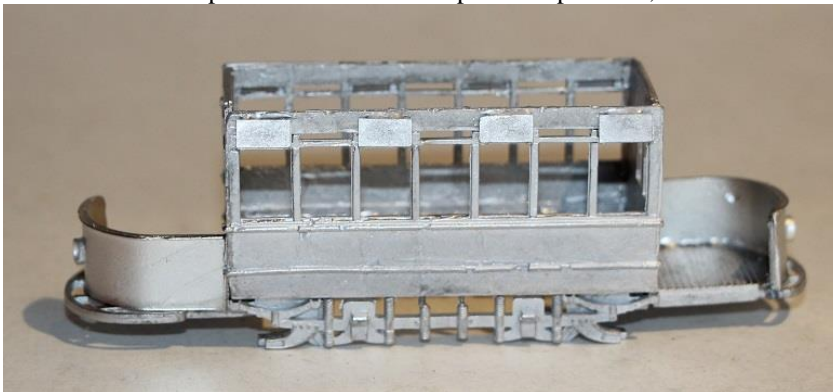

6. Fix the ceiling / floor.

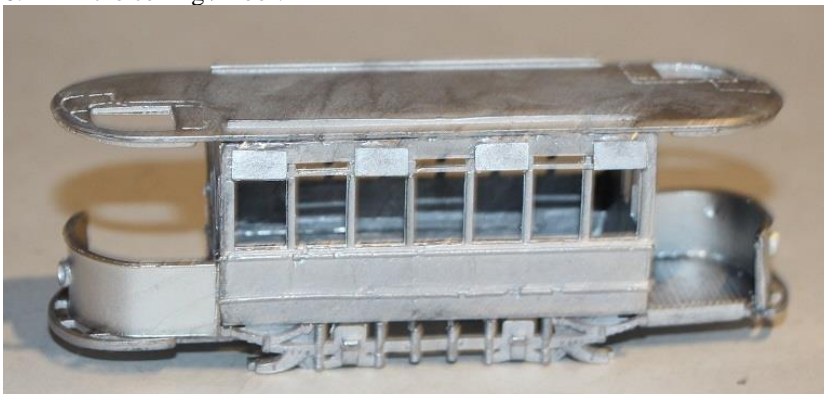


7. Fit the open top sides, bending the end panels to match the shape of the ends.





8. Turn model over to fit the steps, lifeguards and life trays.

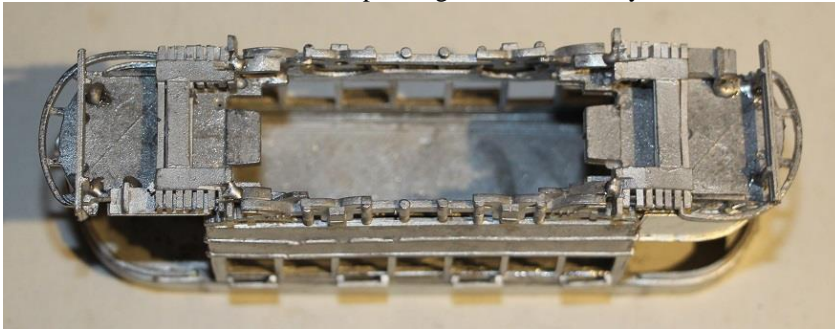

9. Fit the stair partitions at the top of the stairs.

10. Fit the trolley mast to the left of the middle of the upper floor.



11. Fit the stairs unless you wish to paint them first.



12. Fit the seta back vertically to the middle of the back edge of the balcony seat.



13. Using brass wire (not supplied) with the help of prototypical photos, drill and fit handrails

