

KW Trams

KW 064 Norwich 1-40

Parts



1. Upper floor	x2
2. Tram side	x2
3. Bulkhead	x2
4. Peckham truck side	x2
5. M&G truck side	x2
6. Platform	x2
7. Dash panels with headlamp	x2
8. Dash panels without headlamp	x2
9. Upper deck side decency panel	x2
10. Upper deck end decency panel	x2
11. Life tray	x2
12. Life Guard	x2
13. Steps	x2
14. Destination box	x2
15. Controller	x2
16. Handbrake	x2
17. Trolley mast	x1
18. Stairs	x2
19. Long side destination board	x2
20. Short side destination board	x2
21. Resistance box	x2
22. End destination board	x2

Build Steps

1. Attach the truck sides centrally to the saloon sides.



2. Produce the lower saloon box of 2 lower sides and 2 bulk heads by assembly on a flat surface in the upside-down position



3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You will need to trim the edges of the platforms so that they fit inside the body.
4. Fit a resistance box next to the bulkhead on the nearside of the platform.
5. Bend the dash panels to match the shape of the platform, trim to length so that it fits against the resistance box and fix in place.



6. If required, fit half of the under-stair gate (not supplied) above each resistance box.




7. On a flat surface, solder the two halves of the upper floor together then fit centrally to the body.



8. If required, fit the open top sides, bending the end panels so that they run across the middle of the floor extension and then round to the top of the stairs. Trim the lower edge of the end decency panel to get a good fit to the floor.

9. Turn model over to fit the steps, lifeguards and life trays.

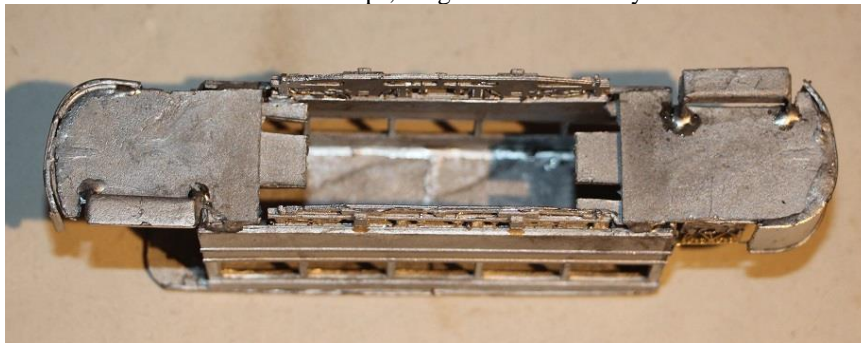

10. Fit the trolley mast to the left of the middle of the upper floor.

11. Fit the stairs unless you wish to paint them first



12. Using brass wire (not supplied) with the help of prototypical photos, drill and fit handrails.

