


## KW Trams

### **KW 065a Norwich trailer**

#### Parts

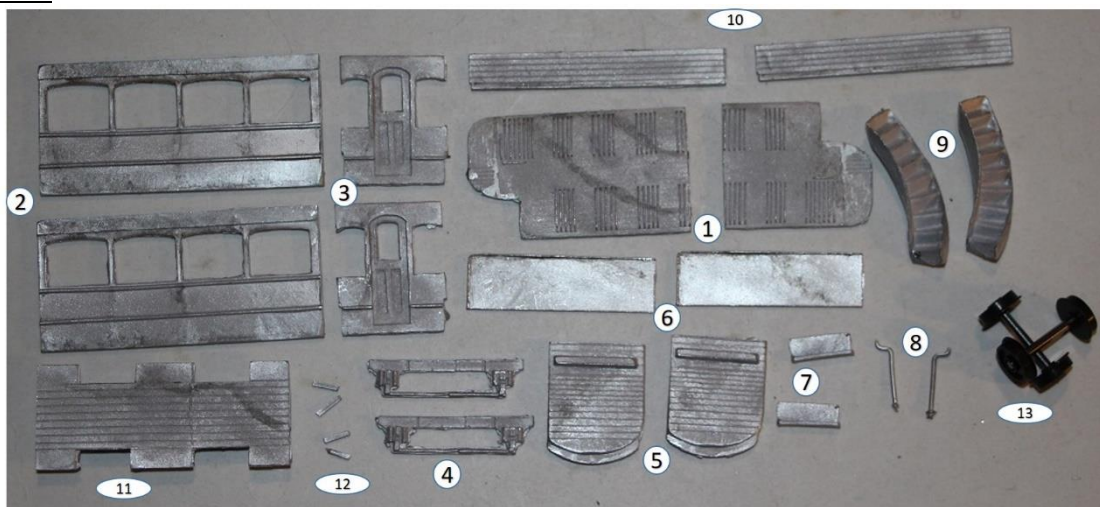


1. Upper floor, short & long sections	x2
2. Tram side	x2
3. Bulkhead	x2
4. Trailer truck side	x2
5. Platform	x2
6. Dash panels without headlamp	x2
7. Steps	x2
8. Handbrake	x2
9. Stairs	x2
10. Lower deck seats	x2
11. Lower deck floor	x1
12. Axle retainers	x4
13. Axles & wheels	x2

#### Build Steps

1. Attach the truck sides centrally to the saloon sides.



2. Produce the lower saloon box of 2 lower sides and 2 bulk heads by assembly on a flat surface in the upside-down position

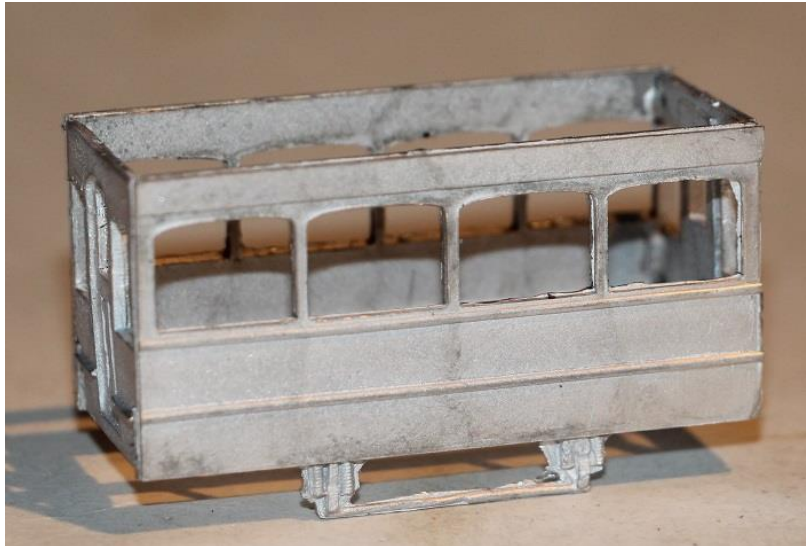


3. Attach the platforms centrally under the bulkheads with the lip behind the bulkhead.
4. Fit an under-stair gate on the nearside of the platform.
5. Bend the dash panels to match the shape of the platform, trim to length so that it fits against the under-stair gate and fix in place.




6. On a flat surface, solder the two halves of the upper floor together then fit centrally to the body.



7. Fit the axle retainers to the lower floor (the wheels will be inserted once the lower deck has been painted), but don't fix in place until the interior is painted and the wheels are fitted.

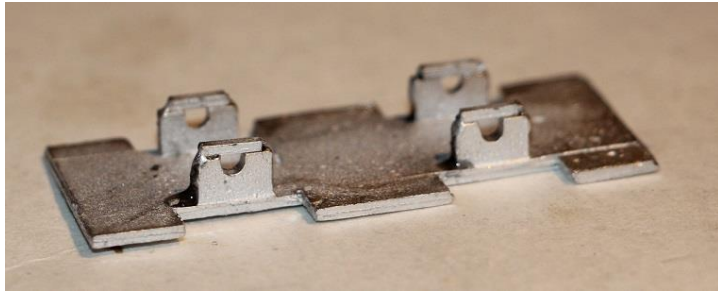

8. Turn model over to fit the steps.

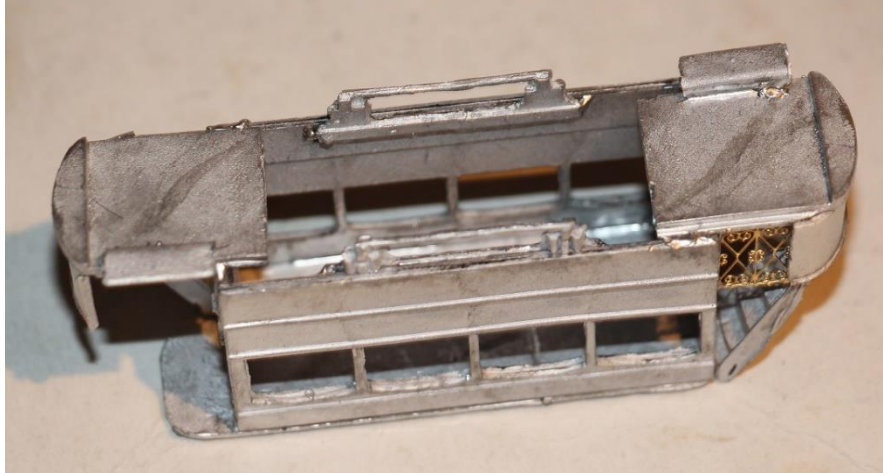

9. Fit the stairs unless you wish to paint them first.

10. Using brass wire (not supplied) with the help of prototypical photos, drill and fit handrails

