


KW Trams

KW 067 Coventry ex Norwich cars 37 to 41

Parts

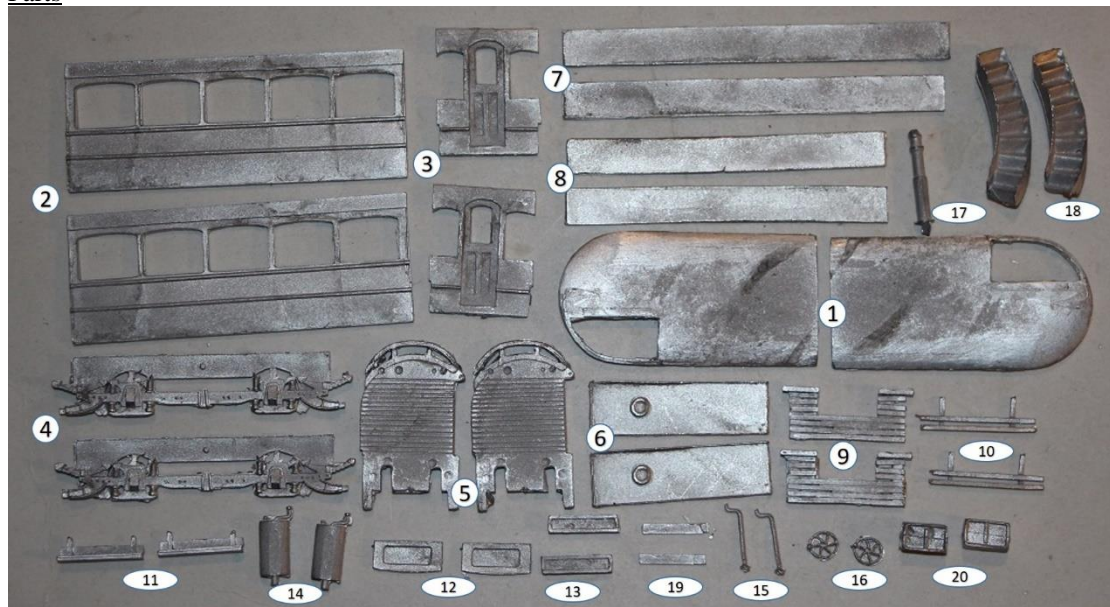


1. Upper floor	x2
2. Tram side	x2
3. Bulkhead	x2
4. Peckham truck side	x2
5. Platform	x2
6. Dash panels with headlamp	x2
7. Upper deck side decency panel	x2
8. Upper deck end decency panel	x2
9. Life tray	x2
10. Life Guard	x2
11. Steps	x2
12. End destination box	x2
13. Side window destination box	x2
14. Controller	x2
15. Handbrake	x2
16. Handbrake wheel	x2
17. Trolley mast	x1
18. Stairs	x2
19. Short side destination board	x2
20. Resistance box	x2

Build Steps

1. Attach the truck sides centrally to the saloon sides.



2. Produce the lower saloon box of 2 lower sides and 2 bulk heads by assembly on a flat surface in the upside-down position.

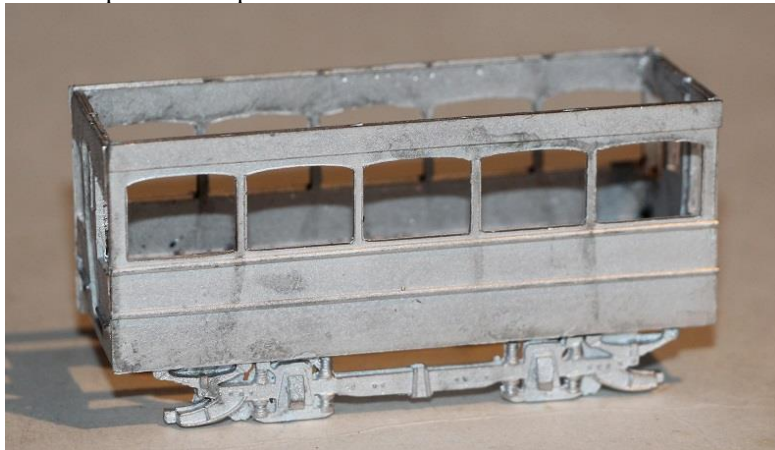


3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You will need to trim the edges of the platforms so that they fit inside the body.
4. Bend the dash panels to match the shape of the platform, trim to length so that it fits against the bulkhead and fix in place.



5. On a flat surface, solder the two halves of the upper floor together then fit centrally to the body.
6. Fit the open top sides, bending the end panels so that the end fits the shape of the upper floor.



7. Turn model over to fit the steps, lifeguards and life trays.

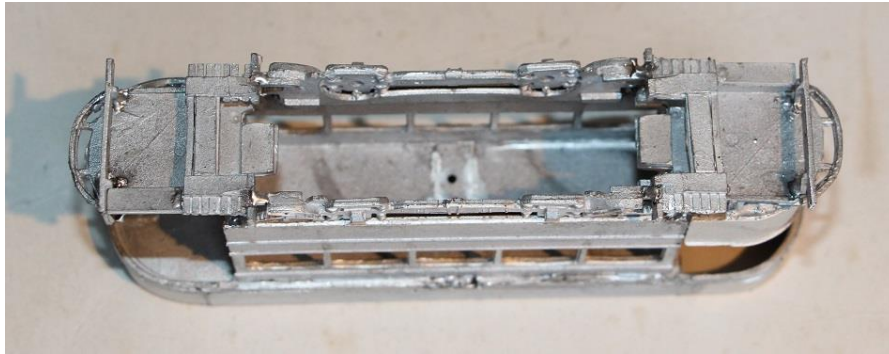

8. Fit the trolley mast to the left of the middle of the upper floor.
9. Fit the stairs unless you wish to paint them first.

