


KW Trams

KW 068 Cruden Bay

Parts

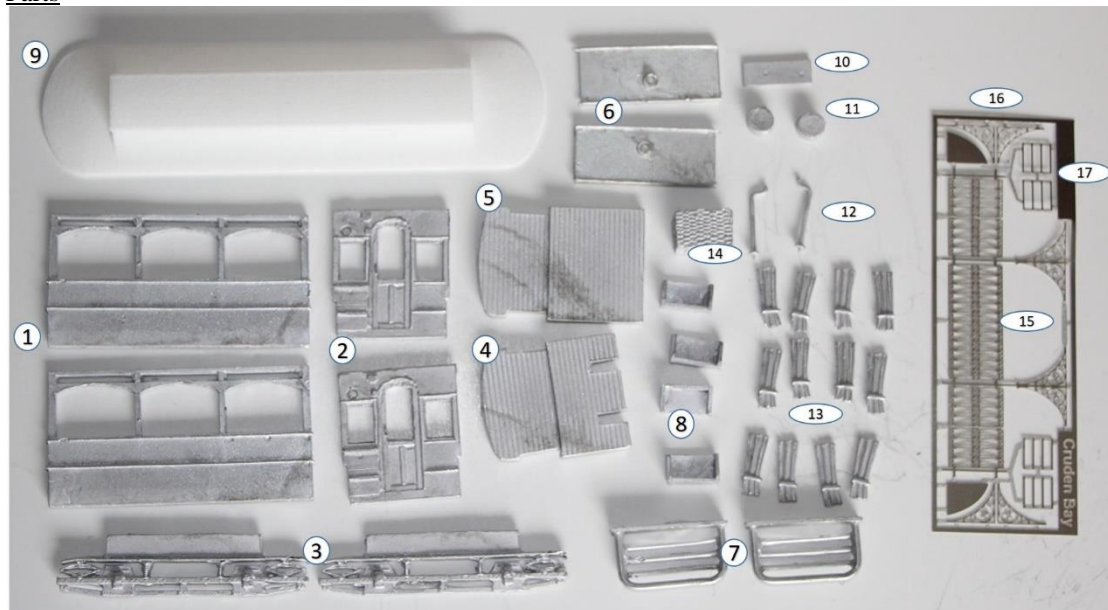

1.	Tram side	x2
2.	Bulkhead	x2
3.	Peckham truck side	x2
4.	Short platform	x1
5.	Long platform	x1
6.	Dash panels with headlamp	x2
7.	Life tray	x2
8.	Steps	x4
9.	Roof (3D print)	x1
10.	Trolley plank	x1
11.	Controller	x2
12.	Handbrake	x2
13.	Curtains	x12
14.	Laundry basket	x1
15.	Platform gates (etched)	x1
16.	Bulkhead roof supports (etch)	x4
17.	Bulkhead window bars (etch)	x4

Build Steps

1. Fit the bulkhead window bars to the bulkhead windows.



2. Attach the truck sides so that the centre of the truck side is lined up with the second and third saloon window pillars.



3. Produce the lower saloon box of 2 lower sides and 2 bulk heads making sure that the side and end beadings line up.
4. Attach the short platform (with the 2 slots for the motor) under the bulkhead away from the truck sides, with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platform so that it fits inside the body.
5. Fit the long platform with the back end flush with the back of the bulkhead. You may need to trim it to fit between the truck sides.




6. Turn model over to fit the steps under the cut outs in the platforms. Fit the lifeguards against the outer ends of the truck sides.



7. Using a pair of parallel pliers, bend the ends of the dash panels to match the shape of the platform and fit in place.



8. Carefully remove the gates from the brass etch. Note – this includes the upper roof supports. Bend the etch to fit round the raised section of the platform and fit in place.
9. Fit the other bulkhead roof supports in the 4 corners of the saloon.

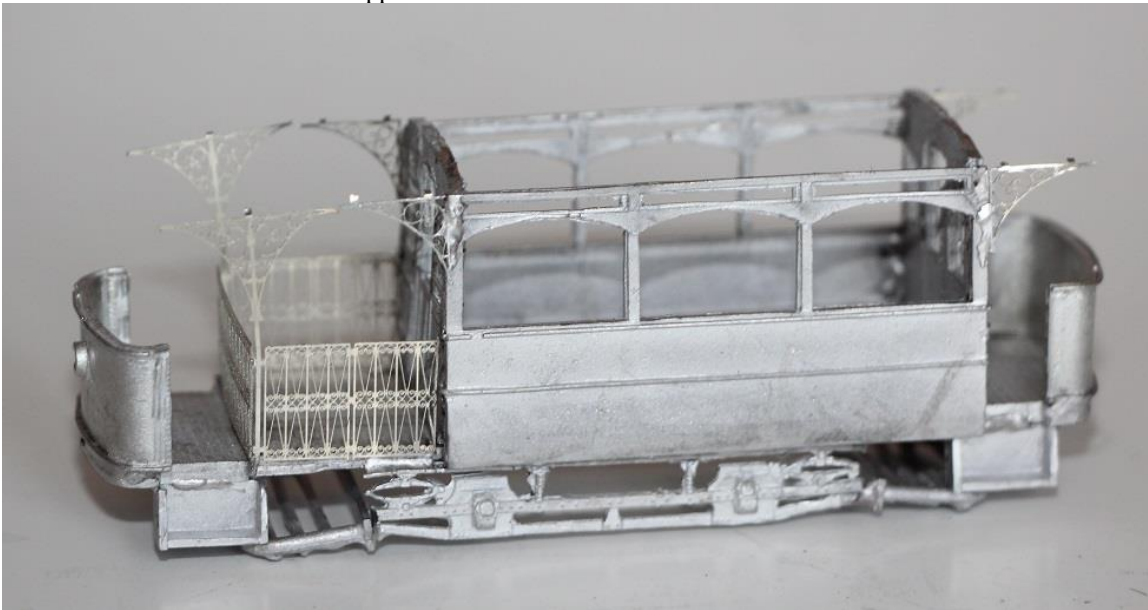

10. Paint the interior and window edges and glaze (not supplied)
11. Fit controllers to the left of the headlamps from the driver's view and the hand brake staffs, to the right so driver has each to hand.
12. Fit the roof.

