


## KW Trams

### **KW 071 Preston Balcony**


#### Parts

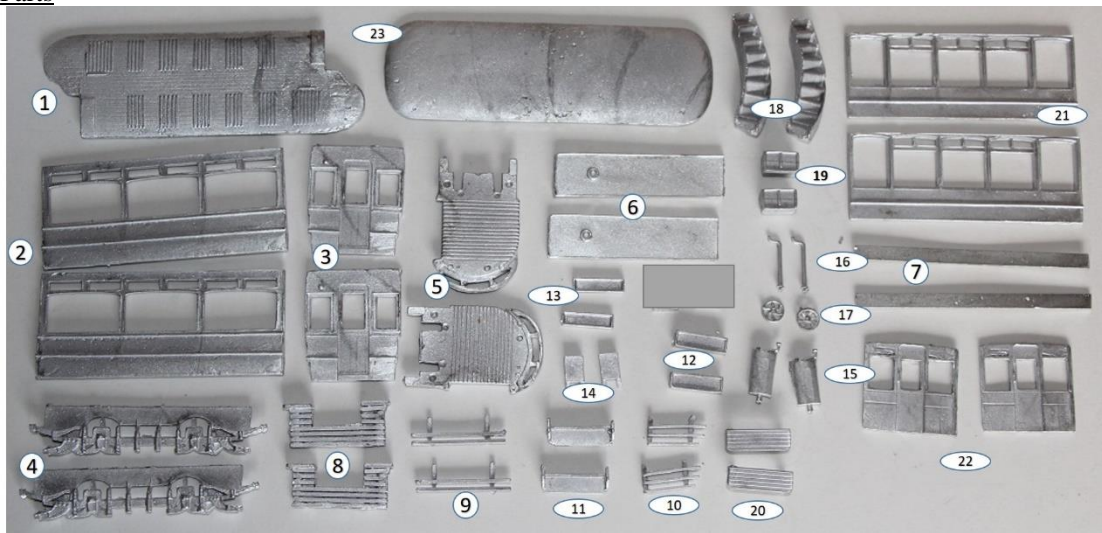


1. Upper floor	x1
2. Tram side	x2
3. Bulkhead	x2
4. Truck side	x2
5. Platform	x2
6. Dash panels	x2
7. Upper deck decency panel	x1
8. Life tray	x2
9. Front life Guard	x2
10. Side lifeguard	x2
11. Steps	x2
12. Front destination box	x2
13. Side destination box	x2
14. Destination letter box	x2
15. Controller	x2
16. Handbrake	x2
17. Handbrake wheels	x2
18. Stairs	x2
19. Resistance box	x2
20. Balcony seat	x2
21. Upper sides	x2
22. Upper bulkheads	x2
23. Roof	x1

#### Build Steps


1. Attach the truck sides centrally to the saloon sides.

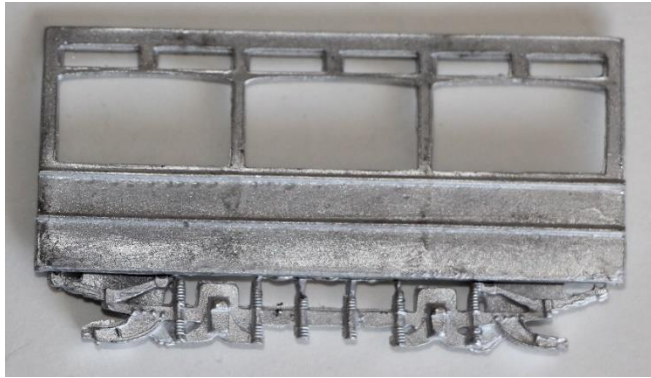

2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

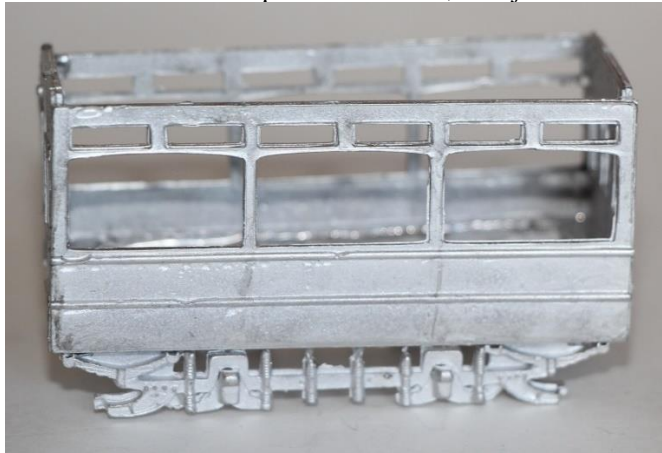


3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platforms so that they fit inside the body.
4. Fit an under-stair gate (not supplied) on the near side of the platform touching the bulkhead.
5. Bend the dash panels to match the shape of the platform, trim to length so that it fits against the under-stair gate and fix in place.

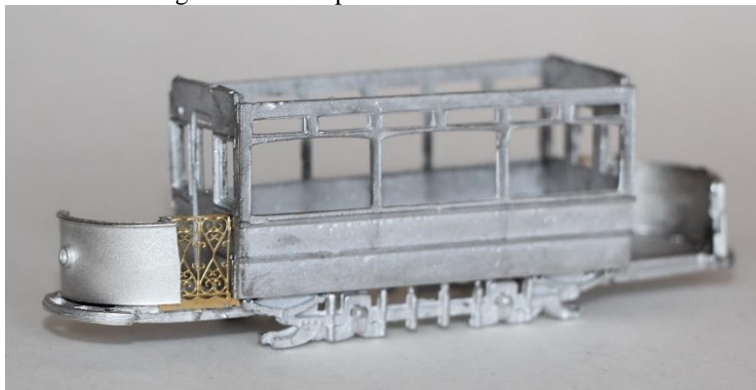


6. Fit the upper floor centrally to the body.



7. Fit the upper sides and bulkheads together on a flat surface. Note – the bulkheads do not fit at the ends of the sides but one window in so that they enclose the middle 3 window section only. Fit this to the centre of the upper deck floor.

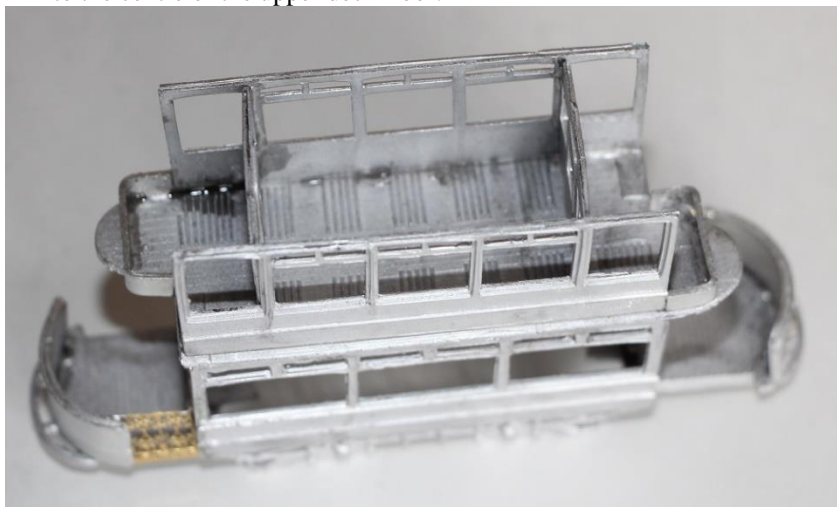


8. Fit the balcony sides, bending the end panels so that they run across the middle of the floor extension and then round to the top of the stairs. If required, trim the lower edge of the end decency panel to get a good fit to the floor.

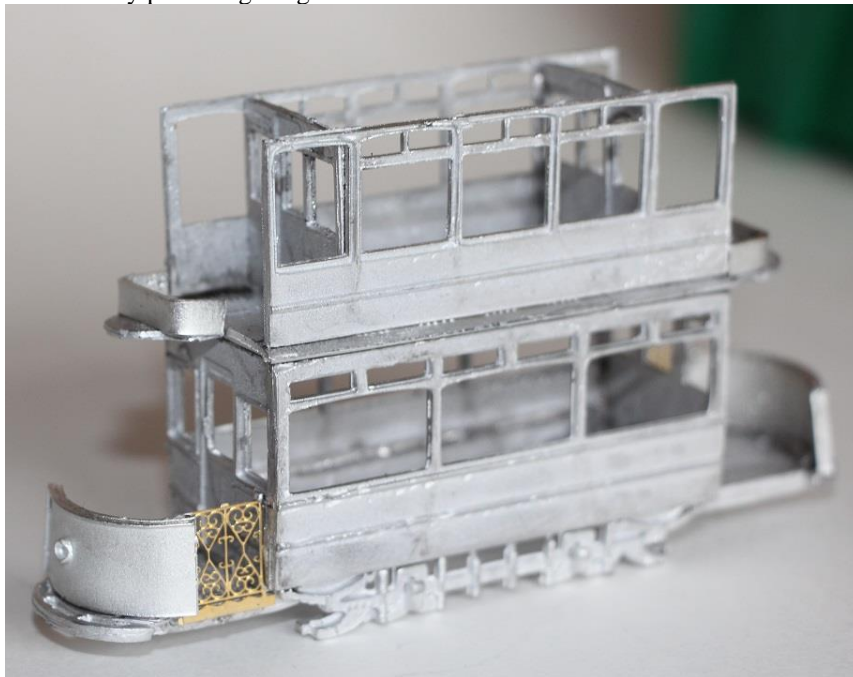

9. Turn model over to fit the steps, lifeguards and life trays. Fit the side lifeguards if required.



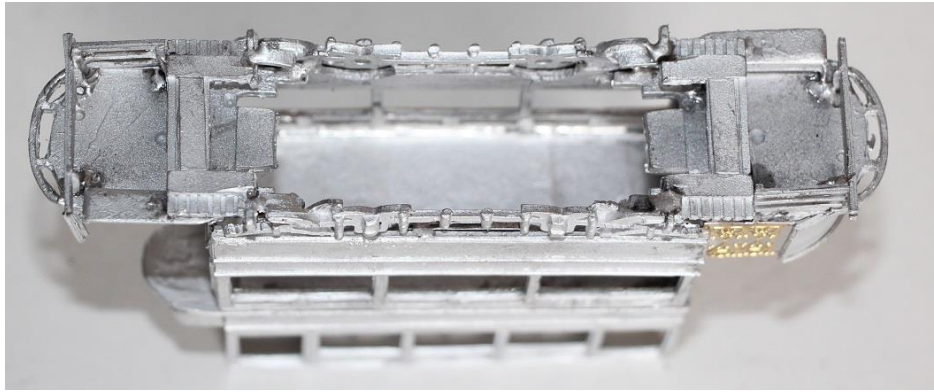

10. Fit the stairs unless you wish to paint them first.

