


## KW Trams

### KW 073 Preston ex Sheffield

#### Parts

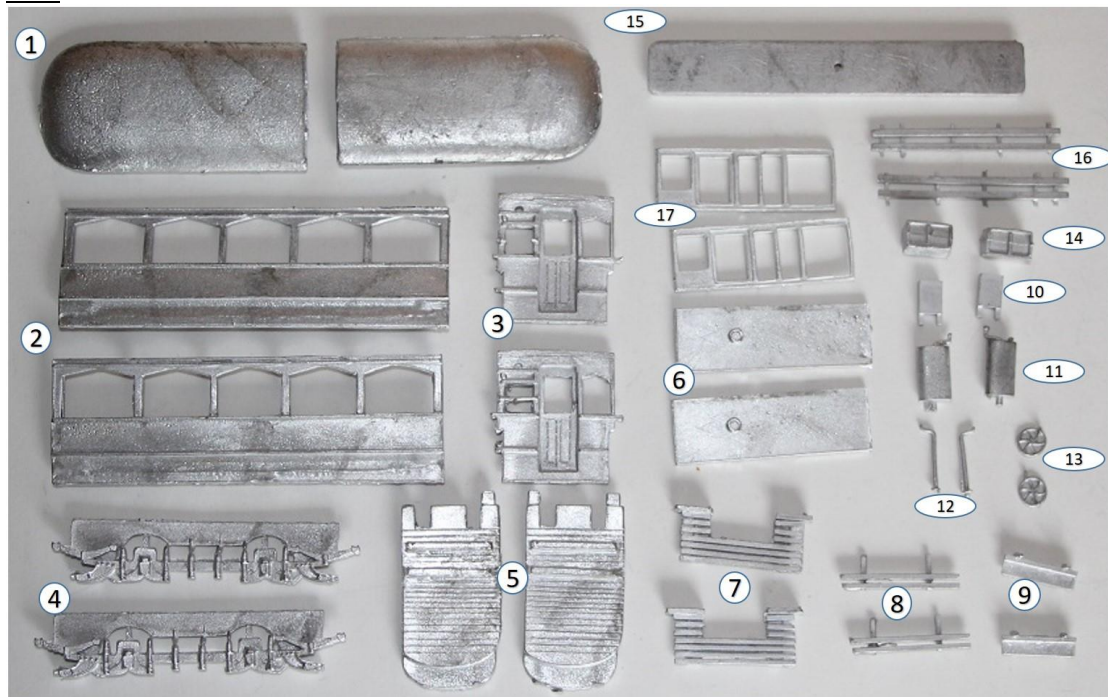


- |     |                        |    |
|-----|------------------------|----|
| 1.  | Roof                   | x2 |
| 2.  | Tram side              | x2 |
| 3.  | Bulkhead               | x2 |
| 4.  | Truck side             | x2 |
| 5.  | Platform               | x2 |
| 6.  | Dash panels            | x2 |
| 7.  | Life tray              | x2 |
| 8.  | Front life Guard       | x2 |
| 9.  | Steps                  | x2 |
| 10. | Destination letter box | x2 |
| 11. | Controller             | x2 |
| 12. | Handbrake              | x2 |
| 13. | Handbrake wheels       | x2 |
| 14. | Resistance box         | x2 |
| 15. | Roof top               | x1 |
| 16. | Trolley plank half     | x2 |
| 17. | Driver vestibule       | x2 |

#### Build Steps


1. Fit the truck sides centrally to the saloon sides.




2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

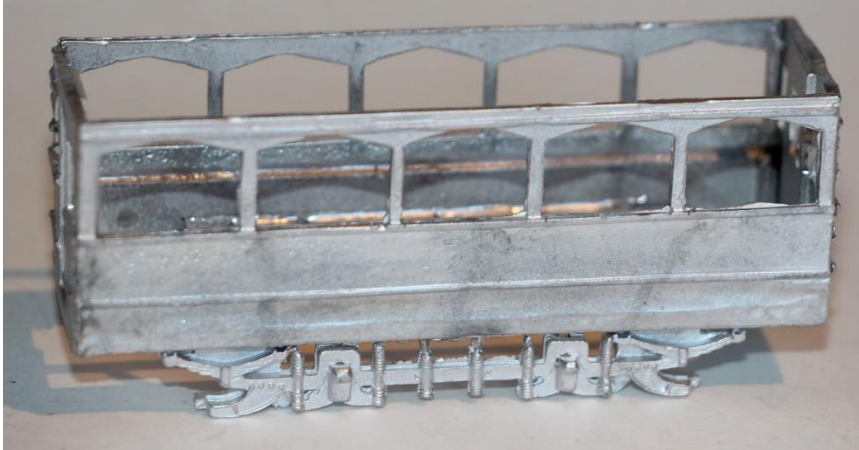


3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platforms so that they fit inside the body.
4. Bend the dash panels to match the shape of the platform, trim to length so that it fits against the bulkhead gate and fix in place. Gently bend the driver vestibule to fit the shape of the dash and fix in place.

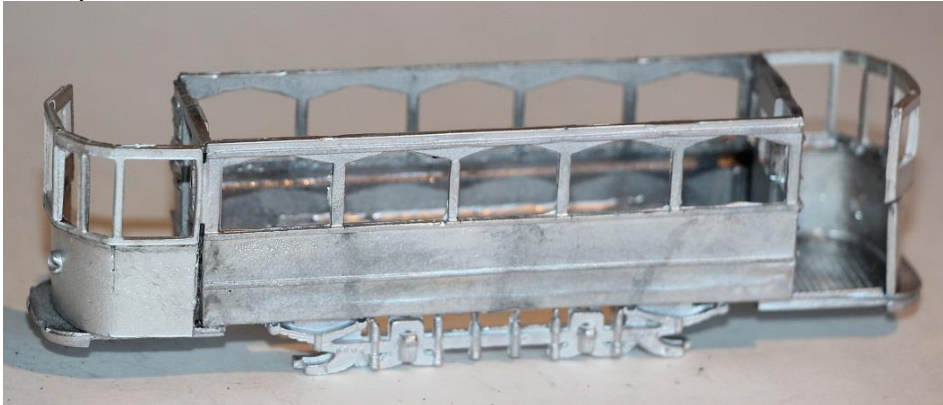


5. Turn model over to fit the steps, lifeguards and life trays.

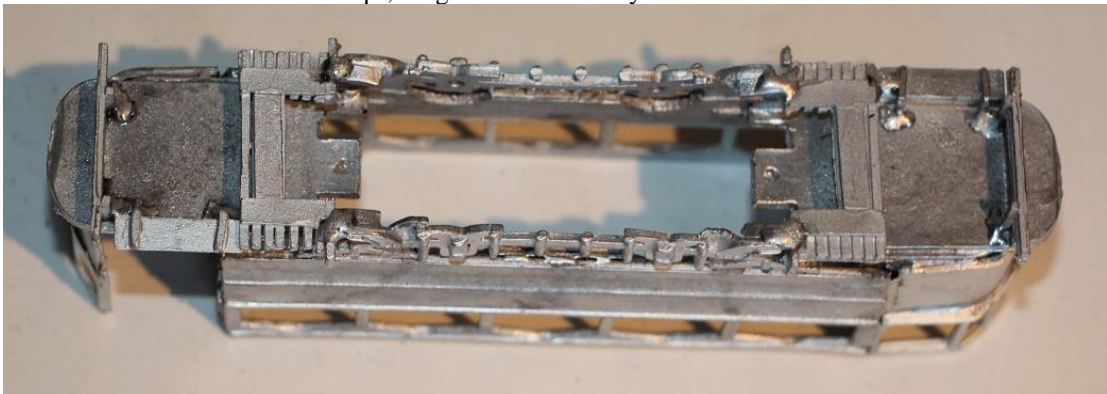

6. On a flat surface, join the two halves of the roof together, then fit centrally to the body.

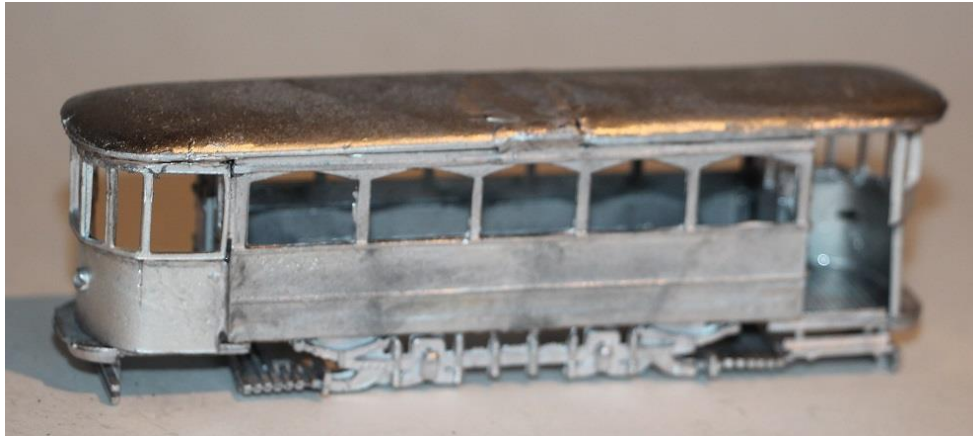

7. Fit the roof top centrally to the roof.
8. Fit the trolley plank in place.

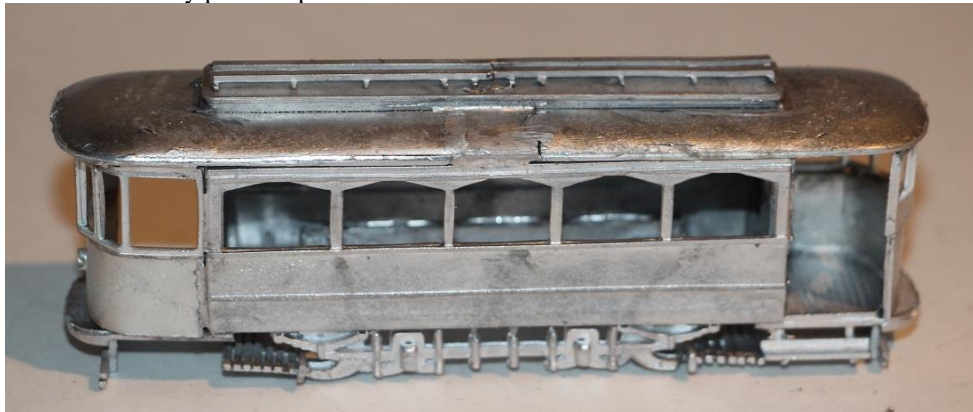

9. Attach destination letter boxes to the end section of the roof.





