


KW Trams

KW 074 Preston ex Lincoln

Parts

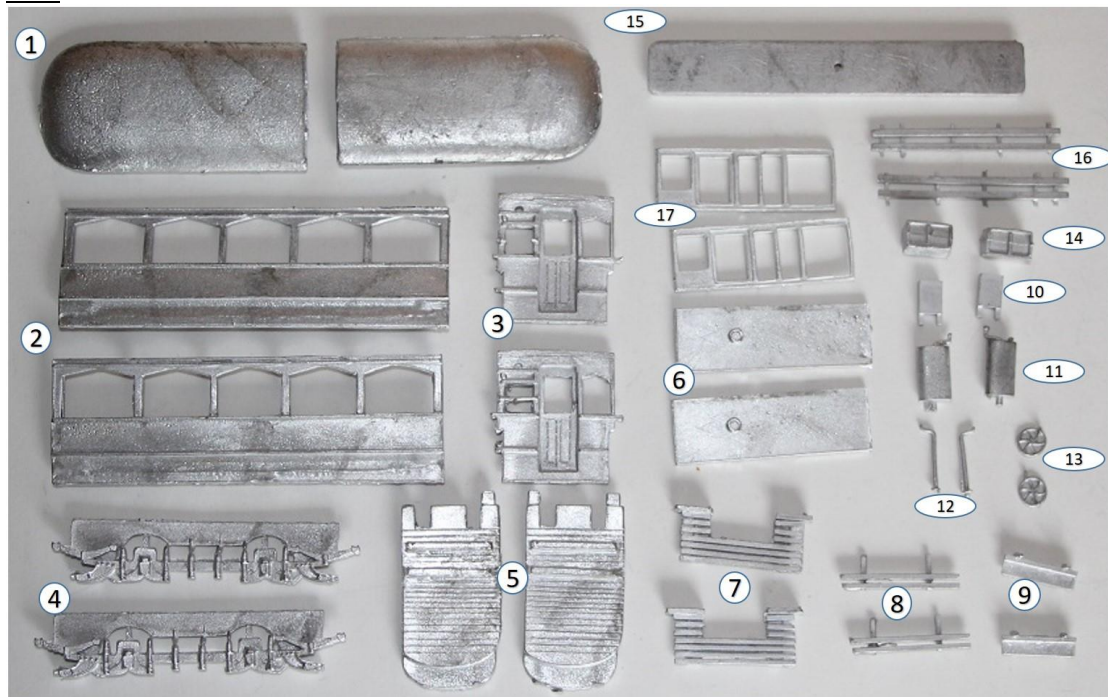

1.	Upper floor	x1
2.	Tram side	x2
3.	Bulkhead	x2
4.	Truck side	x2
5.	Platform	x2
6.	Dash panels	x2
7.	Upper deck decency panel	x1
8.	Life tray	x2
9.	Front life Guard	x2
10.	Steps	x2
11.	Front destination box	x2
12.	Controller	x2
13.	Handbrake	x2
14.	Stairs	x2
15.	Resistance box	x2
16.	Balcony seat	x2
17.	Upper sides	x2
18.	Upper bulkheads	x2
19.	Roof	x1
20.	Driver vestibules	x2
21.	Vestibule extensions	x4

Build Steps


1. Attach the truck sides centrally to the saloon sides.




2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.




3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platforms so that they fit inside the body.
4. Bend the dash panels to match the shape of the platform, trim to length so that it fits against the bulkhead and fix in place.
5. Gently bend the driver vestibule to match the shape of the dash and fix in place.

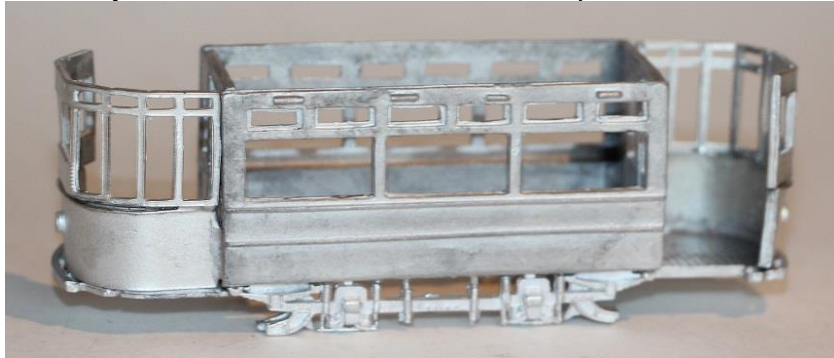

6. Fit the vestibule extensions to the filled in section on the lower left-hand side of the driver vestibule (when looking at the tram from the front).

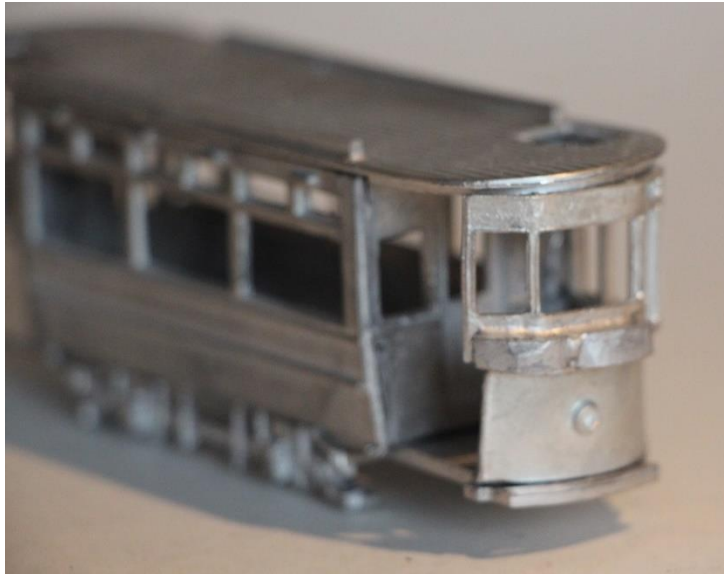

7. Fit the upper floor centrally to the body.

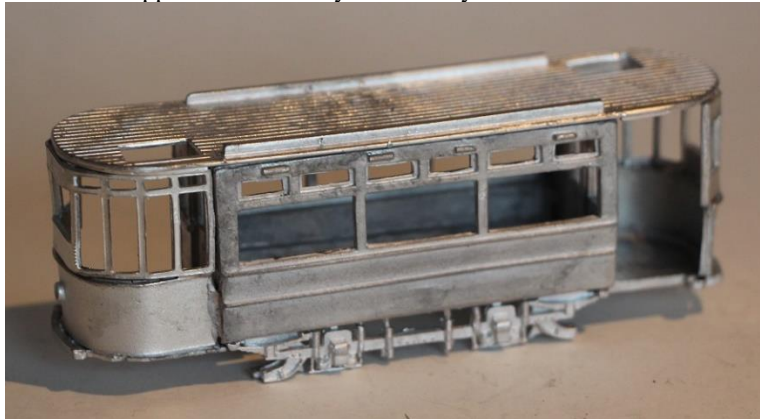


8. Fit the upper sides and bulkheads together on a flat surface. Fit this to the centre of the upper deck floor.




9. Fit the balcony ends, bending the end panels so that they match the shape of the upper floor.



10. Turn model over to fit the steps, lifeguards and life trays.

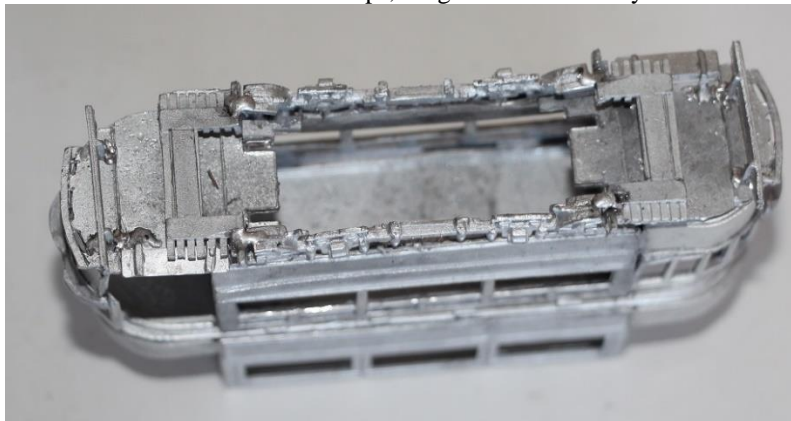

11. Fix the destination boxes to the upper middle section of the driver vestibule.

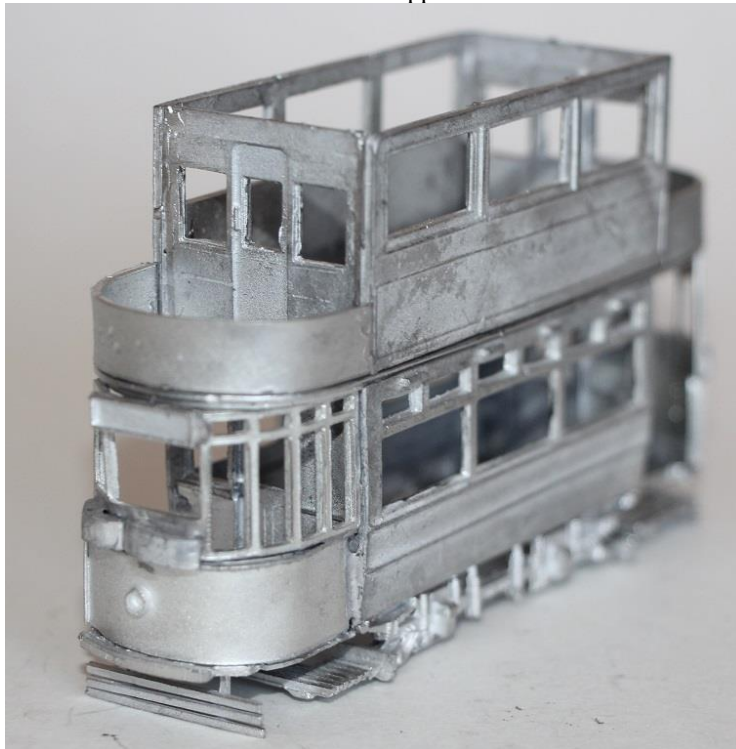

12. Fit the stairs unless you wish to paint them first.

