


KW Trams

KW 075 Southport Corporation balcony car


Parts

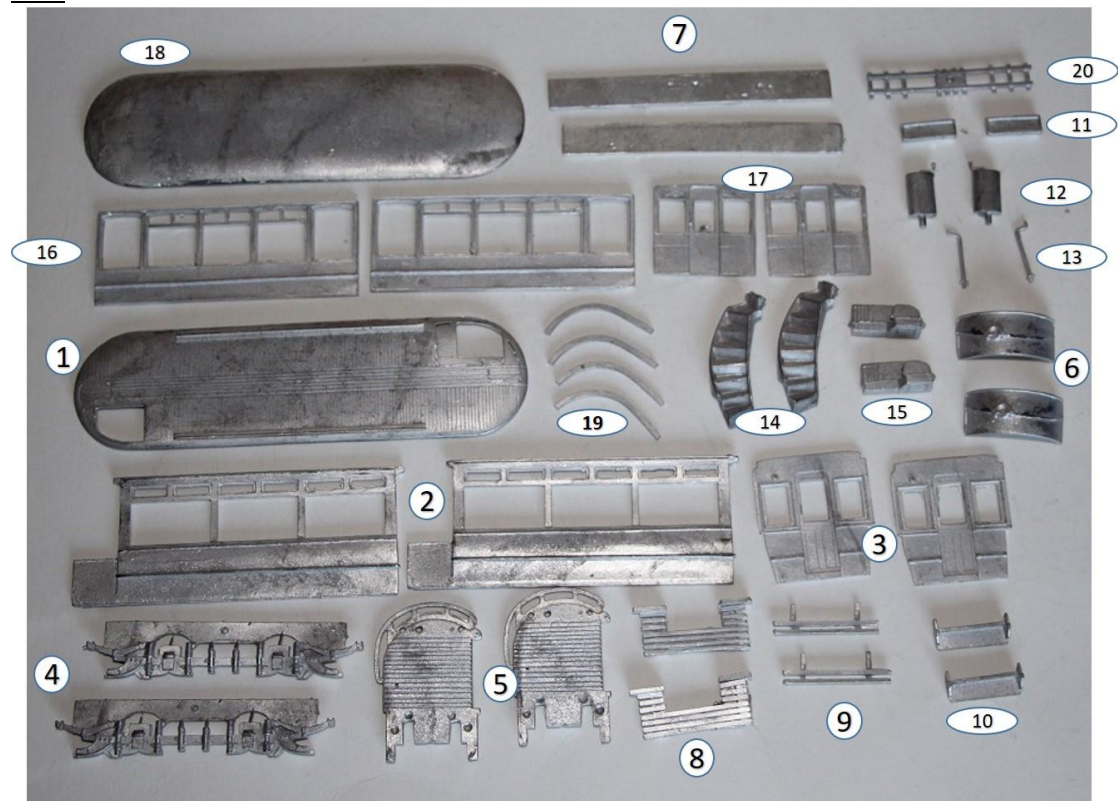


1. Upper floor	x1
2. Tram side	x2
3. Bulkhead	x2
4. Truck side	x2
5. Platform	x2
6. Dash panels	x2
7. Upper deck decency panel	x1
8. Life tray	x2
9. Front life Guard	x2
10. Steps	x2
11. Front destination box	x2
12. Controller	x2
13. Handbrake	x2
14. Stairs	x2
15. Stair bases	x2
16. Upper sides	x2
17. Upper bulkheads	x2
18. Roof	x1
19. Canopy bends	x4
20. Trolley plank	x1

Build Steps


1. Attach the truck sides centrally to the saloon sides.

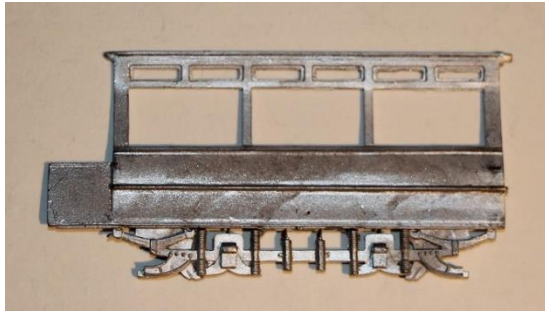


2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

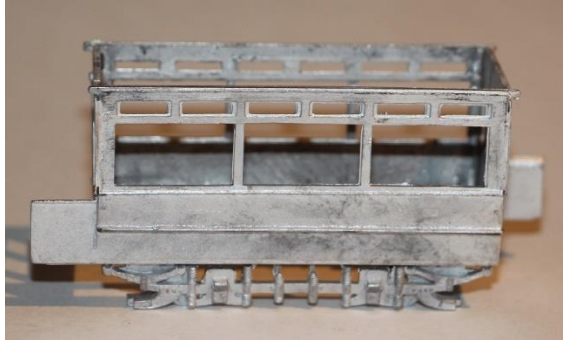

3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platforms so that they fit inside the body.
4. Fit the dash panels.

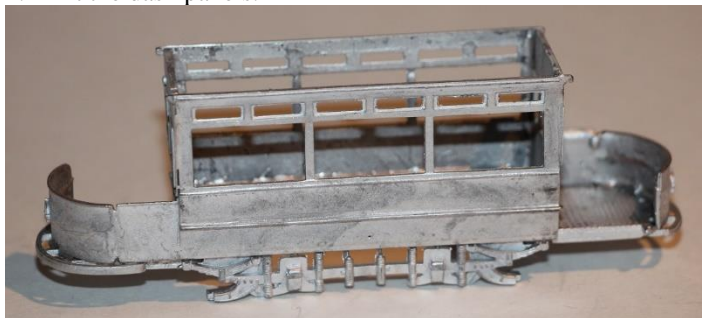

5. Fit the upper floor centrally to the body.

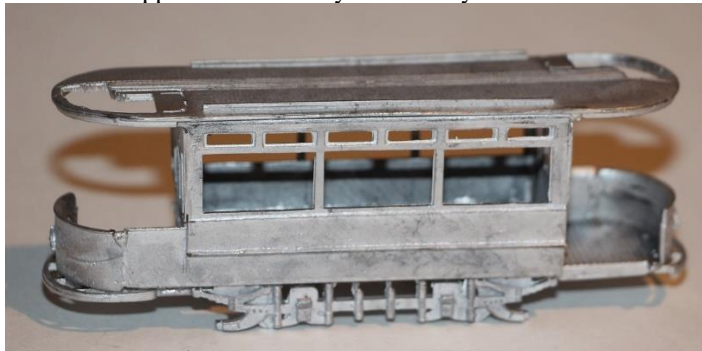


6. Fit the upper sides and bulkheads together on a flat surface. Fit this to the centre of the upper deck floor. You may need to trim the bulkheads to get a good fit to the roof.



7. Fit the balcony ends, bending the end panels so that they match the shape of the upper floor.



8. Turn model over to fit the steps, lifeguards and life trays.

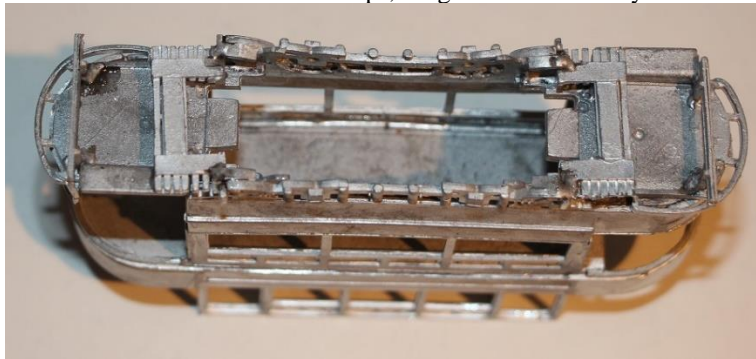

9. Fit the stairs unless you wish to paint them first.

10. Fit the canopy bends to the underside of the roof ends. Fit the trolley plank to the middle of the roof. Do not fit the roof until you have completed the interior of the upper deck.

