


KW Trams

KW 075a Southport Corporation Enclosed Cars

Parts

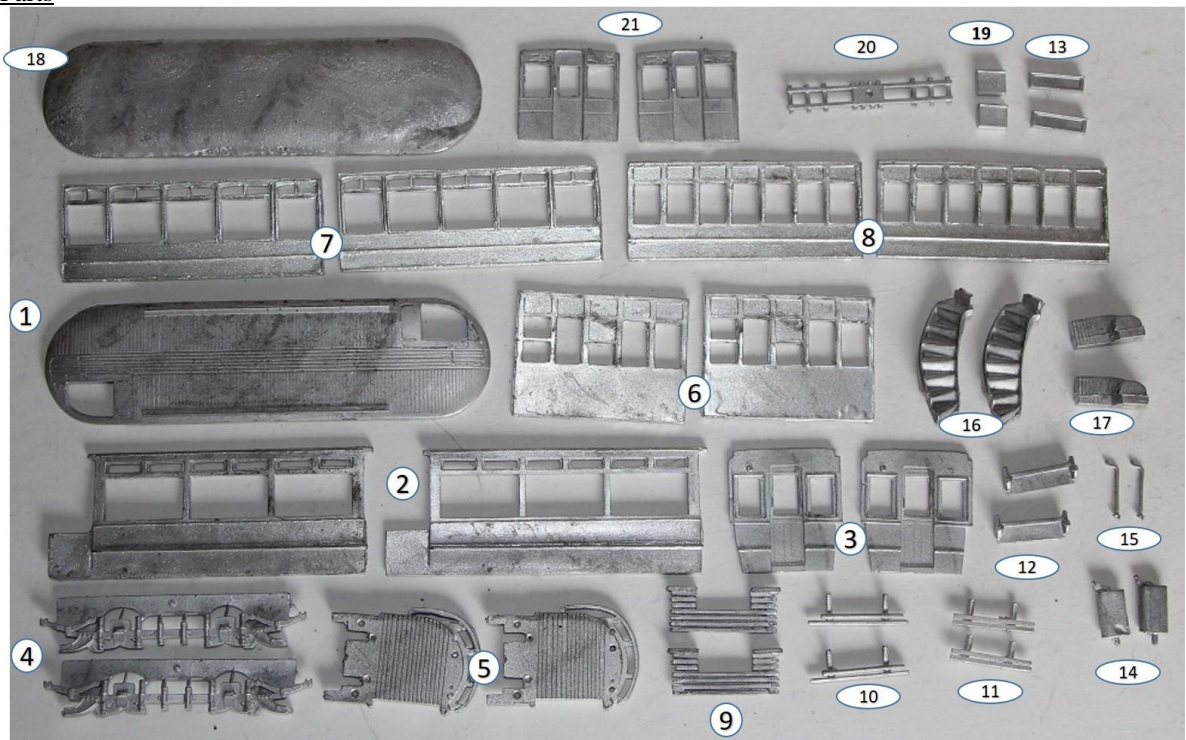

1.	Upper floor	x1
2.	Tram lower side	x2
3.	Lower bulkhead	x2
4.	Truck side	x2
5.	Platform	x2
6.	Driver vestibules	x2
7.	Upper sides	x2
8.	Upper deck vestibules	x2
9.	Life tray	x2
10.	Front life Guard	x2
11.	Side lifeguard	x2
12.	Steps	x2
13.	Front destination box	x2
14.	Controller	x2
15.	Handbrake	x2
16.	Stairs	x2
17.	Stair bases	x2
18.	Roof	x1
19.	Destination number boxes	x2
20.	Trolley plank	x1
21.	Upper bulkheads	x2

Build Steps


1. Remove the dash extension and top left corner extension from the lower sides.




2. Attach the truck sides centrally to the saloon sides.




3. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

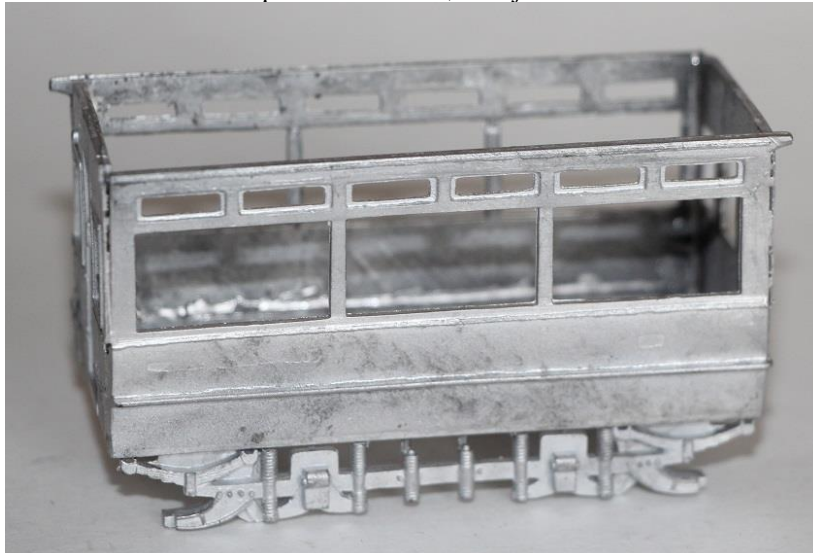


4. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platforms so that they fit inside the body.

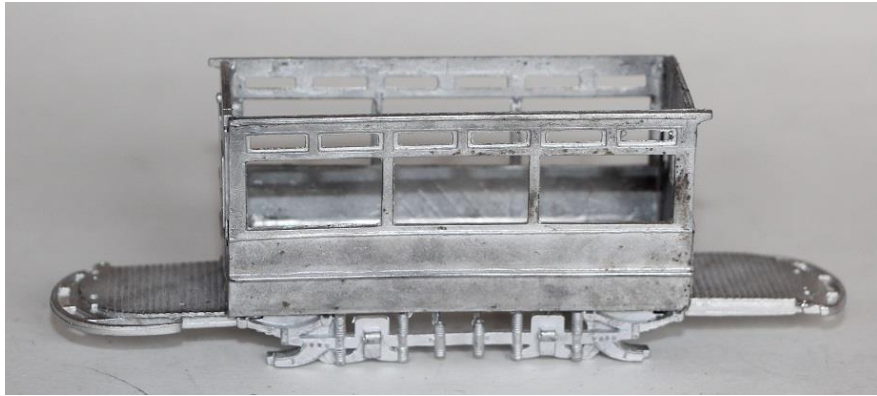

5. Gently bend the driver vestibule to match the curve of the dash. It fits with the blocked-in windows at the top.

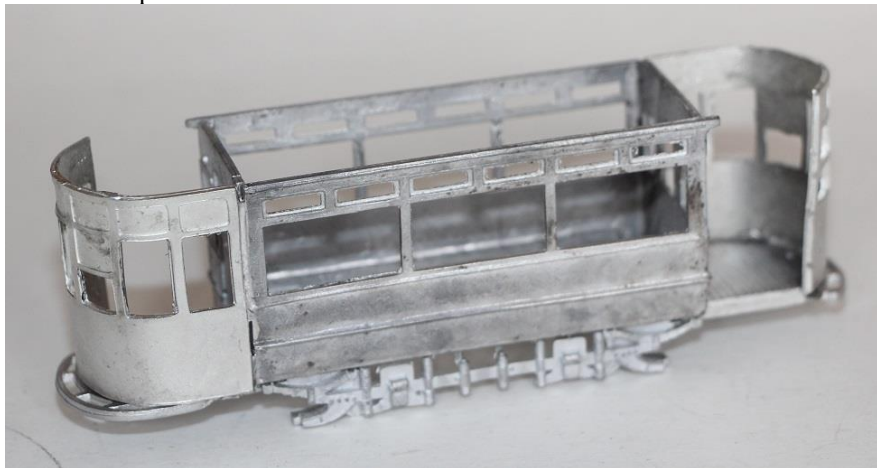

6. Fit the upper floor centrally to the body and flush with the drive vestibules.

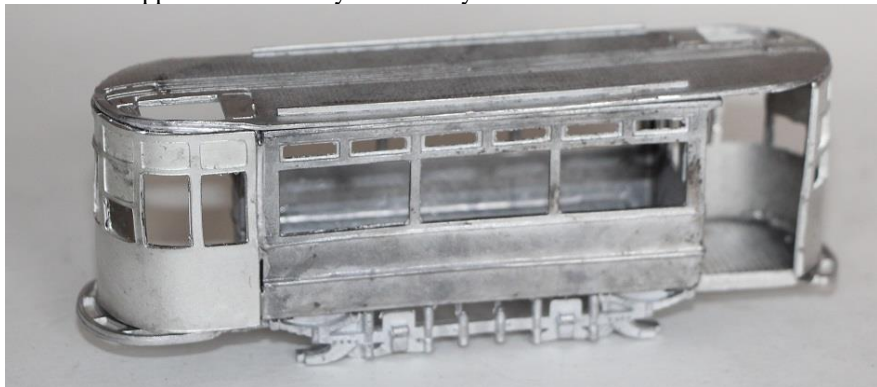


7. Fit the upper sides centrally to the sides of the floor so that they line up with the lower sides. Fit the upper bulkheads between the ends of the upper sides.



8. Gently bend the end vestibules so that they match the shape of the upper floor and fix in place. Test fit the roof to make sure that everything lines up properly but don't fix it in place until you have painted and completed the interior.



9. Turn model over to fit the steps, lifeguards and life trays.

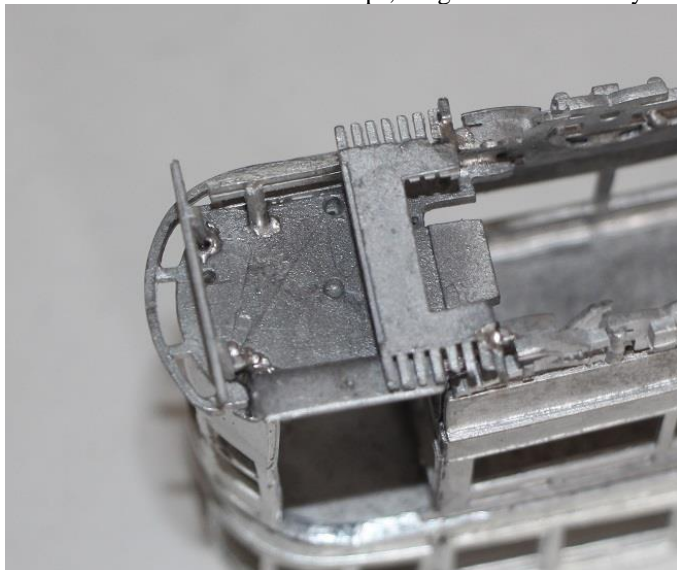

10. Fit the stairs unless you wish to paint them first.

11. Fit the trolley plank in the centre of the roof.



12. Fit the destination boxes on the upper ends just below the middle window. Fit the destination letter box above it.

