


KW Trams

KW 077 Southport Tramways Company Open Top Cars

Parts

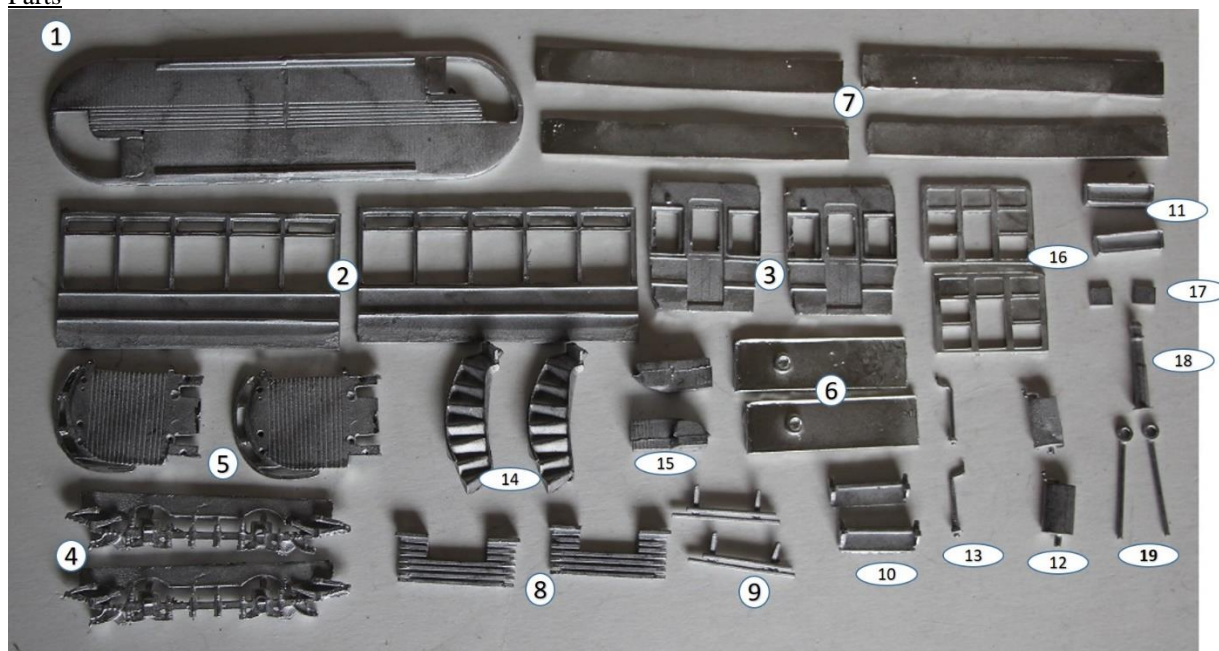


| | | |
|-----|--------------------------|----|
| 1. | Upper floor | x1 |
| 2. | Tram side | x2 |
| 3. | Bulkhead | x2 |
| 4. | Truck side | x2 |
| 5. | Platform | x2 |
| 6. | Dash panels | x2 |
| 7. | Upper deck decency panel | x4 |
| 8. | Life tray | x2 |
| 9. | Front life Guard | x2 |
| 10. | Steps | x2 |
| 11. | Front destination box | x2 |
| 12. | Controller | x2 |
| 13. | Handbrake | x2 |
| 14. | Stairs | x2 |
| 15. | Stair bases | x2 |
| 16. | Driver vestibule | x2 |
| 17. | Maltese cross plate | x2 |
| 18. | Trolley mast | x1 |
| 19. | Oyster lamps | x2 |

Build Steps


1. Attach the truck sides centrally to the saloon sides.




2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

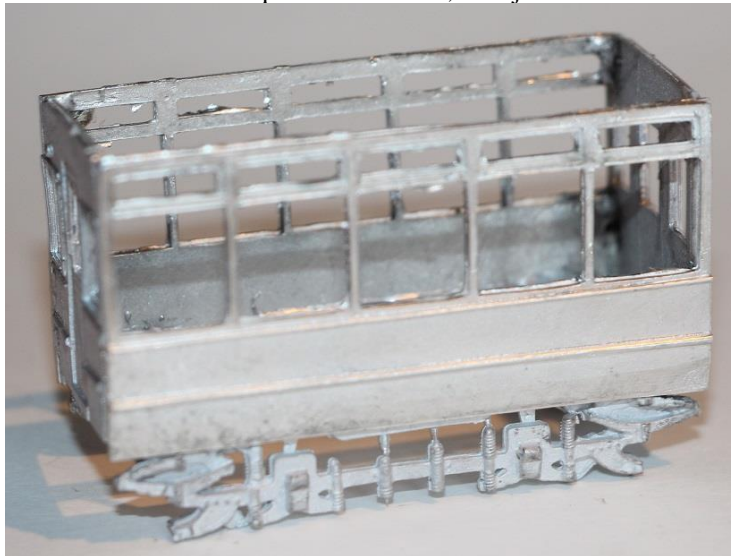


3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead. You may need to trim the edges of the platforms so that they fit inside the body.

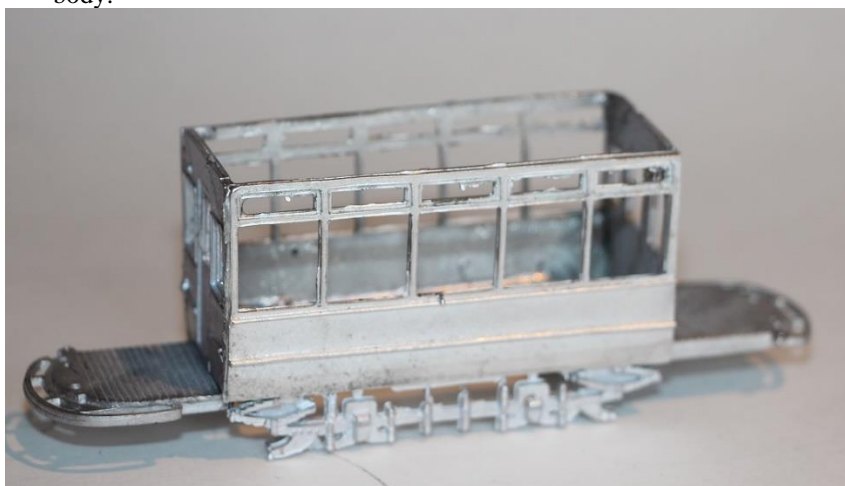

4. Gently bend the dash panels to match the shape of the platform floor, and fit in place.

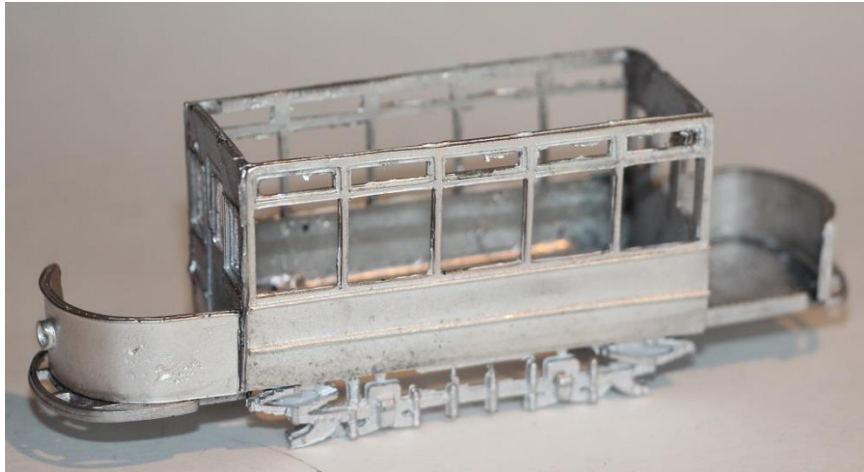


5. Gently bend the driver vestibule to match the curve of the dash. It fits with the blocked-in windows at the top and with the middle window in the middle of the car.

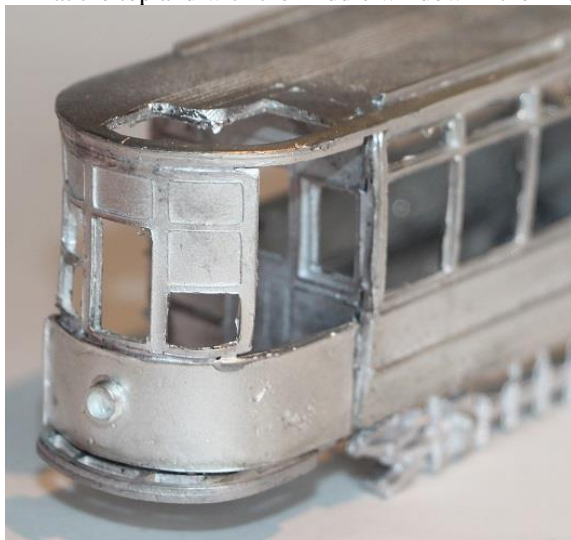

6. Fit the upper floor centrally to the body and flush with the drive vestibules.
7. Fit the first two decency panels centrally to the sides of the floor, then bend the remaining two decency panels, bending them so that they match the shape of the upper floor and trim to length as required.



8. Turn model over to fit the steps, lifeguards and life trays.

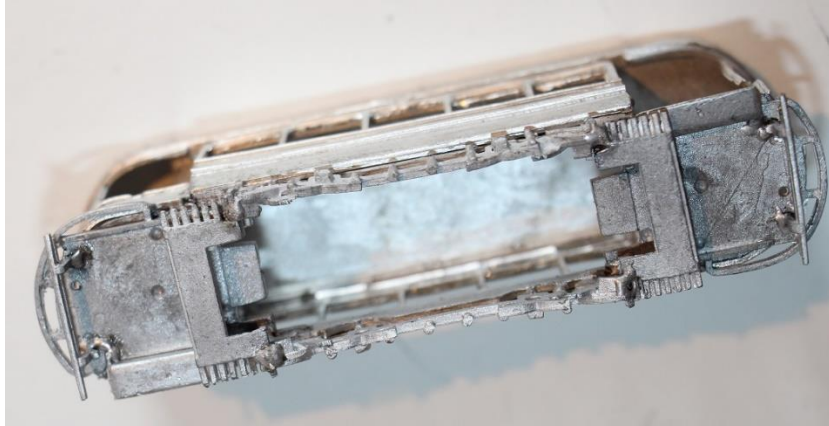

9. Fit the stairs unless you wish to paint them first.
10. Fit the trolley mast in the centre of the upper floor and the oyster lamps on the centre line next to the top of the stairs.
11. Make up handrails from brass wire (not supplied).

