


KW Trams

KW 078 Sunderland 16

Parts

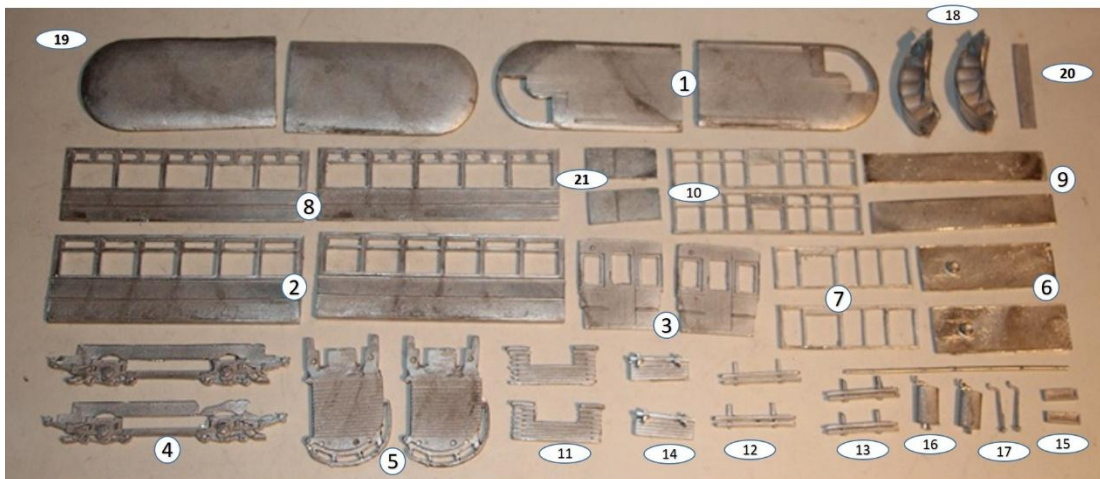


- | | |
|---------------------------|----|
| 1. Upper floor | x1 |
| 2. Tram lower side | x2 |
| 3. Lower bulkhead | x2 |
| 4. Truck side | x2 |
| 5. Platform | x2 |
| 6. Dash | x2 |
| 7. Driver vestibules | x2 |
| 8. Upper sides | x2 |
| 9. Upper ends | x2 |
| 10. Upper deck vestibules | x2 |
| 11. Life tray | x2 |
| 12. Front life Guard | x2 |
| 13. Side lifeguard | x2 |
| 14. Steps | x2 |
| 15. Side destination box | x2 |
| 16. Controller | x2 |
| 17. Handbrake | x2 |
| 18. Stairs | x2 |
| 19. Roof | x2 |
| 20. Trolley plank | x1 |
| 21. Upper partition | x2 |

Build Steps


1. Attach the truck sides centrally to the saloon sides.




2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

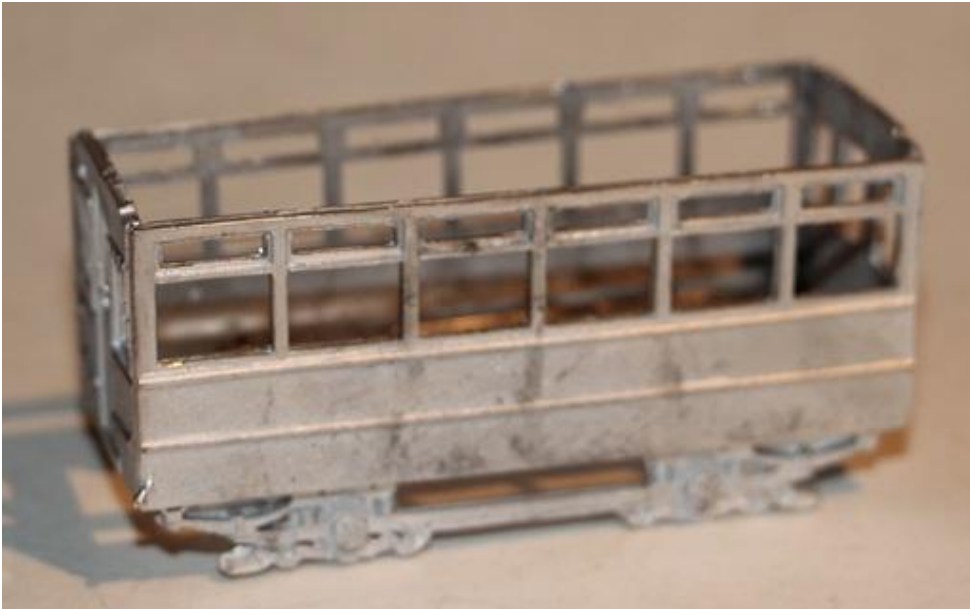

3. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead.

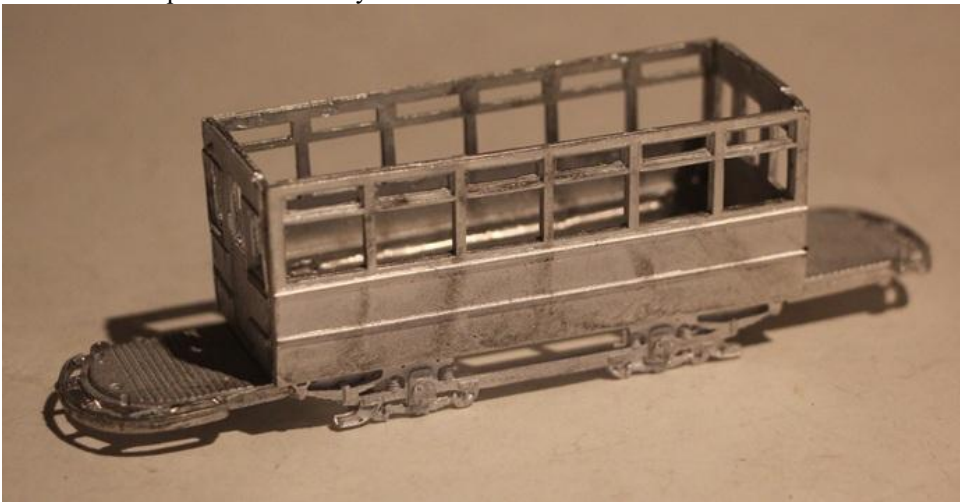

4. Gently bend the dash to match the shape of the platform and trim to length.

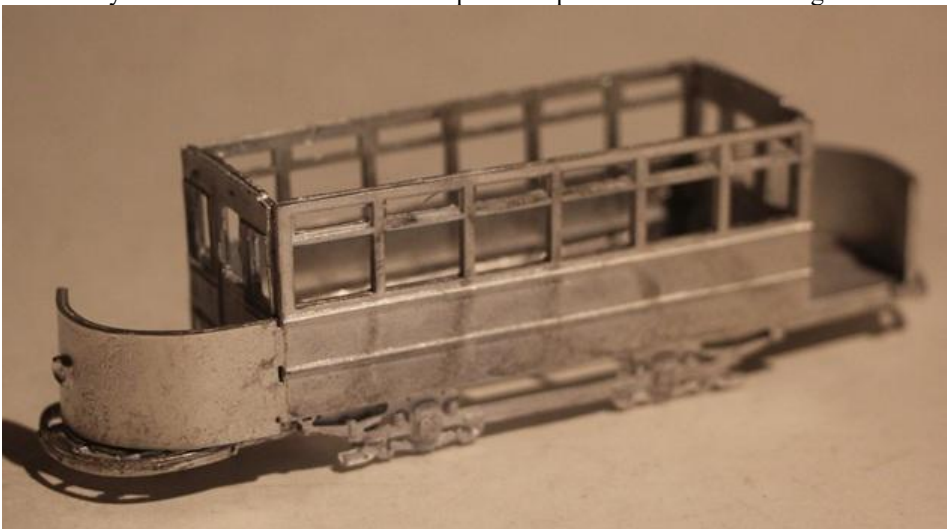


5. Gently bend the driver vestibule to match the curve of the dash. It fits with the blocked-in window at the top.



6. Fit the two halves of the upper floor together and then fit centrally to the body and flush with the drive vestibules. Note, you may need to remove the beading under the end of the tram to get a good fit with the vestibules.




7. Fit the upper sides centrally to the sides of the floor so that they line up with the lower sides. Bend the upper ends to match the shape of the floor and fix in place.

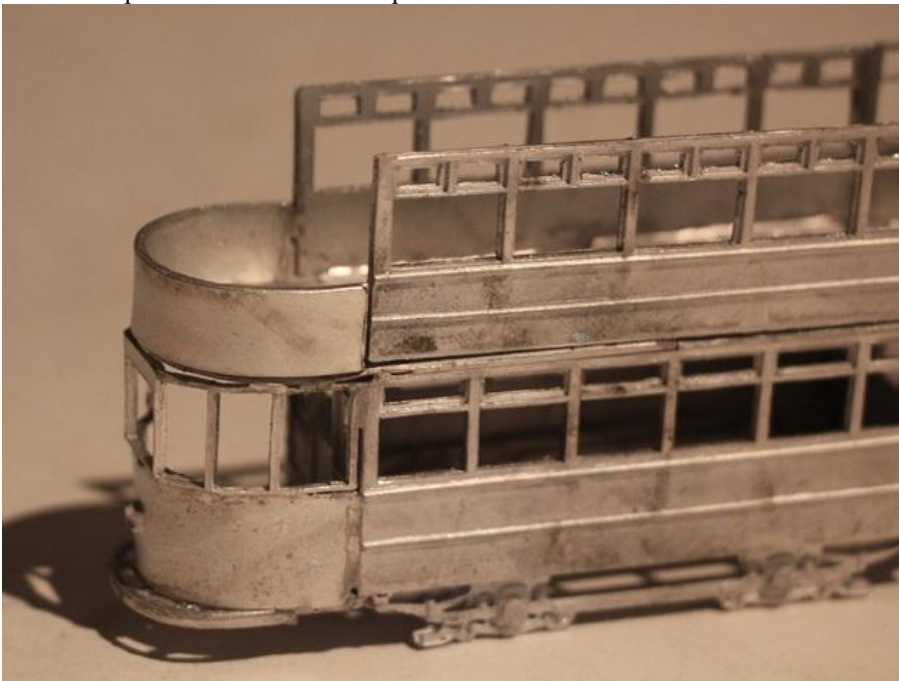


8. Gently bend the end vestibules so that they match the shape of the upper end. Test fit the roof to make sure that everything lines up properly but don't fix it in place until you have painted and completed the interior.



9. Fit the upper partition around the edge of the stair hole.

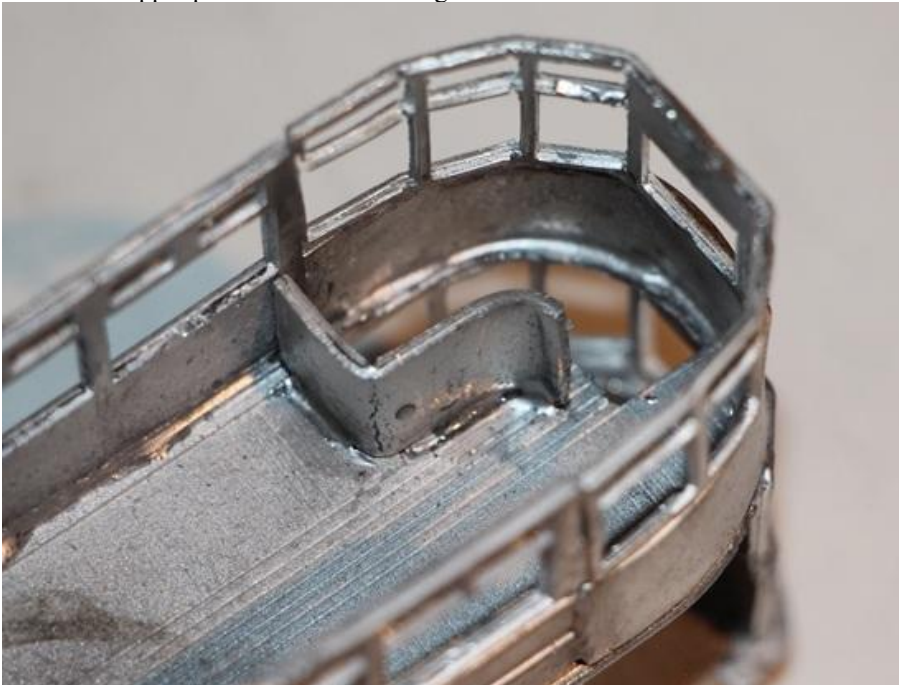

10. Turn model over to fit the steps, lifeguards and life trays.

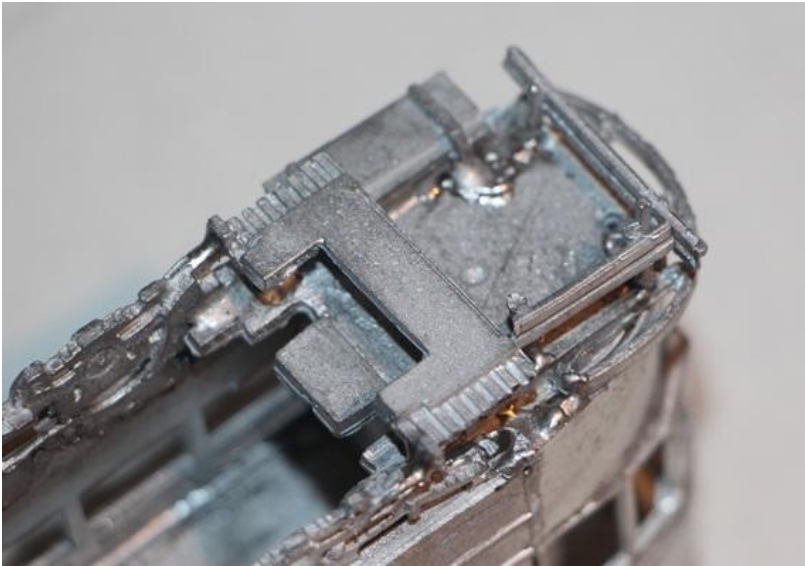

11. Fit the stairs unless you wish to paint them first.
12. Fix the two halves of the roof together and then fit the trolley plank in the centre of the roof.

