


KW Trams

KW 080a Portsmouth LIFU trailer

Parts

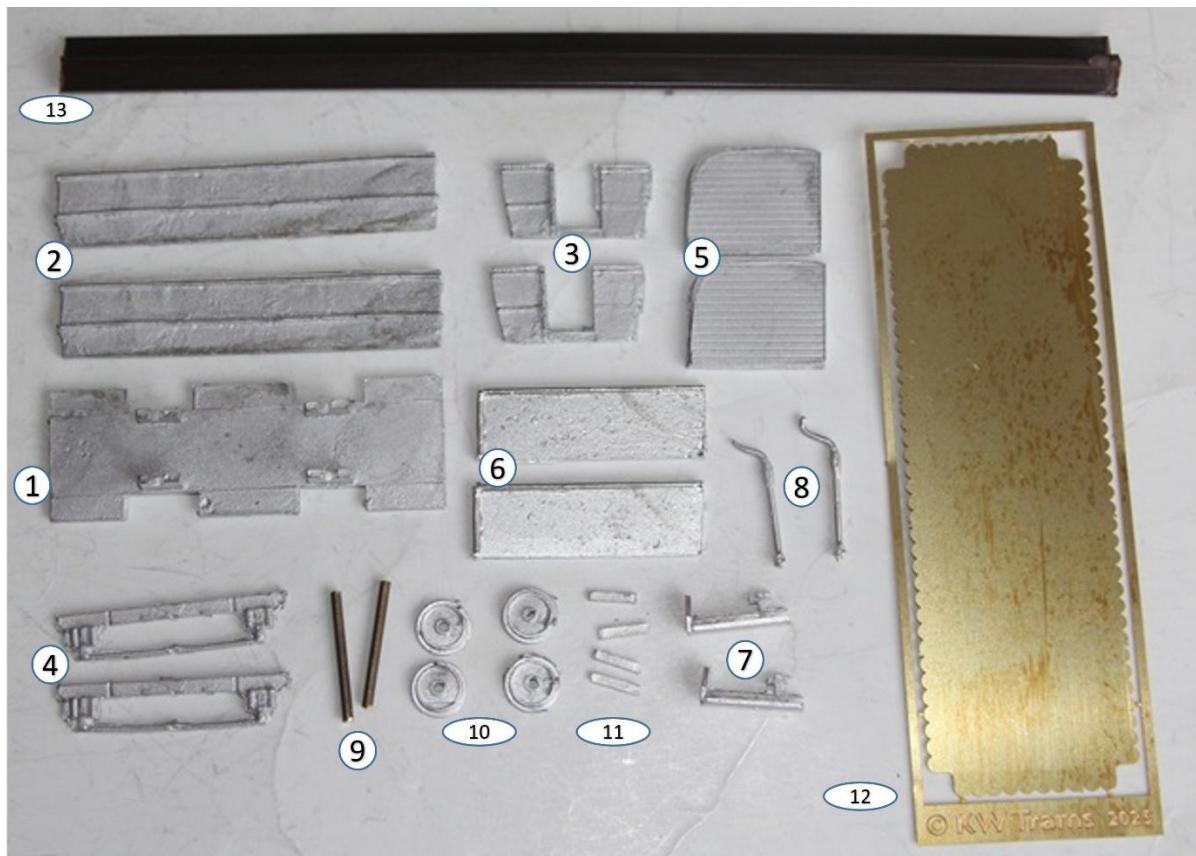


1. Floor	x1
2. Tram side	x2
3. Bulkhead	x2
4. Truck side	x2
5. Platform	x2
6. Dash	x2
7. Steps	x2
8. Handbrake	x2
9. Axle	x2
10. Wheels	x4
11. Axle retainers	x4
12. Roof	x2
13. Seating strip	x1

Build Steps


1. Attach the truck sides centrally to the saloon sides. Note, the rods are quite delicate, I replaced mine with brass rod instead.



2. Fix one bulkhead square to each side, then join the two sub-assemblies together to create a box.

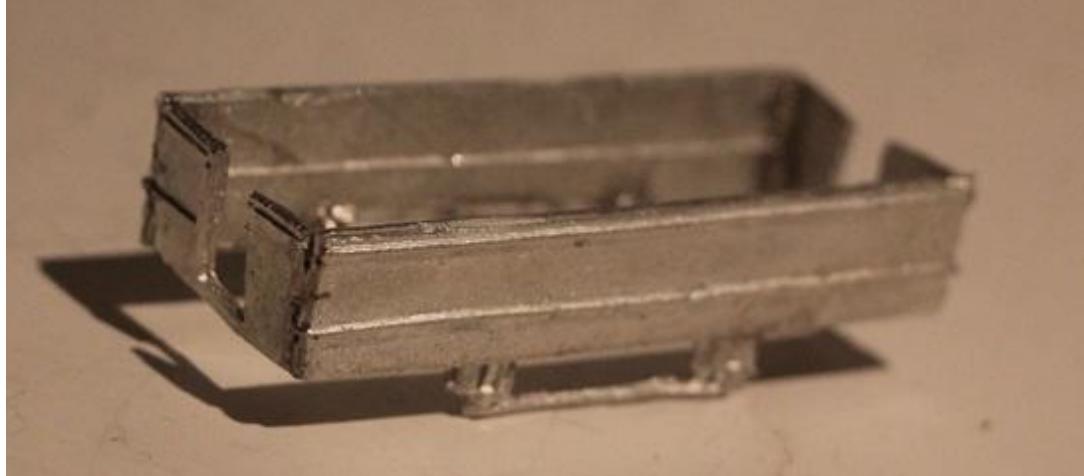

3. Fit the floor centrally, resting on the ledges on the sides

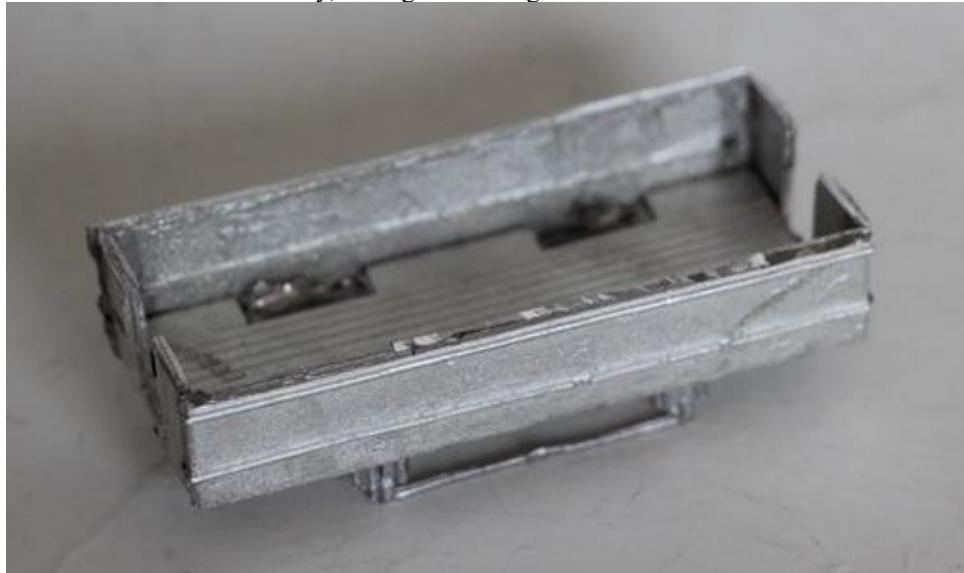


4. Attach the platforms under the bulkheads flush with the left-hand side of the saloon.
5. Gently bend the dash to match the shape of the platform, trim to length and fit.




6. Fit the steps against the platform edge.



7. Fit the wheels to the axles and check fit. Don't fix in place until you have painted the parts.

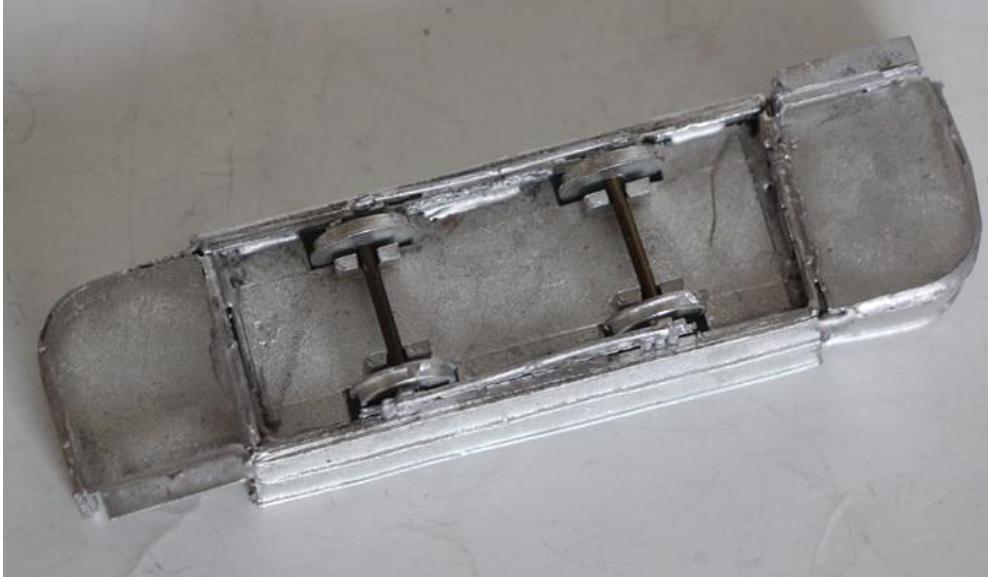


8. Cut the seating strip to create seats along the sides of the saloon. You may need to cut notches for the roof support wires.

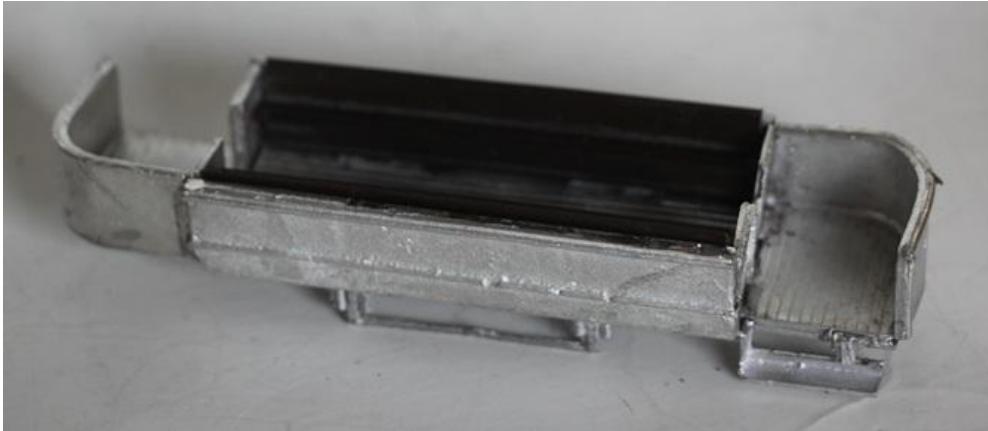

9. Cut 12 pieces of brass rod (not supplied) 35mm long to support the roof.
10. Bend the sides and ends of the etched brass roof down Solder the corners together.



11. Solder the rods to the etched lines – 4 each side and 2 each end.

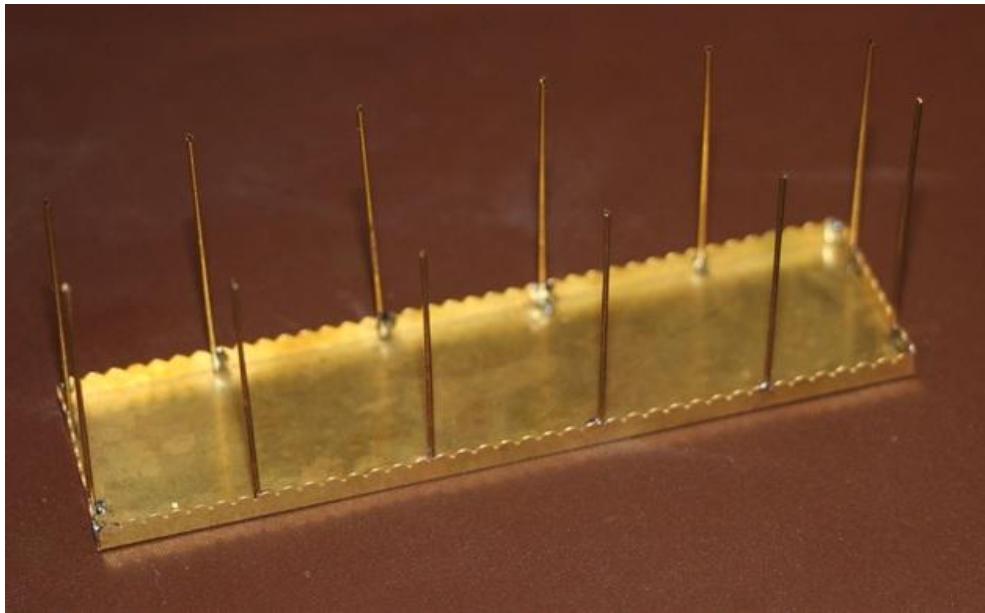

12. Fit the roof to the tram, with the 4 side rods inside the saloon and the 2 end ones inside the dash. Make sure that the roof is straight and central to the body.

