


# KW Trams

## **KW 107 Bristol.**

### Parts

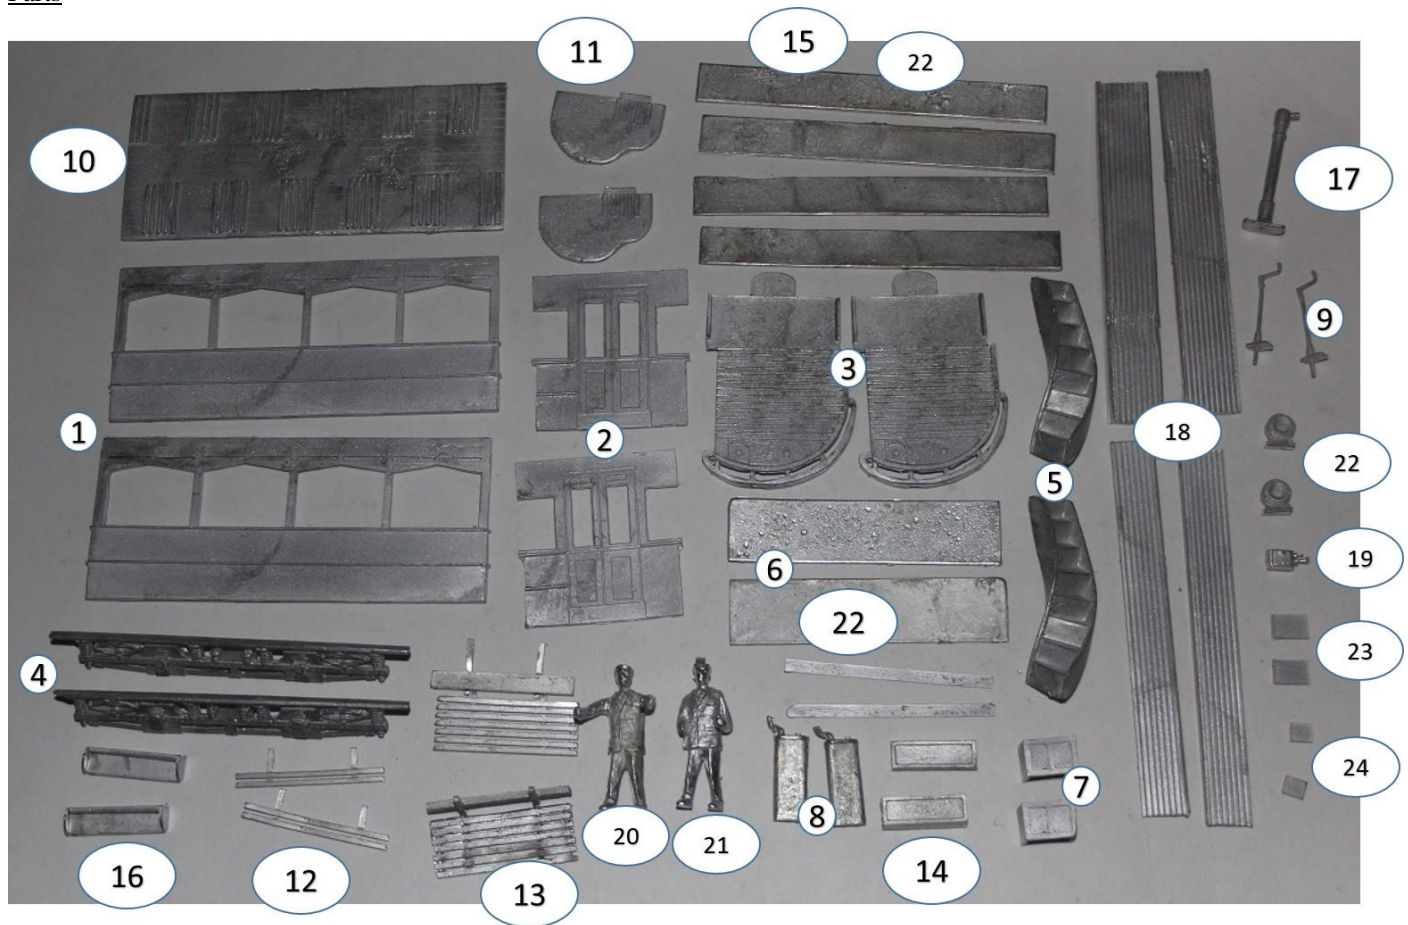

- |                                |    |
|--------------------------------|----|
| 1. Tram side                   | x2 |
| 2. Bulkhead                    | x2 |
| 3. Platform                    | x2 |
| 4. Truck side                  | x2 |
| 5. Stairs                      | x2 |
| 6. Dash panels                 | x2 |
| 7. Resistance box              | x2 |
| 8. Controller                  | x2 |
| 9. Handbrake                   | x2 |
| 10. Centre ceiling/floor piece | x1 |
| 11. Ceiling ends               | x2 |
| 12. Life Guard                 | x2 |
| 13. Life tray                  | x2 |
| 14. Destination box            | x2 |
| 15. Upper deck decency panel   | x4 |
| 16. Steps                      | x2 |
| 17. Trolley mast               | x1 |
| 18. Lower deck seats           | x4 |
| 19. Canopy switch              | x1 |
| 20. Driver                     | x1 |
| 21. Conductor                  | x1 |
| 22. Headlamp                   | x2 |
| 23. Used ticket boxes          | x2 |
| 24. Dash boxes                 | x2 |

### Build Steps


1. Produce the lower saloon box of 2 lower sides and 2 bulk heads by assembly on a flat surface in the upside down position.



2. Attach the platforms centrally under the bulkheads with the raised sections flush with the back of the bulkhead.
3. Fit resistance boxes, the panels of which should face the car's outer side and should fit against the bulkhead.
4. Carefully bend the dash panel to fit the curve of the platform, trim to length and fit.




5. Fix the three parts of the ceiling / floor together and then fit to the saloon.

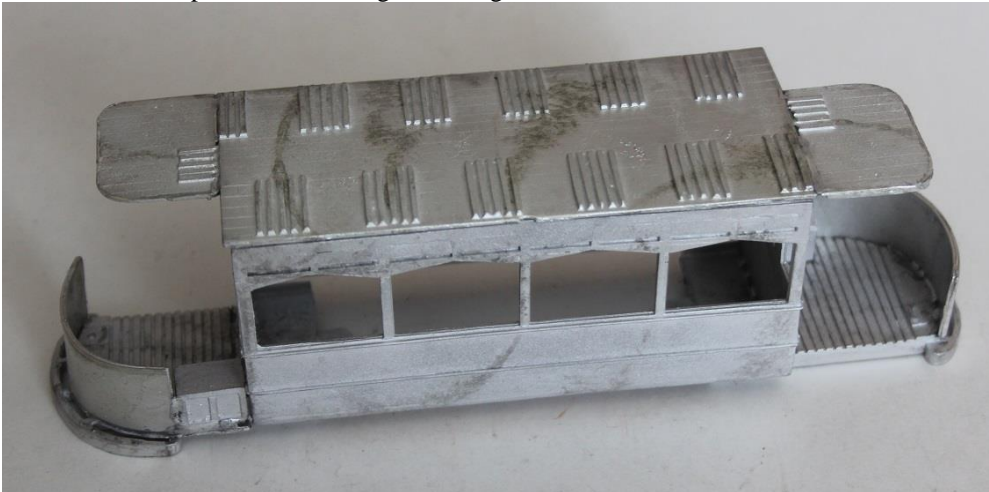


6. Fit the open top sides. Carefully bend the open top ends to the correct shape and fit.



7. Turn model over and attach the truck sides centrally to the saloon sides. Fit steps under the platform at open end of dash panel. Fit the lifeguards and life trays. The lifetrays need to be bent to a right angle first.

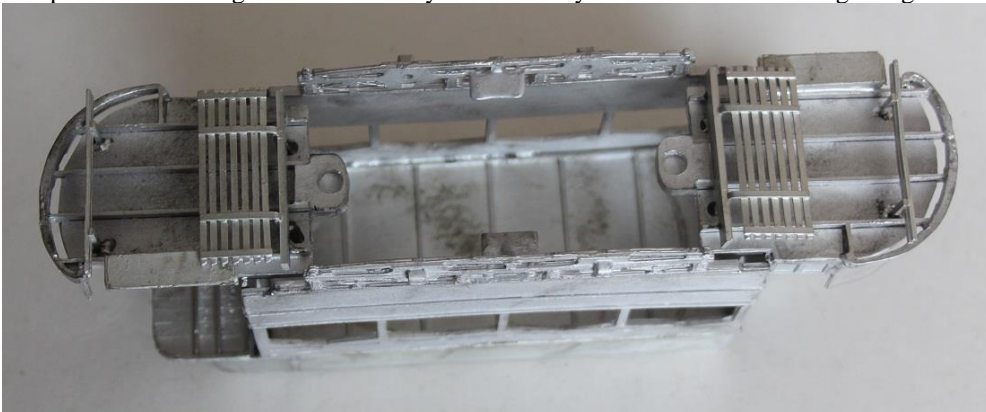

8. Fit the trolley mast to the upper floor.

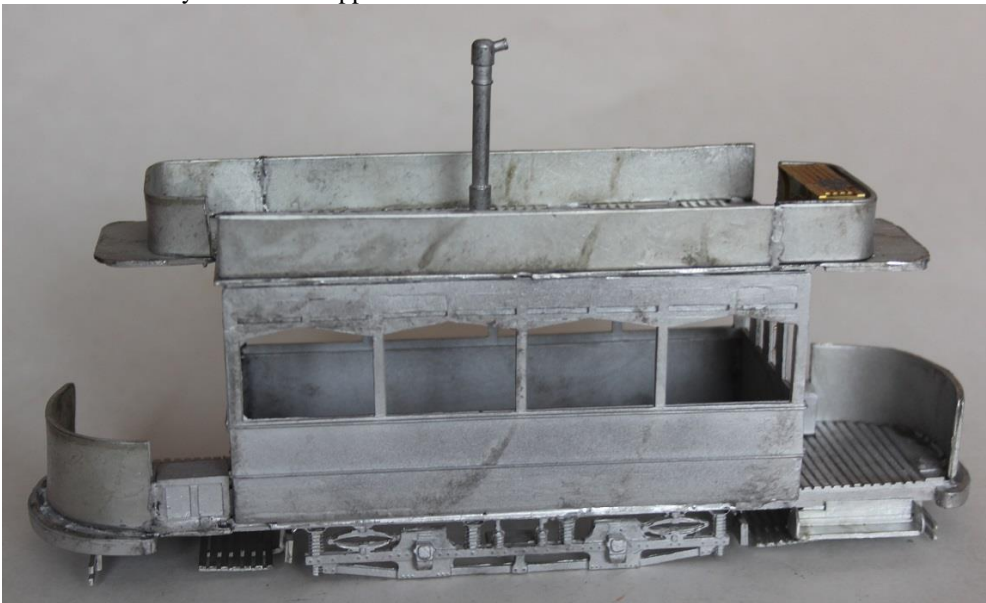

9. Fit the stairs unless you wish to paint them first.

