


KW Trams

KW 123a Glasgow works 120

Parts

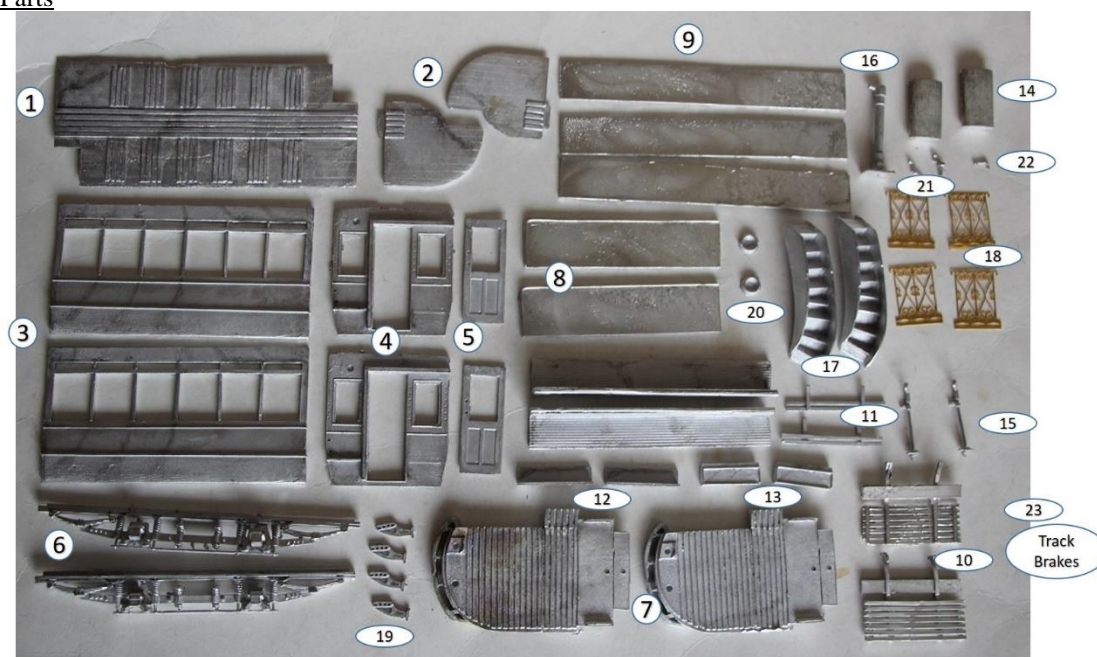

1. Roof half	x2
2. Tram side	x2
3. Bulkhead	x2
4. Bulkhead door	x2
5. Truck side	x2
6. Platform	x2
7. Dash panels	x2
8. Under stair gate	x2
9. Life tray	x2
10. Life Guard	x2
11. Steps	x2
12. Controller	x2
13. Handbrake	x2
14. Trolley base base	x1
15. Trolley base sides	x2
16. Trolley base springs	x2
17. Trolley base top	x1
18. Plasticard	x2
19. Lifetray supports	x4
20. Headlamp	x2
21. Controller handle	x2
22. Controller key	x1
23. Track brakes	x2

Build Steps


1. Attach the lifetray supports to the truck sides. Attach the track brakes under the centre of the truck sides. Attach the truck sides centrally to the saloon sides.



2. Fit the bulkhead doors to the bulkheads.




3. Produce the lower saloon box of 2 lower sides and 2 bulk heads by assembly on a flat surface in the upside-down position

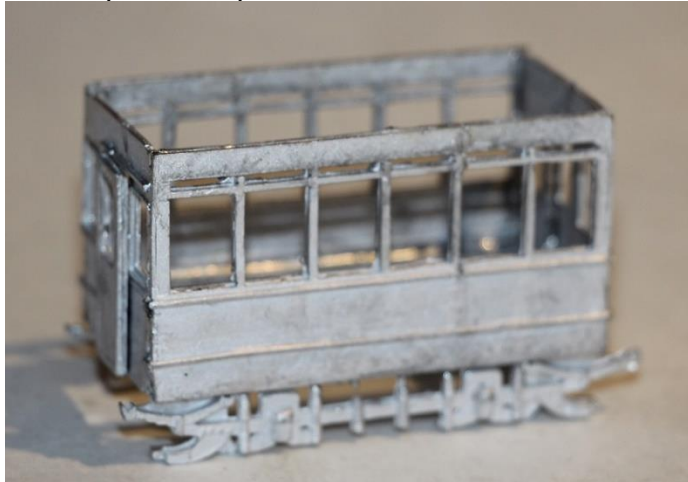


4. Attach the platforms centrally under the bulkheads with the rear wide sections flush with the bottom of the bulkhead.
5. Fit an under-stair gate next to the bulkhead on the nearside of the platform.
6. Bend the dash panels to match the shape of the platform, trim to length so that it just overlaps the under-stair gate and fix in place. Fit the headlamps low down on the front of the dash.



Fix the two halves of the roof together and fit to body.

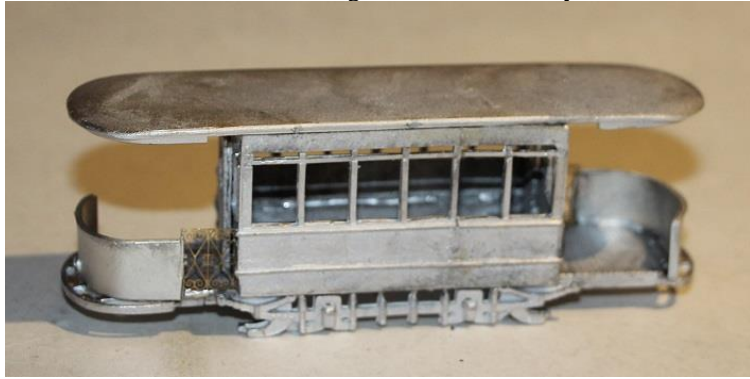

7. Turn model over to fit the steps, lifeguards and life trays.

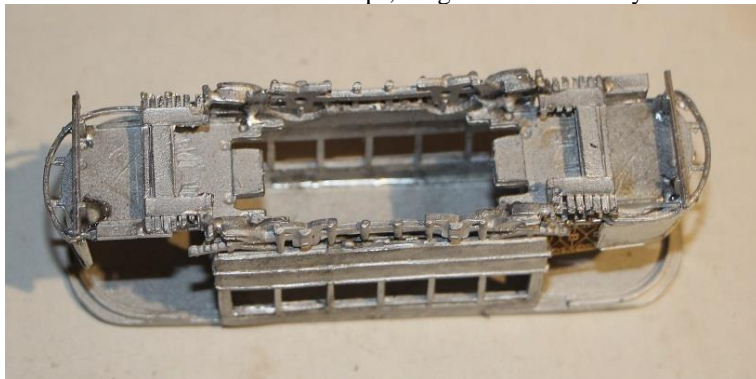

8. Fit the trolley base base to the centre of the roof. Join the trolley base sides to the springs (making sure the two sides match). Fit to centre of base and fit top.

