


KW Trams

KW 201 Enclosed car

Parts

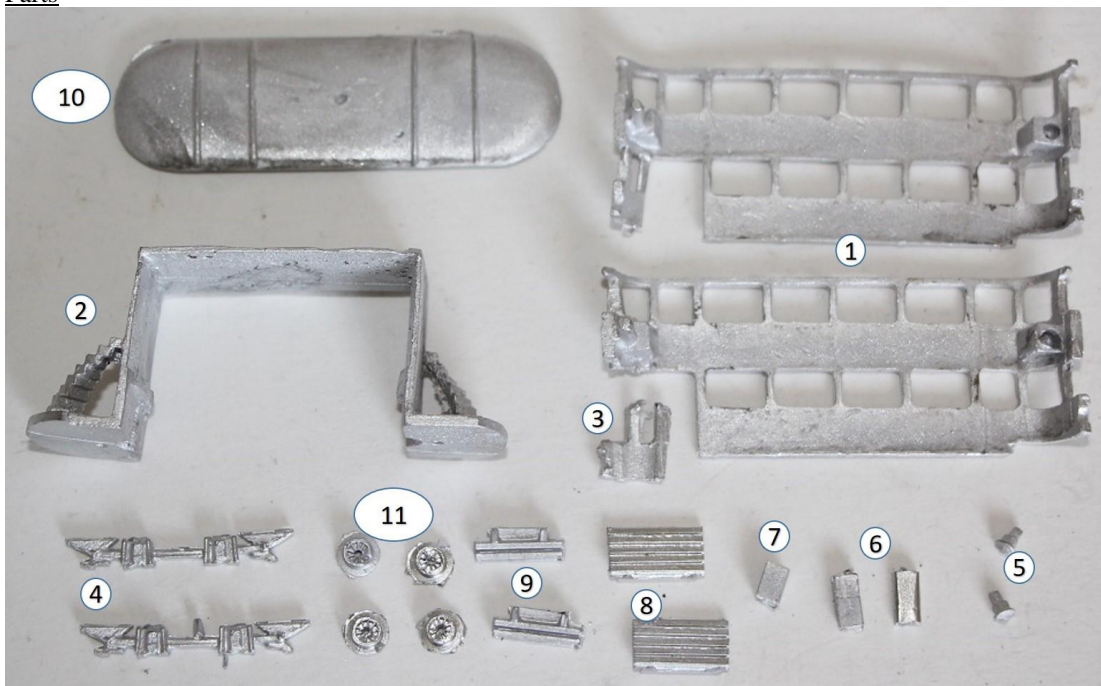

1. Side	x2
2. Interior	x1
3. Side additional piece	x1 or 2
4. Trucksides	x2
5. Headlamp	x2
6. Controller	x2
7. Resistance box	x1
8. Lifetray	x2
9. Lifeguard	x2
10. Roof	x1
11. Wheels	x4

Build Steps


1. Place the two sides round the interior and make sure that the edges fit to the platforms properly, then fix all together. Join the ends together leaving the hole in the centre for the headlamp. Fit the additional side pieces in place to complete the body.



2. Fix the headlamps into the hole in the centre of the front.



3. Fit the roof unless you wish to paint and glaze the interior first.

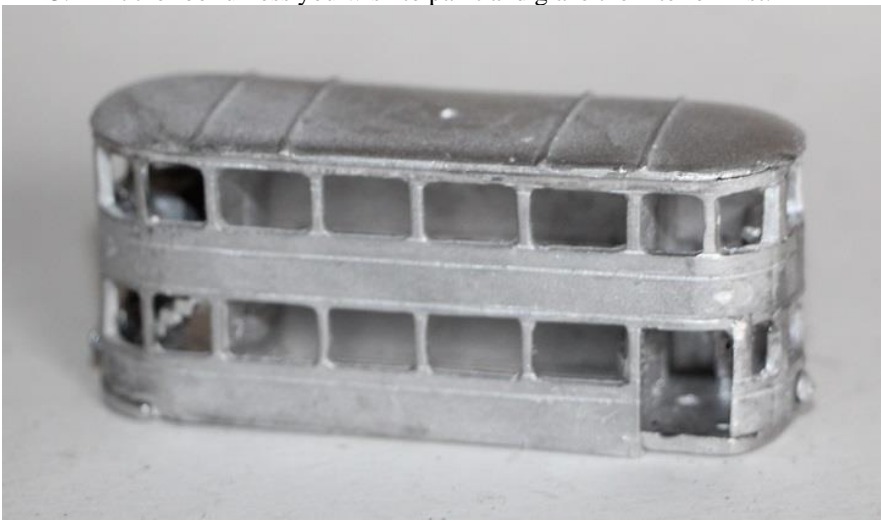

4. Fix the controllers to the inside of dash panels to the left of the headlamp.
5. The resistance box goes under the stairs next to the lower bulkhead, grill facing out.
6. Now turn the model upside down to fix the trucksides mid-way along the sides. Fix the lifeguards to front/rear edges. Fit life tray just in front of the trucksides and trucksides to the edges of the base

