


KW Trams

KW 058a Liverpool Marks

Parts

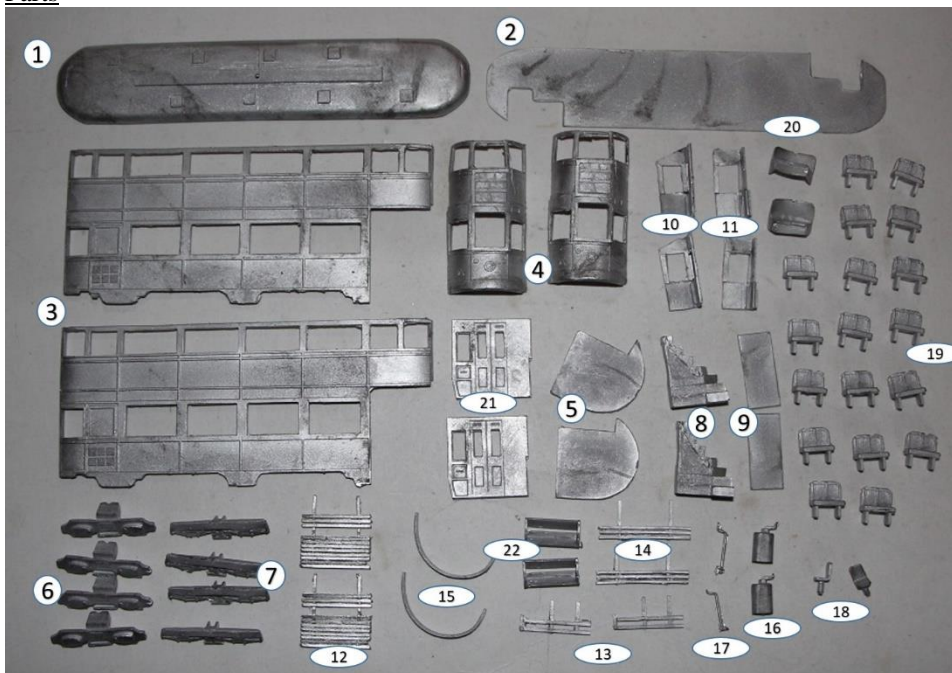

1.	Roof	x1
2.	Floor	x1
3.	Side	x2
4.	End	x2
5.	Platform	x2
6.	Bogie side Heavyweight	x4
7.	Bogie side Lightweight	x4
8.	Stairs	x2
9.	Stair sides	x2
10.	Upper stair partition	x2
11.	Upper stair partition 2	x2
12.	Lifetray	x2
13.	Side lifeguard	x2
14.	Lifeguard	x2
15.	Bumper	x2
16.	Controller	x2
17.	Handbrake	x2
18.	Driver seat	x2
19.	Upper deck seats	x18
20.	Upper deck end seats	x2
21.	Bulkhead	x2
22.	Step	x2

Build Steps


1. Fit one end to one side, I used a set square to make sure that they were at the right angle. Repeat for the second end and side.




2. Trim the upper deck floor to fit, and fix to one end / side. You may need to gently bend the body side to get a good fit.



3. Fit the other end and side to make a complete car body.

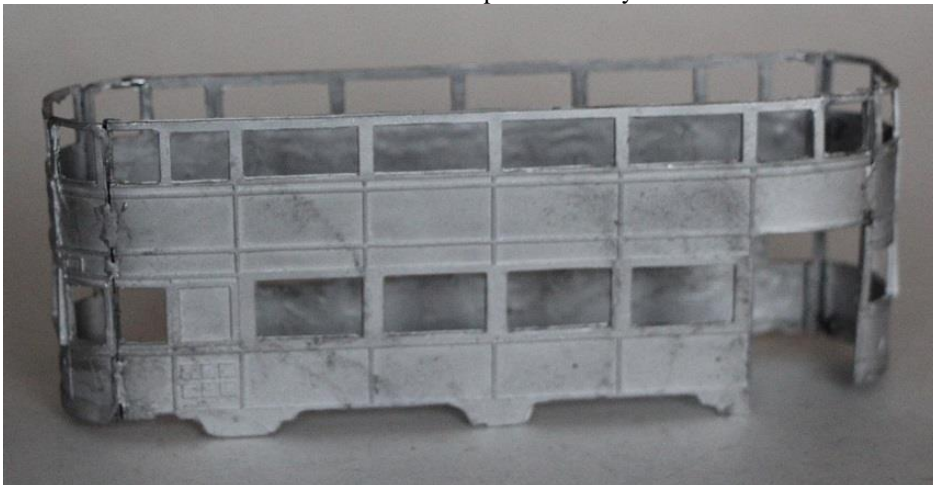


4. Fit the upper deck stair partitions round the stair hole. You may need to adjust the top so that the roof fits properly.

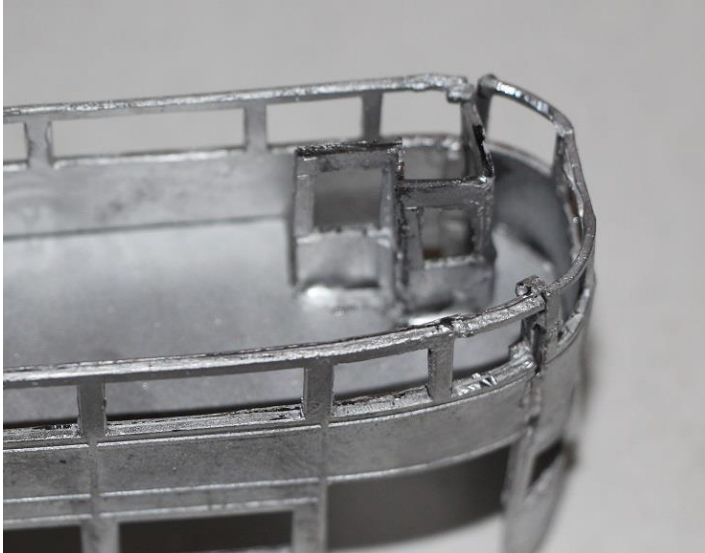


5. Fit the stair panel to the side of the stairs, but don't fit to the model until it has been painted and glazed.



6. Fit the bulkhead between the two sides, flush with the beading by the entrance and flush to the bottom of the upper deck floor.
7. File the platform so that it fits and then fix in place.

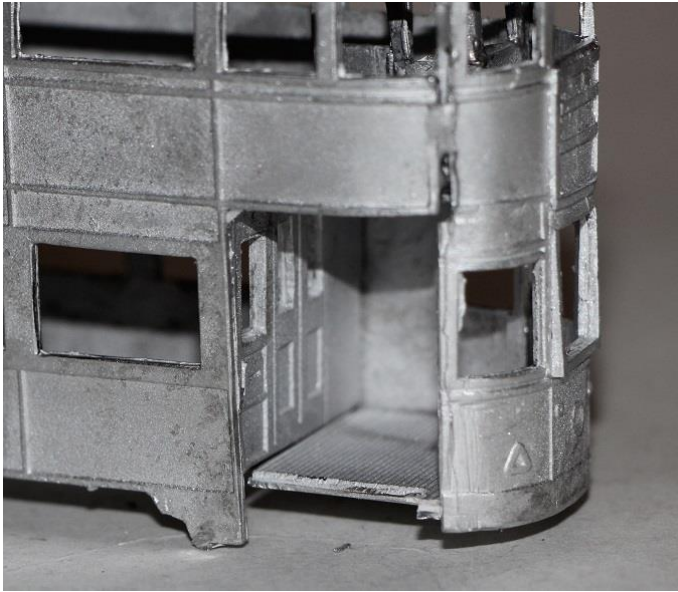

8. Fit the step, lifetray, side and end lifeguards under each platform
9. Fit the bumper flush to the bottom edge of the car end.

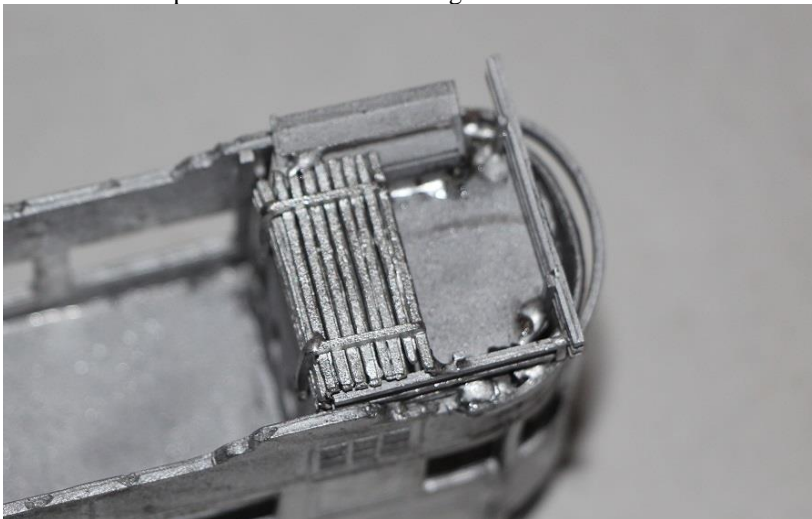

10. Fit the roof once the interior has been painted, glazed and the seats fitted.

