


KW Trams

KW 059b Edinburgh Standard Enclosed later Cars


Parts

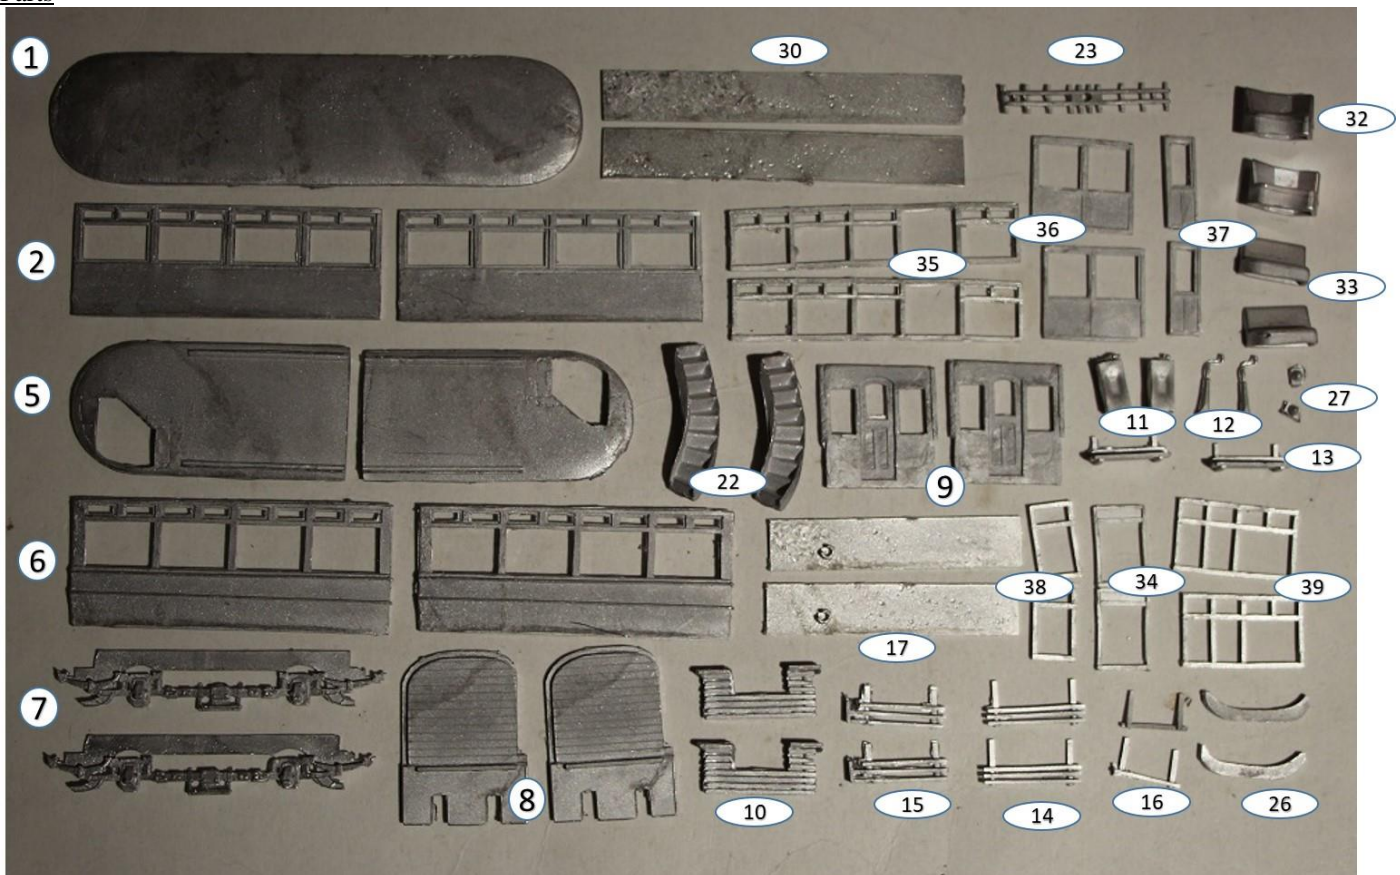


1. Roof	x1
2. Upper side	x2
5. Floor	x2
6. Lower side	x2
7. Truck side - EMB	x2
8. Platform	x2
9. Lower bulkhead	x2
10. Lifetray	x2
11. Controller	x2
12. Handbrake	x2
13. Step	x2
14. Front lifeguards	x2
15. Side lifeguards	x2
16. Step lifeguards	x2
17. Dash with headlamp	x2
22. Stairs	x2
23. Trolley plank	x1
26. Bumper	x2
27. Bullseye light	x2
29. Seating strip	x1
30. Enclosed balcony ends	x2
31. Upper vestibules	x2
32. Curved end seats	x2
33. Straight end seats	x2
34. Tall driver windcreens	x2
35. Later upper vestibule	x2
36. Upper partition	x2
37. Upper door	x2
38. Later offside driver vestibule	x2
39. Later nearside driver vestibule	x2

Build Steps


1. Attach the truck sides to body sides ensuring exact centrality.

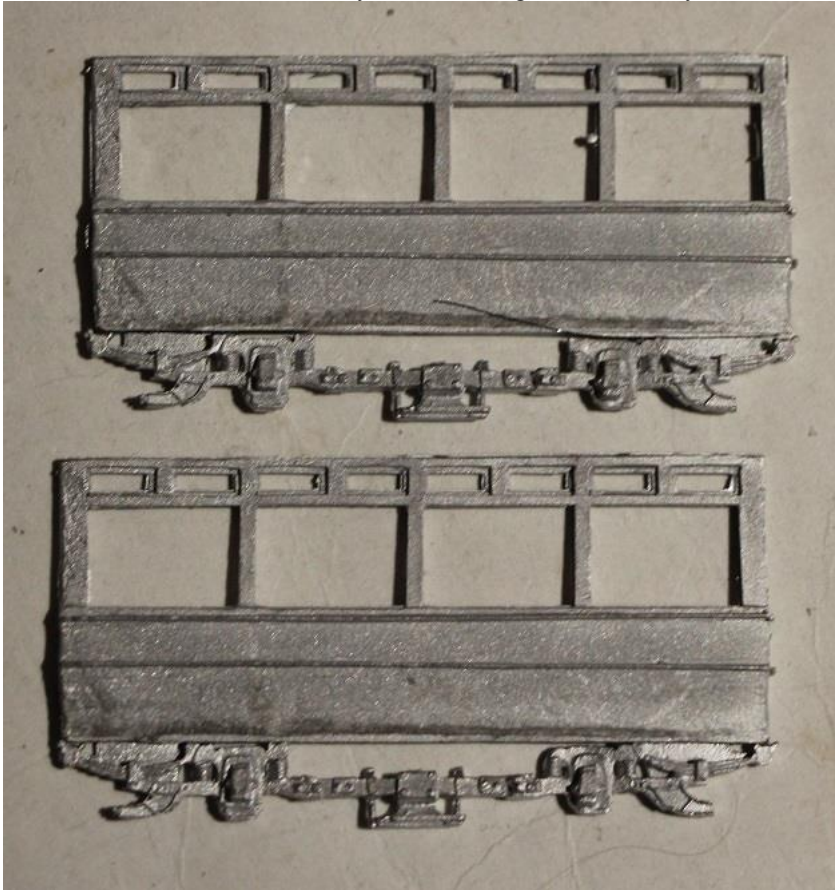


2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

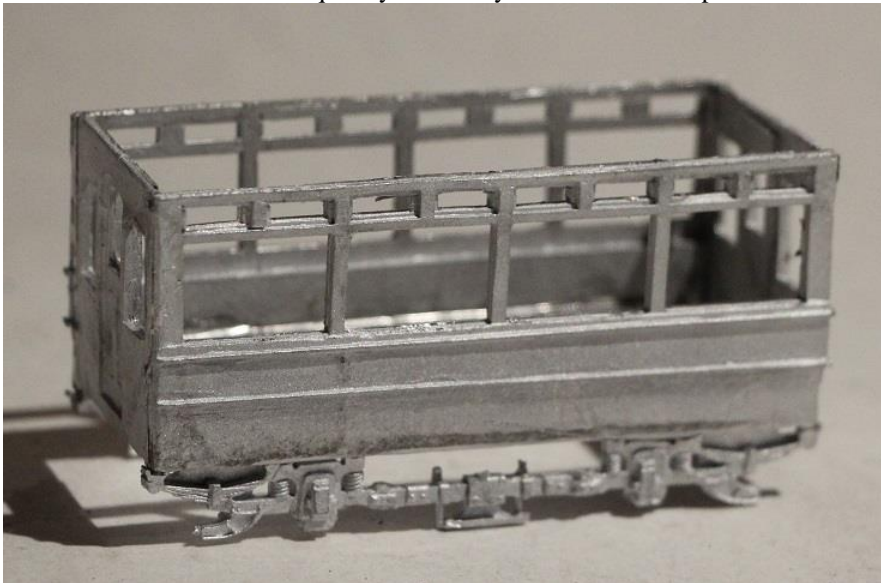

3. With model inverted, attach platforms to bottom edges of bulkheads with the rib inside the car saloon. You may need to trim the sides of the platform to make it fit inside the tram body.
4. Bend the dashes to match the shape of the platform and cut to length so that they fit to the edge of the saloon, then fix in place.

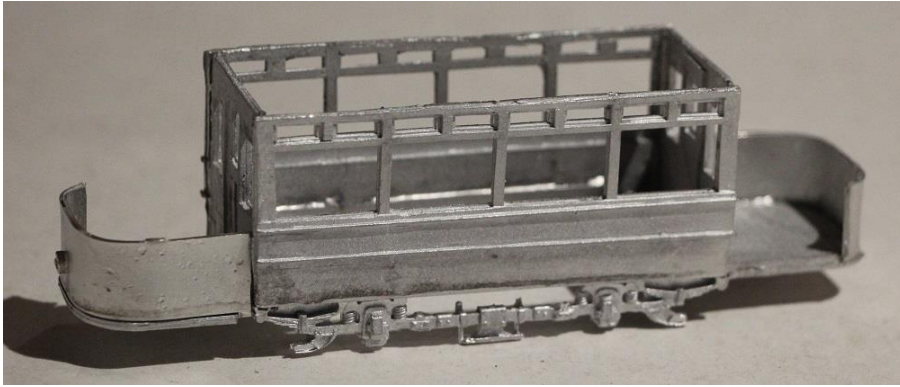

5. 5. Fit the vestibules and windscreens. Start by fitting the windscreen centrally to the top of the dash – note, this is taller than the vestibules. Take the nearside vestibule and remove the left hand vertical bar. Then bend the vestibule to fit. Fit the bullseye light in the top left window of the offside vestibule. Finally, remove the right hand vertical bar from the offside and bend that to fit.

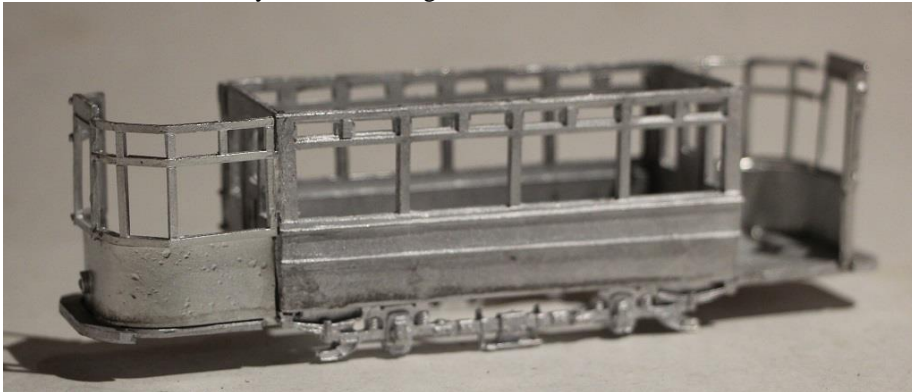

6. Fit the upper deck floor. Cut the end of the floor so that it fits round the windscreen. If necessary, remove the upper floor ribs so that it fits properly on the lower body.




7. Fix the upper sides to the floor.
8. Bend the upper deck ends to match the shape of the end of the floor and fit.
9. Bend the upper vestibule to fit on top of the upper deck ends.



10. Fit the upper partitions and doors.

11. With model inverted, fit the platform steps. Fit the front lifeguards then the side lifeguards. Then fit the step lifeguard behind the platform step.

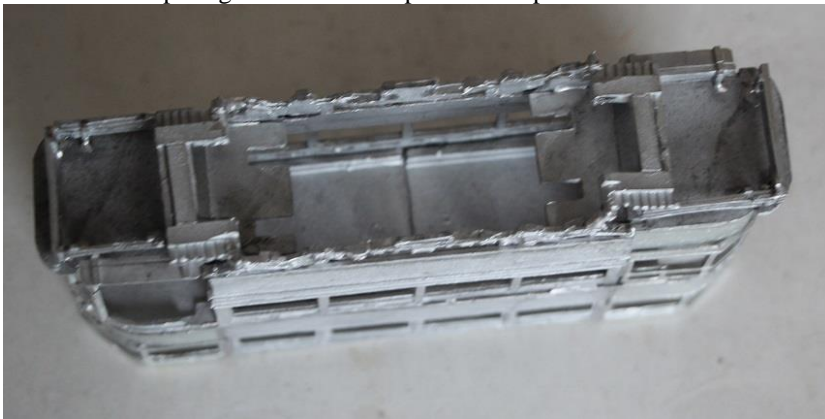

12. Fit the trolley plank centrally to the roof, but do not attach the roof to the rest of the model until you have painted and glazed the interior.

