


KW Trams

KW 105 Southampton balcony car.


Parts

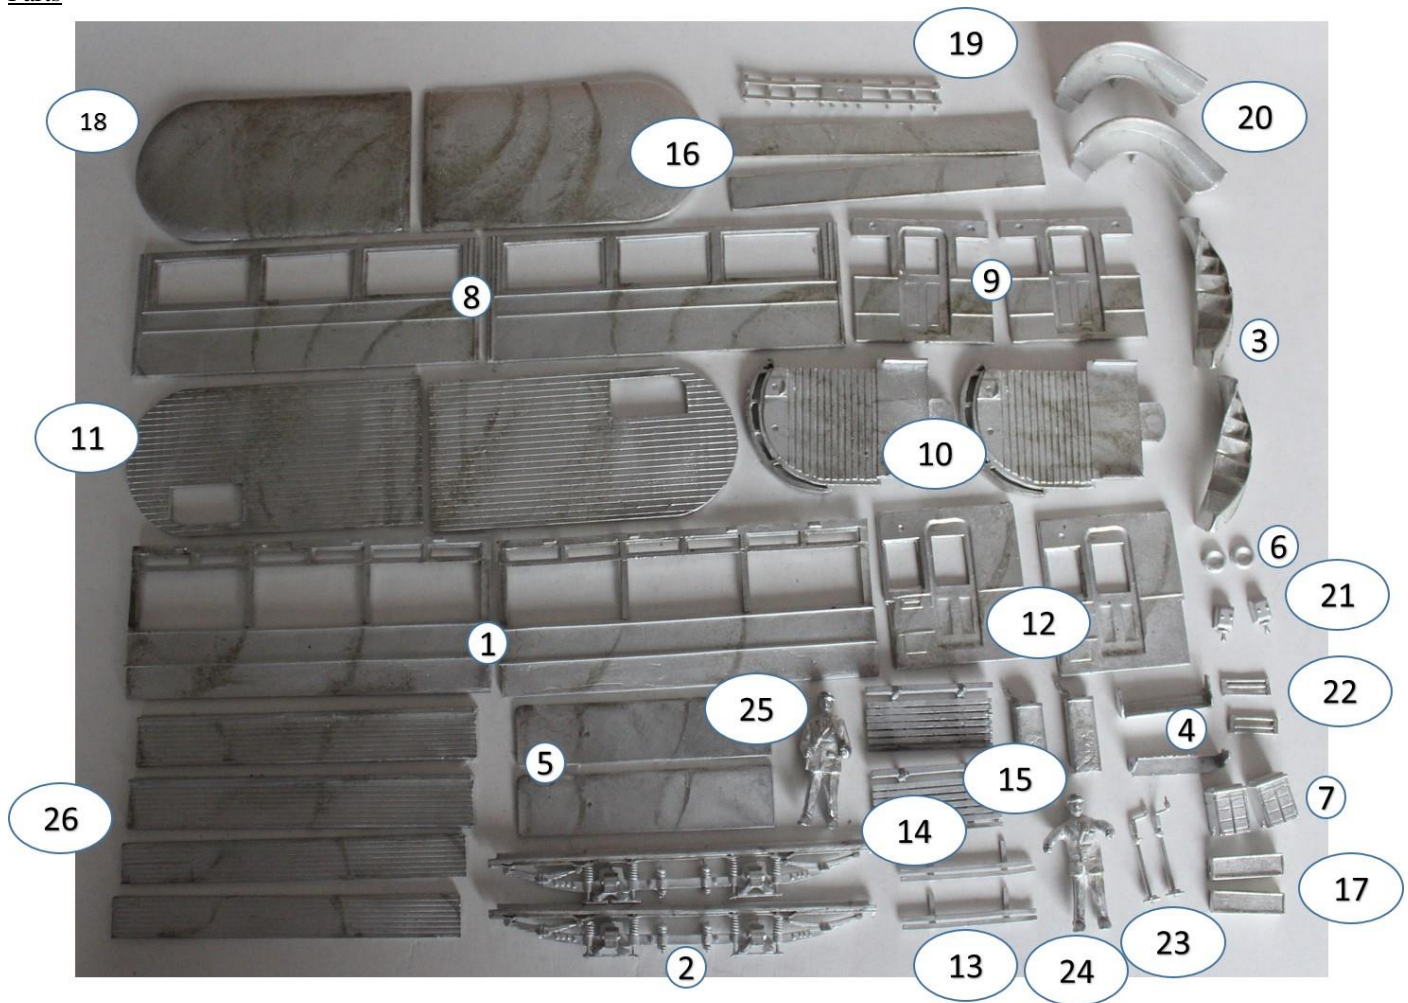


1. Tram side 3 window	x2
2. Truck side	x2
3. Stairs	x2
4. Step	x2
5. Dash panel	x2
6. Headlamp	x2
7. Resistance box	x2
8. Upper sides	x2
9. Upper bulkheads	x2
10. Platform	x2
11. Upper floor	x1
12. Lower deck bulkhead	x2
13. Life guard	x2
14. Life tray	x2
15. Controller	x2
16. Balcony ends	x2
17. Destination box	x2
18. Roof	x2
19. Trolley plank	x1
20. Balcony seats	x2
21. Canopy switch	x2
22. Bulkhead window bars	x2
23. Handbrakes	x2
24. Driver	x1
25. Conductor	x1
26. Lower deck seat backs & uprights	x4

Build Steps


1. Attach truck sides to body sides ensuring exact centrality.

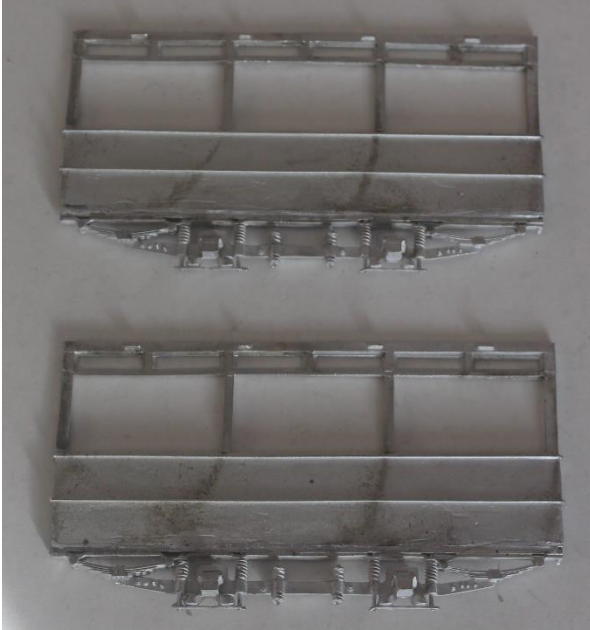


2. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

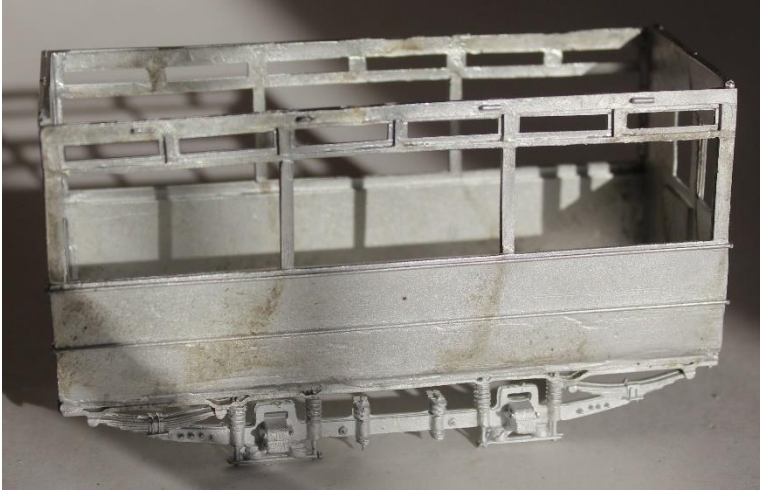


3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
4. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform. Fit the headlamps centrally to the dash.

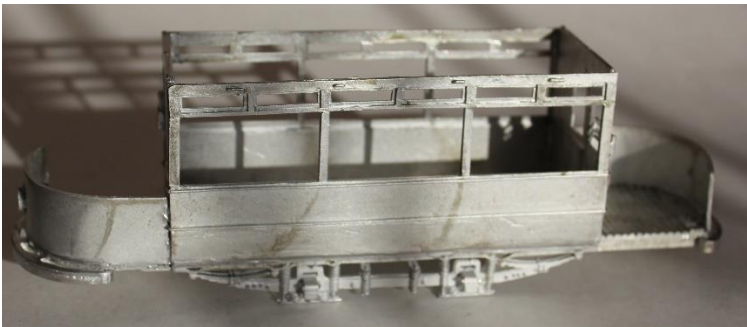


5. Fix the ceiling/upper deck floor pieces together then fit

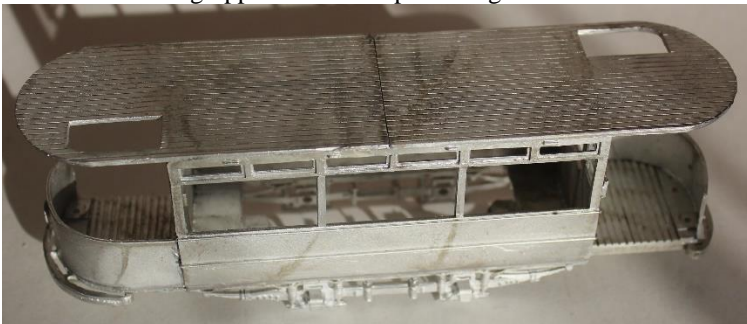

6. Build the upper deck sides & bulkheads to form a box.

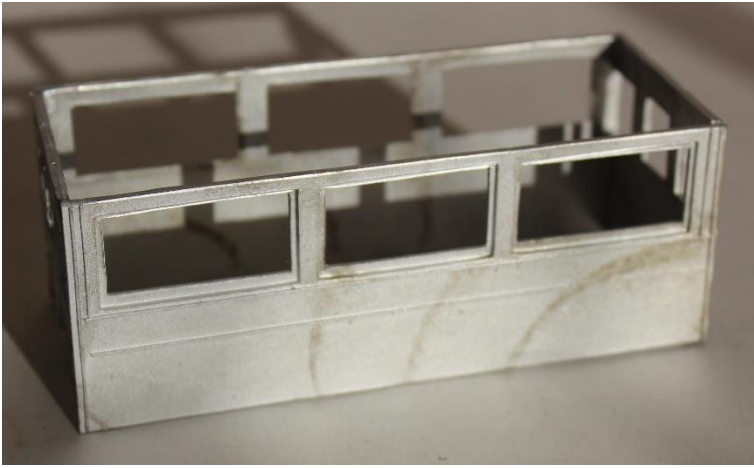


7. Fix upper deck on the upper deck floor

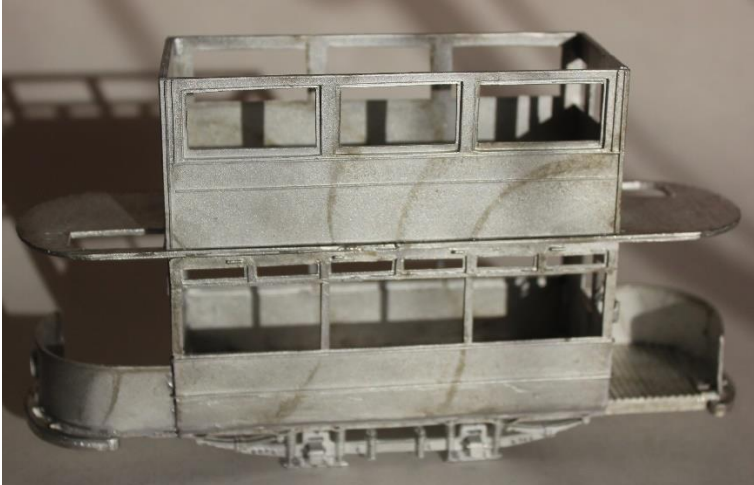

8. Carefully bend the balcony ends and trim to fit.



9. Turn model over and fit the steps, fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

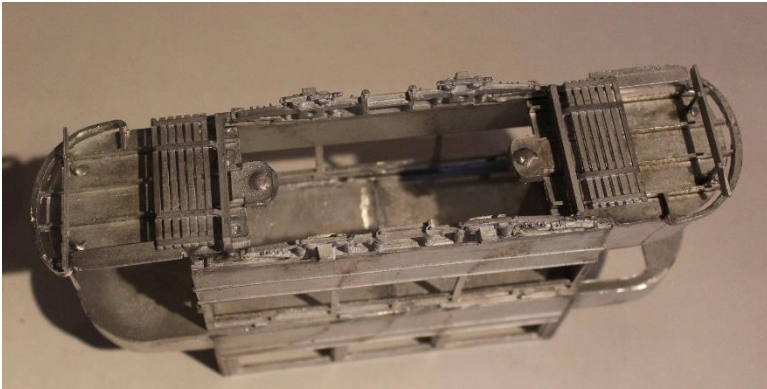

10. Fit the stairs (unless you wish to paint them first).

