


KW Trams

ME18U09 dummy bogie

Parts

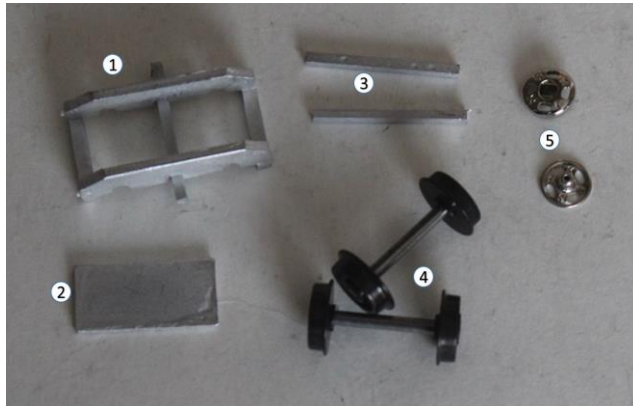

1. Base chassis	x1
2. Bogie top	x1
3. Retaining bars	x2
4. Axles & wheels	x2
5. Press stud	x1

Build Steps


1. Put the base chassis upside down on the workbench and insert the two axles.
2. Fix the two retaining bars into the space in the chassis to hold the axles in place.



3. Fix the male half of the press stud into the centre of the bogie top.



4. Fit the bogie top flush to the top of the base chassis.

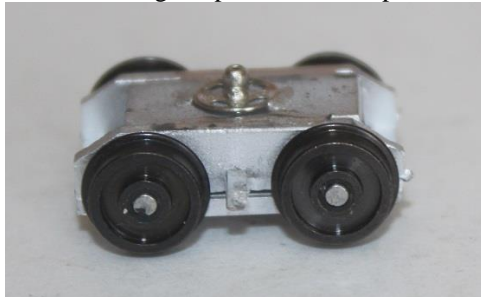

5. Fix the female half of the press stud into the correct position under the floor of your model and clip the bogie in place.