KW Trams

KW 006a Brush 3 window 6 vent open top car.

Parts

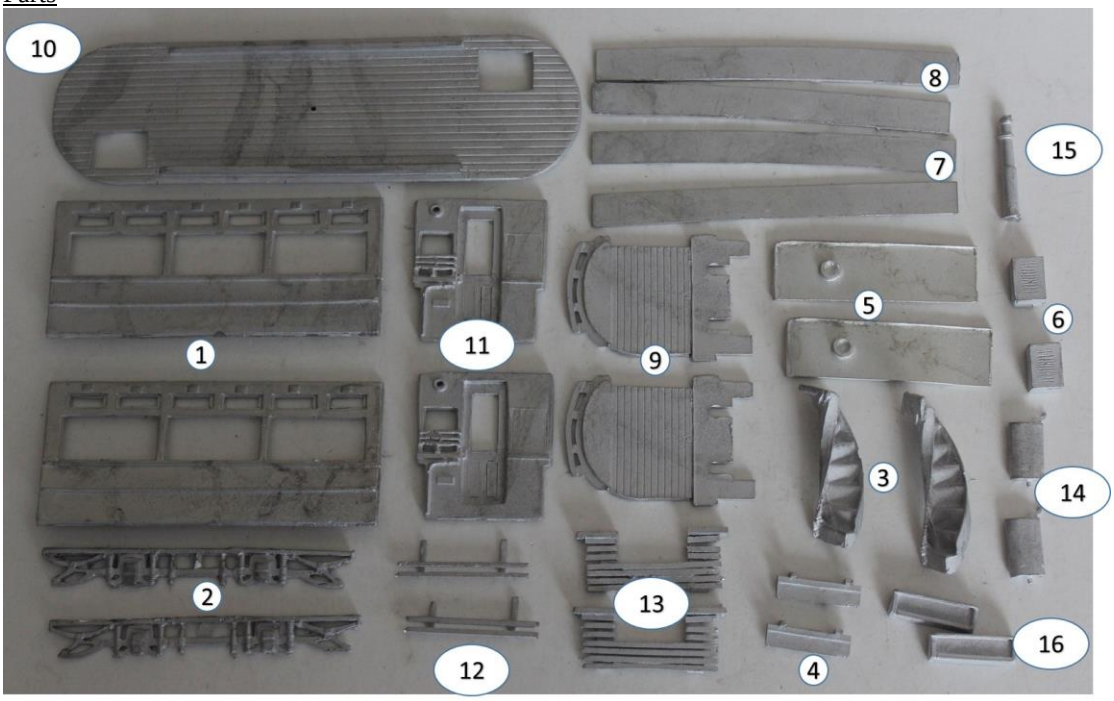

1. Tram side 3 window x2
2. Truck side x2
3. Stairs x2
4. Step x2
5. Dash panel x2
6. Resistance box x2
7. Upper decency panel sides x2
8. Upper decency panel ends x2
9. Platform x2
10. Upper floor x1
11. Lower deck bulkhead x2
12. Life guard x2
13. Life tray x2
14. Controller x2
15. Trolley mast x1
16. Destination box x2

Build Steps

1. Fix bulk heads to sides squarely and marry subassemblies to produce a box effect.

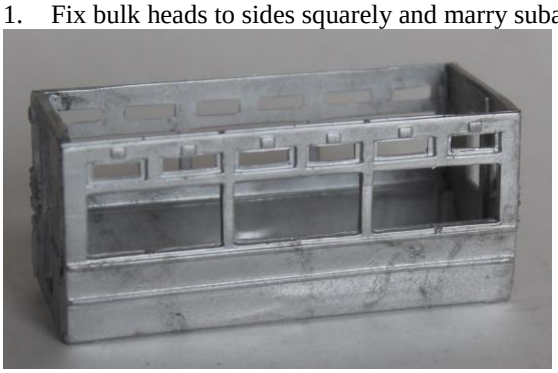

2. Attach truck sides to body sides ensuring exact centrality.
3. With model inverted, attach platforms to bottom edges of bulkheads; ensuring the lip is within the body and not on the platform.
4. Carefully bend the dash panels to fit the curve of the platform, trim to length and fit to platform.

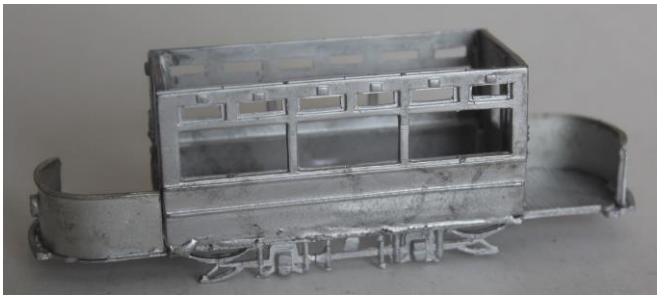

5. Fix the ceiling/upper deck floor piece

6. Attach upper deck sides and carefully bend the ends and trim to fit.

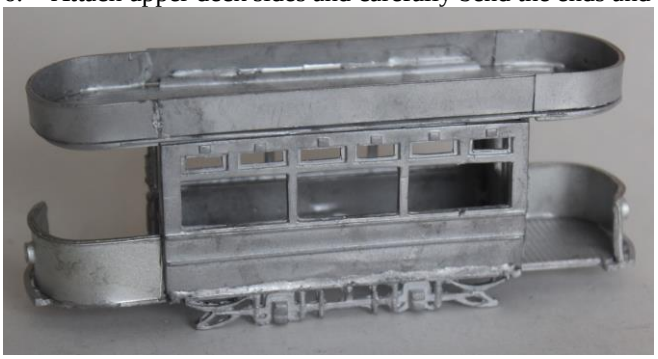

7. Turn model over and fix the life guards under the front panels and the life trays attached to the front edge of the truck sides so they do not interfere with the mechanism.

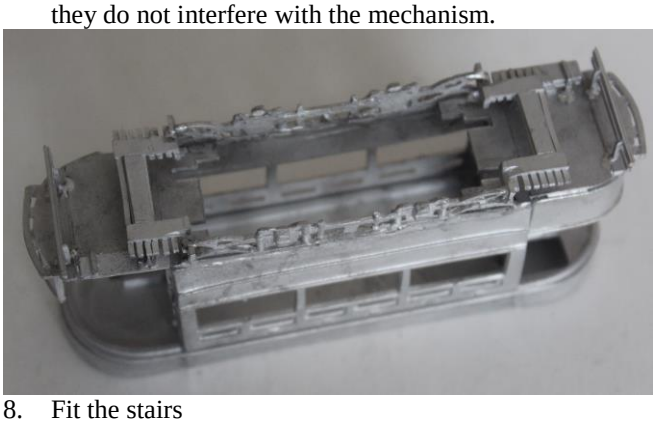
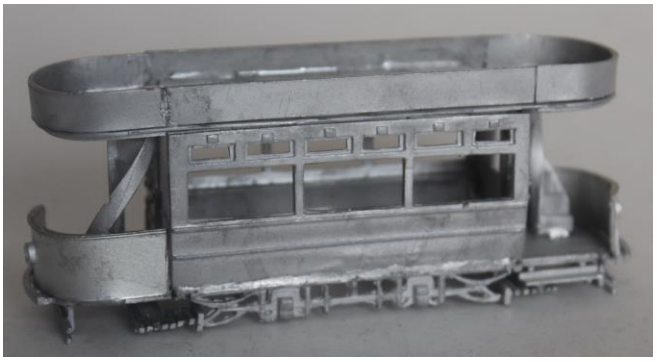
8. Fit the stairs